


Trainings ▾


Maintenance Check

With the engine turned off, check that neither the top nor bottom tensioner arm stop is touching the cast boss on the tensioner body. If either of the stops is touching a boss, the alternator belt **must** be replaced. Verify the correct belt part number is being used if either condition exists.

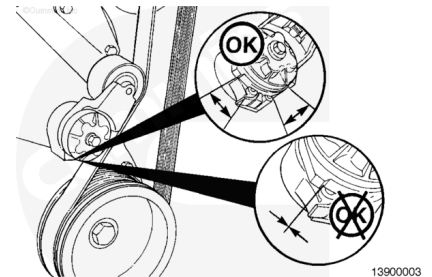

⚠ WARNING ⚠

When using a steam cleaner, wear safety glasses or a face shield, as well as protective clothing. Hot steam can cause serious personal injury.

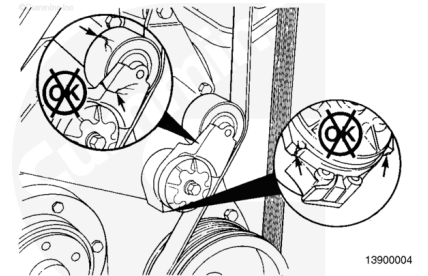


⚠ WARNING ⚠

Wear safety glasses or a face shield, as well as protective clothing, to prevent personal injury when using a steam cleaner or high-pressure water.


Check the tensioner pulley and body for cracks. If any cracks are noticed, the tensioner **must** be replaced. Refer to a Cummins® Authorized Repair Facility.

Check the tensioner for dirt buildup. If this condition exists, the tensioner **must** be removed and steam-cleaned.

With the cooling fan belt removed, check that the bottom tensioner arm stop is in contact with the bottom tensioner arm stop boss on the tensioner body. If these two are **not** touching, the tensioner **must** be replaced.

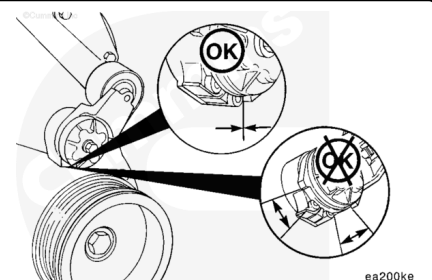

Inspect the tensioner for evidence of the pivoting tensioner arm contacting the stationary circular base. If there is evidence of these two areas touching, the pivot tube bushing has failed and the tensioner **must** be replaced.

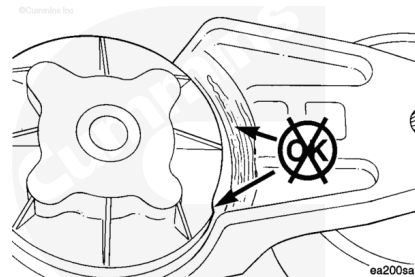


The worn tensioner that has play in it or a belt that “walks” off its pulley possibly indicates pulley misalignment.

Maximum pulley misalignment is 3 degrees.

This measurement can be taken with a straightedge and an inclinometer.


Install the belt.

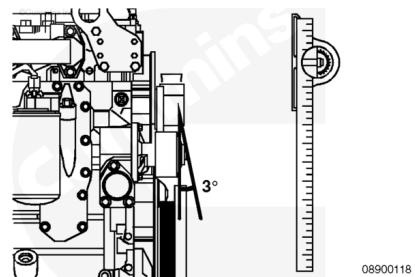

Remove


Remove the belt tensioner mounting capscrew.

Remove the belt tensioner from the bracket.

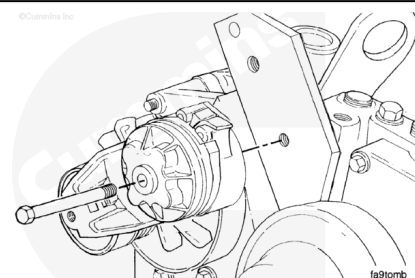

Inspect for Reuse

Inspect the tensioner bushing between the arm and the spring case.

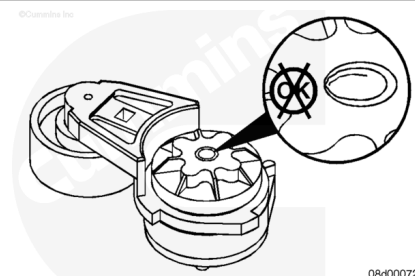


Install

Install the belt tensioner.

Install and tighten the belt tensioner capscrew.

Torque Value: 43 n•m [32 ft-lb]

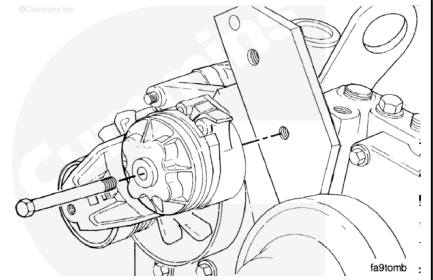

Lift and hold the tensioner. Install the drive belt and release the tensioner.

Service Tip:

If difficulty is experienced installing the drive belt, for example, the belt seems too short, position the belt over the grooved pulleys first; then, while holding the tensioner up, slide the belt over the water pump pulley.

