

## Trainings ▾

### General Information

#### Remote Mounted


Remote oil filters are used when access to the lubricating oil filter head is restricted. A filter head adapter is mounted in place of the lubricating oil filter so oil supply and return lines can be mounted between the engine lubricating oil filter head and the remote mounted lubricating oil filter head.

©Cummins Inc.

### Preparatory Steps

#### Remote Mounted

- Clean the area around the lubricating oil filter head adapter.

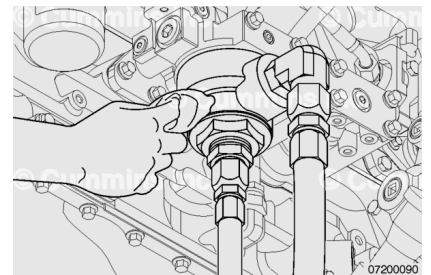


07200090

### Remove


#### Remote Mounted

Remove the lubricating oil filter lines from the filter head adapter.

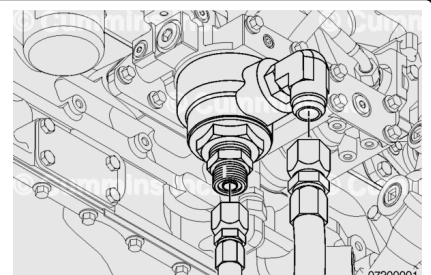


07200091

Remove the lubricating oil filter line fittings from the filter head adapter.

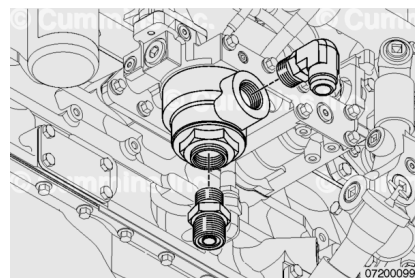

Remove the retaining nut, oil filter head adapter cover, and oil filter head adapter from the lubricating oil filter head.

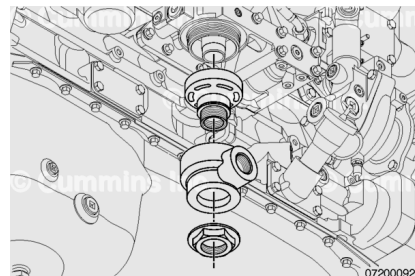


## Clean and Inspect for Reuse

### Remote Mounted


Clean the gasket surface of the filter head.

The o-ring can stick on the filter head. Make sure it is removed.

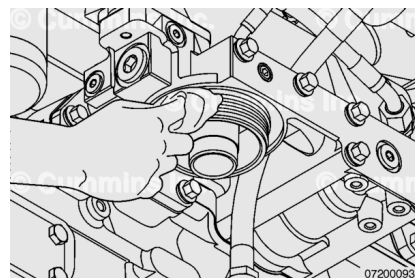

### **⚠ WARNING ⚠**

**When using solvents, acids, or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to reduce the possibility of personal injury.**

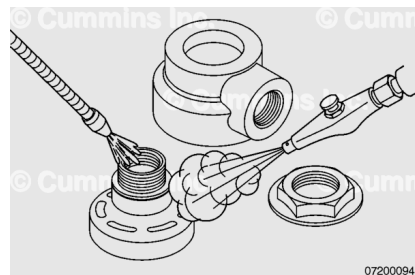

### **⚠ WARNING ⚠**


**Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause personal injury.**

Clean the lubricating oil filter head adapter components with solvent.

Dry with compressed air.

Inspect the filter head adapter components for damage.

Replace any damaged parts.

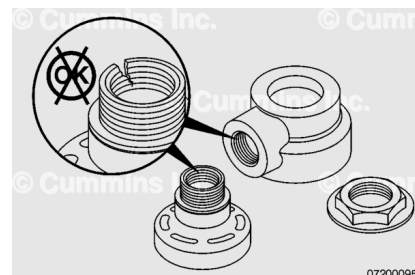


## Install


### Remote Mounted

Lubricate the o-rings with Lubriplate® multi-purpose lubricant.

Place the o-rings into the filter head adapter.

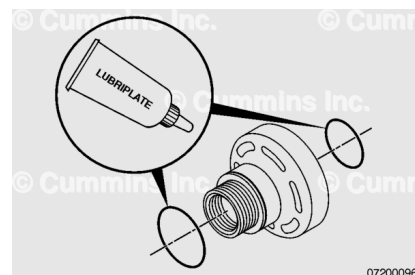


Turn the lubricating oil filter head adapter onto the lubricating oil filter head until it is snug.

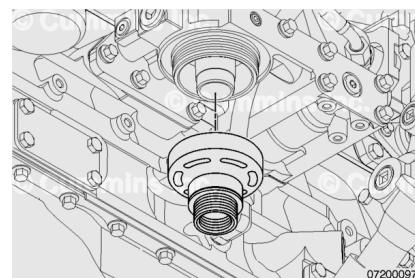

Apply a light film of clean engine oil to the flat o-ring before installation.

Place the flat o-ring into the groove in the lubricating oil filter head adapter cover.

Position the cover over the adapter and turn the nut onto the adapter.

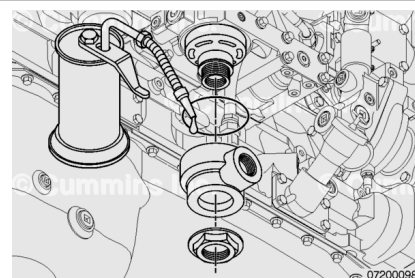


Orient the cover so the lubricating oil supply and return lines can be installed, then torque the nut.

**Torque Value:** 203 n•m [150 ft-lb]

Install the lubricating oil line fittings to the cover.


Tighten the fittings.

|                  |         |             |
|------------------|---------|-------------|
| Elbow fitting    | 163 n.m | [120 ft-lb] |
| Straight fitting | 176 n.m | [130 ft-lb] |

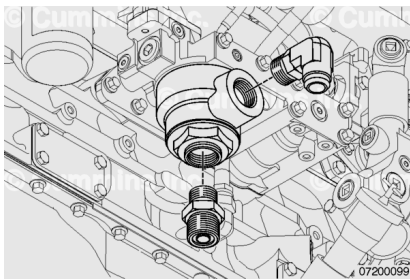

Install the lubricating oil supply and return lines.

|                      |         |            |
|----------------------|---------|------------|
| Larger hose (outlet) | 125 n.m | [92 ft-lb] |
| Smaller hose (inlet) | 100 n.m | [74 ft-lb] |

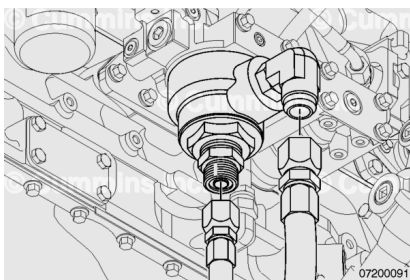

## Finishing Steps

### Remote Mounted

#### ⚠ CAUTION ⚠

**Engine oil pressure must be indicated on the gauge within 15 seconds after starting. If oil pressure is not registered within 15 seconds, shut off the engine immediately to avoid engine damage. Confirm the correct oil level in the oil pan.**

- Operate the engine at idle speed for 3 minutes to inspect for leaks at the filter head adapter.

