


Trainings ▾


Remove

Remove the two mounting capscrews and hydraulic pump, if equipped, or the cover plate.

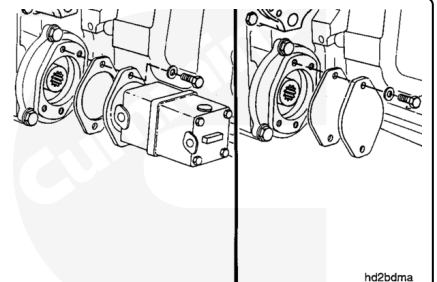

Remove the three pump drive mounting capscrews.


Install a slide hammer and engine baring tool, Part Number 3824270, to the hydraulic drive adapter. Use two M10-1.50 x 30 capscrews, Part Number 3335003, for Society of Automotive Engineers (SAE) A drives, or two M12-1.75 x 40 capscrews, Part Number 3018671, for SAE B drives.

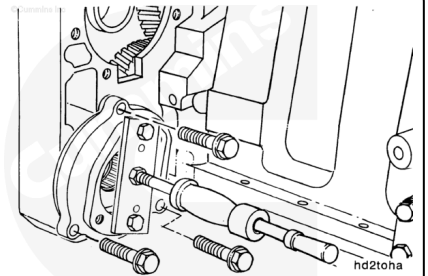


⚠ CAUTION ⚠

Do not allow the hydraulic drive gear to slide out of the adapter or the gear housing during removal. Damage to the gear will result.

Remove the hydraulic drive adapter, o-ring, and hydraulic drive gear.

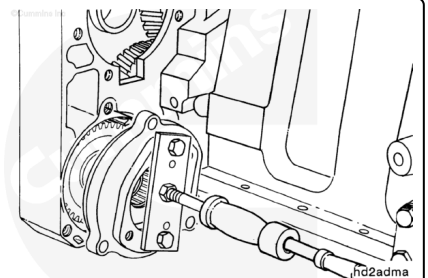


Use gear housing bearing install/remove tool, Part Number 3823774, to remove the needle bearing from the gear housing.

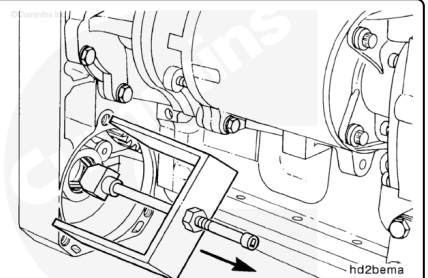

Remove the needle bearing from the hydraulic pump adapter.

©Cummins Inc.

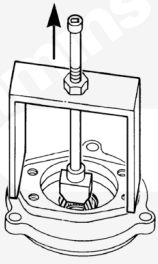

hd2bemb

Last Modified: 05-Apr-2019
