


Trainings ▾

Remove

Automotive With CM871

⚠ WARNING ⚠

Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause personal injury.

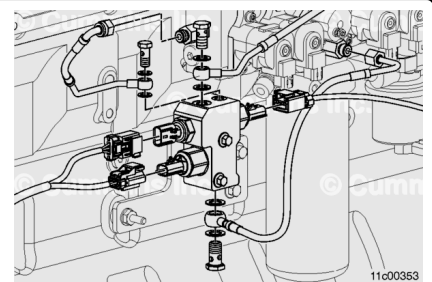


Fuel Shutoff Manifold - Make sure the area around the fuel shutoff manifold is clear of debris.


Use compressed air to clean the area and remove any loose dirt particles.

Remove the two mounting capscrews.

Remove the fuel shutoff manifold.

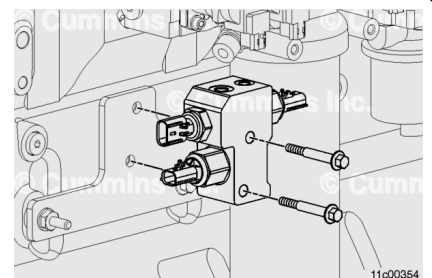


Remove the aftertreatment fuel shutoff valve (1), aftertreatment fuel drain valve (2), and aftertreatment pressure sensor (3) with a 1-1/8 inch open end wrench.

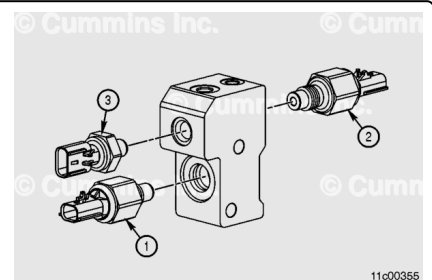

Automotive with CM876

⚠ WARNING ⚠

Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause personal injury.

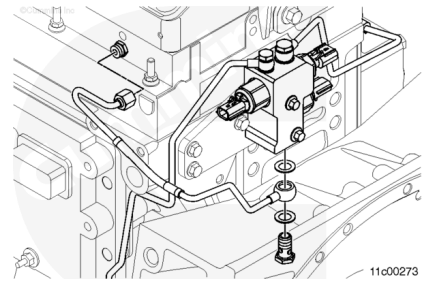


Fuel Shutoff Manifold - Make sure the area around the fuel shutoff manifold is clear of debris.

Use compressed air to clean the area and remove any loose dirt particles.

Remove the two mounting capscrews.

Remove the fuel shutoff manifold.

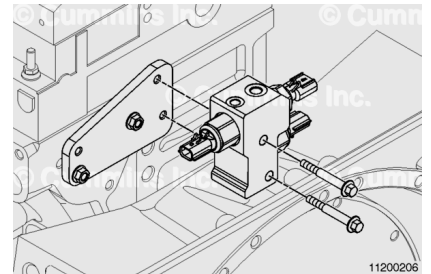

Remove the aftertreatment fuel shutoff valve (1), aftertreatment fuel drain valve (2), and aftertreatment pressure sensor (3) with a 1-1/8 inch open end wrench.

