

Trainings ▾

Select Service Tools

Recommended Cummins® Service Tools

- No recommended Cummins® service tools required

Additional Service Items

- No additional service items required.


General Information

The crankcase breather system is a closed system. Two types of crankcase breathers are available.

For the electric drive crankcase breather, the system contains an external motor and a replaceable coalescer breather filter. The crankcase ventilation filter requires periodic replacement for maintenance.

For the air drive crankcase breather, the system contains a boost air tube and an unreplaceable breather filter.

This procedure **only** contains the method to remove and install the electric crankcase breather filter.

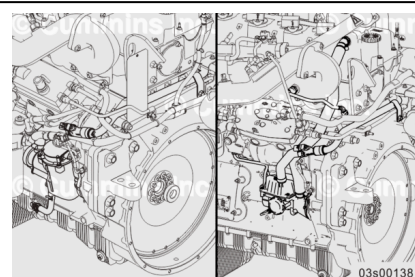

Preparatory Steps

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

- Disconnect the batteries. See equipment manufacturer service information.

- Disconnect the Closed Crankcase Ventilation (CCV) hoses. Refer to Procedure 003-024 in Section 3. (</qs3/pubsys2/xml/en/procedures/1016/1016-003-024-tr.html>)
- Disconnect the CCV system pressure sensor.
- Disconnect the crankcase breather motor from the wiring harness.
- Remove the crankcase breather. Refer to Procedure 003-001 in Section 3. (</qs3/pubsys2/xml/en/procedures/1016/1016-003-001.html>)


Remove

⚠ CAUTION ⚠


Do not use pneumatic tools to remove the breather motor capscrews. Damage to the housing can result.

Remove the crankcase breather motor capscrews.

Remove the crankcase breather motor and filter.

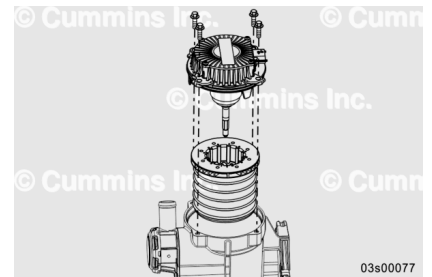

Inspect the electrical connector. Replace the motor assembly if any damage is found.

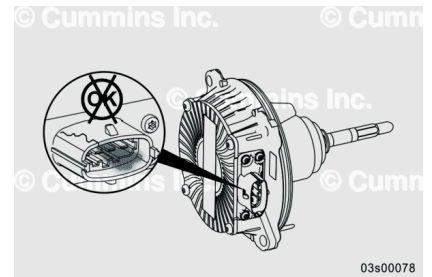


Install

Lubricate the crankcase breather motor o-ring with engine oil.

Install the crankcase breather motor, o-ring, filter, and capscrews.

Tighten the capscrews in the pattern shown.

Torque Value: 8 n•m [71 in-lb]

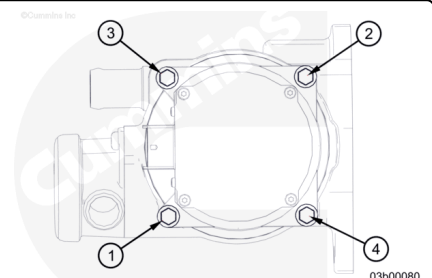

Finishing Steps

WARNING

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

- Install the crankcase breather. Refer to Procedure 003-001 in Section 3.
(/qs3/pubsys2/xml/en/procedures/1016/1016-003-001.html)
- Connect the CCV system pressure sensor.
- Connect the CCV hose. Refer to Procedure 003-024 in Section 3.
(/qs3/pubsys2/xml/en/procedures/1016/1016-003-024-tr.html)
- Connect the crankcase breather motor to the wiring harness.
- Connect the batteries. See equipment manufacturer service information.
- Operate the engine. Check for leaks.