

Trainings ▾

Select Service Tools

Recommended Cummins® Service Tools


- No recommended Cummins® service tools required

Additional Service Items

- No additional service items required.

General Information

Turbocharger wastegate controller is located on the alternator bracket or the intake manifold.

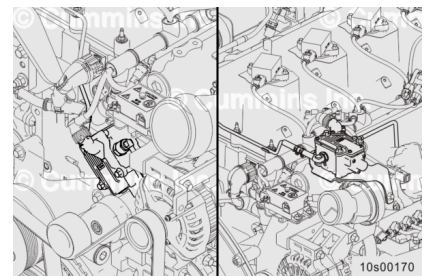

Preparatory Steps

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

- Disconnect the batteries. See equipment manufacturer service information.
- Do **not** clean the wastegate control valve with water.
- Disconnect the turbocharger actuator air line. Refer to Procedure 010-118 in Section 10. ([/qs3/pubsys2/xml/en/procedures/1016/1016-010-118.html](https://qs3/pubsys2/xml/en/procedures/1016/1016-010-118.html))


Remove

Disconnect the engine harness connector from the turbocharger wastegate controller.


Remove and discard the hose clamp connecting turbocharger wastegate controller to outlet adapter (1).

Remove the inlet air line (3) from the male union (2).


If needed, remove the outlet adapter (1) or the male union (2).
Discard the o-rings.

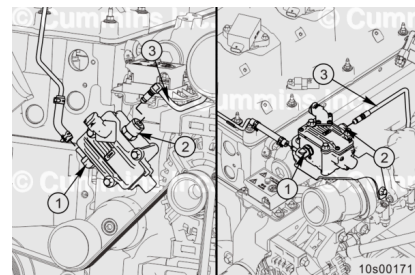

Remove the three capscrews connecting turbocharger wastegate controller to the bracket.

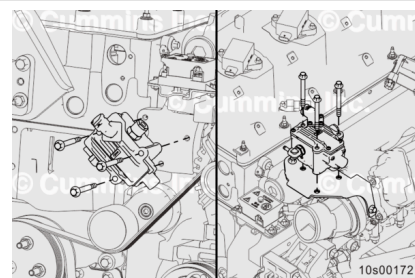


If needed, remove the bracket.

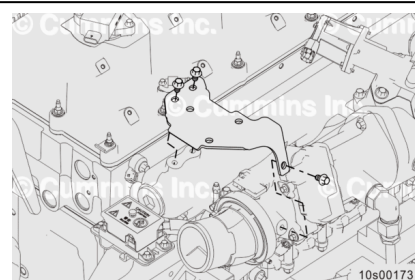

Inspect for Reuse

Inspect the turbocharger wastegate controller connector for the following:


- Connector shell broken
- Loose connector
- Bent or broken pins
- Corroded pins
- Moisture in or on the connector.

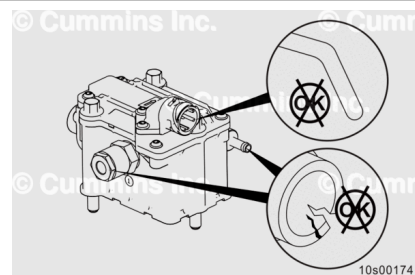

Inspect the turbocharger wastegate controller for cracks or other damage. Replace the turbocharger wastegate controller if damage is found.

Inspect the hoses and the bracket for cracks or other damage.


Replace the hoses and the bracket if damage is found.

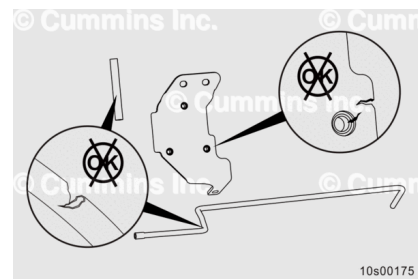

Install


If removed, install the bracket.

Torque Value: 23 n•m [204 in-lb]

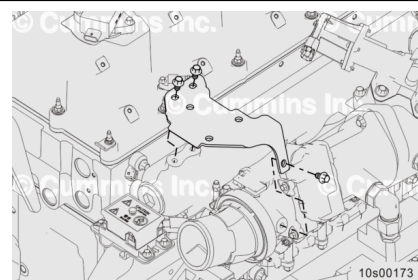

Install the three capscrews connecting wastegate controller to the bracket.

Torque Value: 18 n•m [159 in-lb]

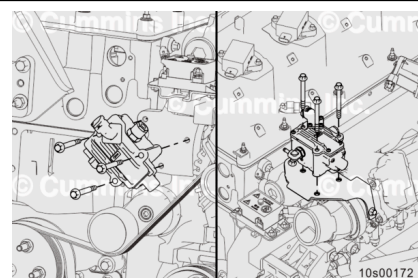

If removed, install the outlet adapter (1) with a new o-ring.

Torque Value: 24 n•m [212 in-lb]


If removed, install the male union (2) with a new o-ring.

Torque Value: 24 n•m [212 in-lb]

Install the inlet air line (3).

Install the outlet air line hose with new hose clamps.

Connect the engine harness connector to the wastegate controller.

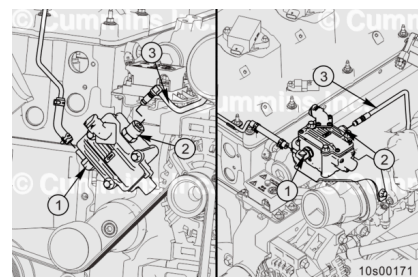

Finishing Steps

WARNING

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

- Connect the turbocharger actuator air line. Refer to Procedure 010-118 in Section 10. (</qs3/pubsys2/xml/en/procedures/1016/1016-010-118.html>)
- Connect the batteries. See equipment manufacturer service information.