

Trainings ▾

Select Service Tools

Recommended Cummins® Service Tools

- No Cummins® service tools required.

Additional Service Items

- No additional service items required.

Preparatory Steps

WARNING

Some state and federal agencies have determined that used engine oil can be carcinogenic and cause reproductive toxicity. Avoid inhalation of vapors, ingestion, and prolonged contact with used engine oil. If not reused, dispose of in accordance with local environmental regulations.

WARNING

To reduce the possibility of personal injury, avoid direct contact of hot oil with your skin.

WARNING

Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause personal injury.

CAUTION

Do not spill or drain fuel into the bilge area when disconnecting or removing fuel lines, replacing filters, and priming the fuel system. Do not drop or throw filter elements into the bilge area. The fuel and fuel filters must be disposed of in accordance with local environmental regulations.

- Drain the lubricating oil. Refer to Procedure 007-037 in Section 7.
(/qs3/pubsys2/xml/en/procedures/18/18-007-037-tr.html)
- Remove the lubricating oil pan. Refer to Procedure 007-025 in Section 7.
(/qs3/pubsys2/xml/en/procedures/18/18-007-025-tr.html)
- Remove the lubricating oil pan adapter cover. Refer to Procedure 007-027 in Section 7.
(/qs3/pubsys2/xml/en/procedures/18/18-007-027-tr.html)


Remove

Standard Suction Tube

Remove the three capscrews from P-clips, bracket, and the suction tube.

Remove the oil pan suction tube.

Remove and discard the gasket.

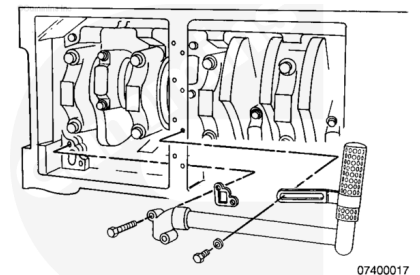


Deep Sump Suction Tube

Remove the capscrews from the P-clips, bracket, and flange connection to the engine block.

Remove the oil pan suction tube.


Remove and discard the gasket.

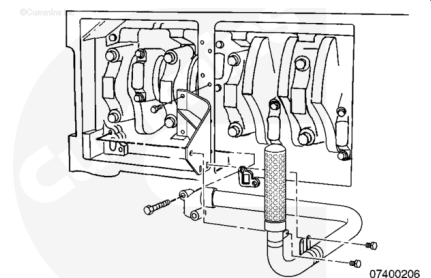

Clean and Inspect for Reuse

⚠ WARNING ⚠

When using solvents, acids, or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to reduce the possibility of personal injury.

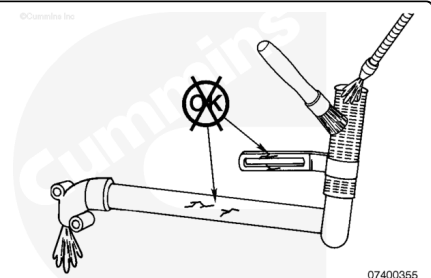

⚠ WARNING ⚠


Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause personal injury.

Clean the oil suction tube with solvent and dry with compressed air.

Inspect the oil suction tube for cracks or other damage.

If the oil suction tube is cracked or otherwise damaged, the oil suction tube must be replaced.

Use a gasket scraper to clean the gasket surface.

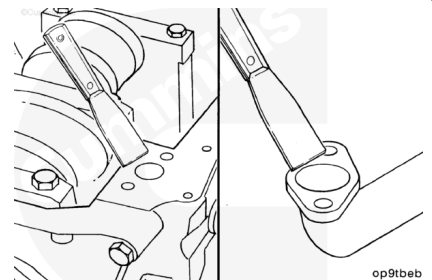

Install

Standard Suction Tube


Install the gasket, standard suction tube, bracket, and P-clip.

Tighten the two suction tube connector capscrews.

Torque Value: 61 n•m [45 ft-lb]

Tighten the bracket and P-clip capscrews.

Torque Value: 27 n•m [20 ft-lb]

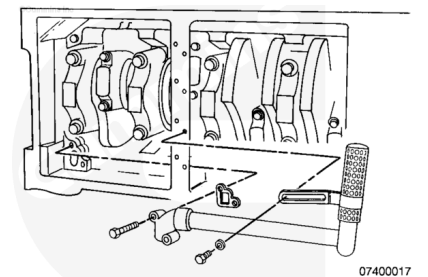

Deep Sump Suction Tube


Install the gasket, deep sump suction tube, brackets, and P-clips.

Tighten the two suction tube connector capscrews.

Torque Value: 61 n•m [45 ft-lb]

Tighten the bracket and P-clip capscrews.

Torque Value: 27 n•m [20 ft-lb]

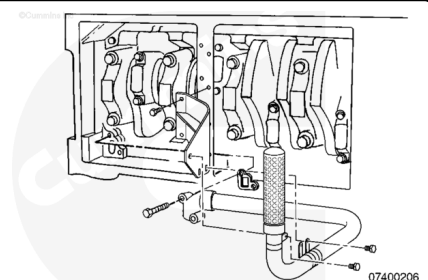

Finishing Steps

- Install the lubricating oil pan. Refer to Procedure 007-025 in Section 7.
(/qs3/pubsys2/xml/en/procedures/18/18-007-025-tr.html)
- Install the lubricating oil pan adapter cover. Refer to Procedure 007-027 in Section 7.
(/qs3/pubsys2/xml/en/procedures/18/18-007-027-tr.html)
- Fill the engine with lubricating oil. Refer to Procedure 007-037 in Section 7.
(/qs3/pubsys2/xml/en/procedures/18/18-007-037-tr.html)
- Operate the engine. Check for leaks.