

Trainings ▾

Engine Disassembly/Assembly


Tool Number

3162871

Engine Lifting Fixture

Designed to lift an engine up to 2722 kg [6000 lb].

©Cummins Inc

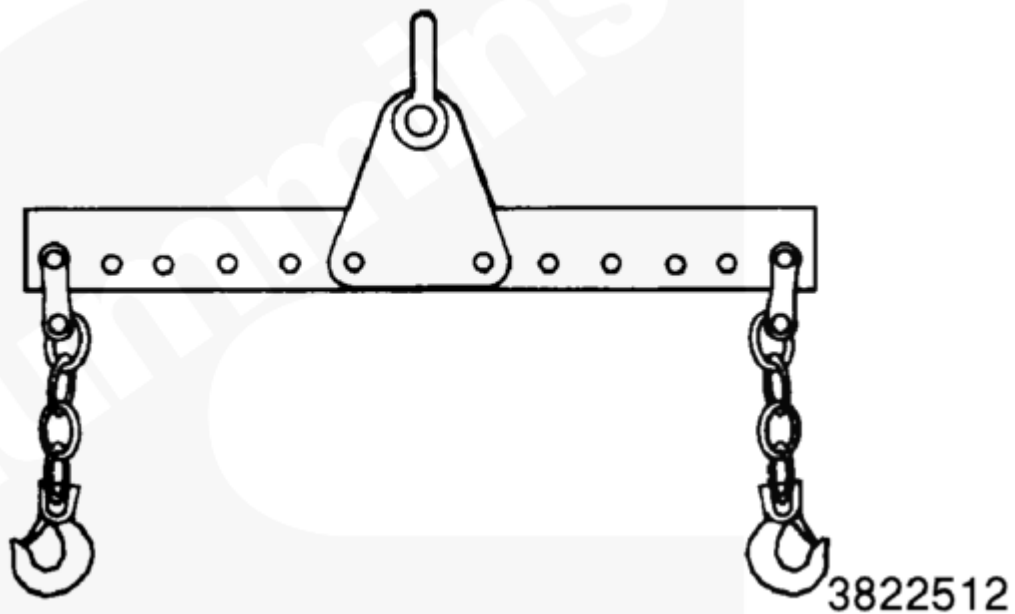


Tool Number

3163091

Lifting Hook

Designed to hook onto the lifting lugs of the cylinder heads. Use with engine lifting fixture, Part Number 3162871, to attach to these lifting hooks to lift the engine as required.

©Cummins Inc

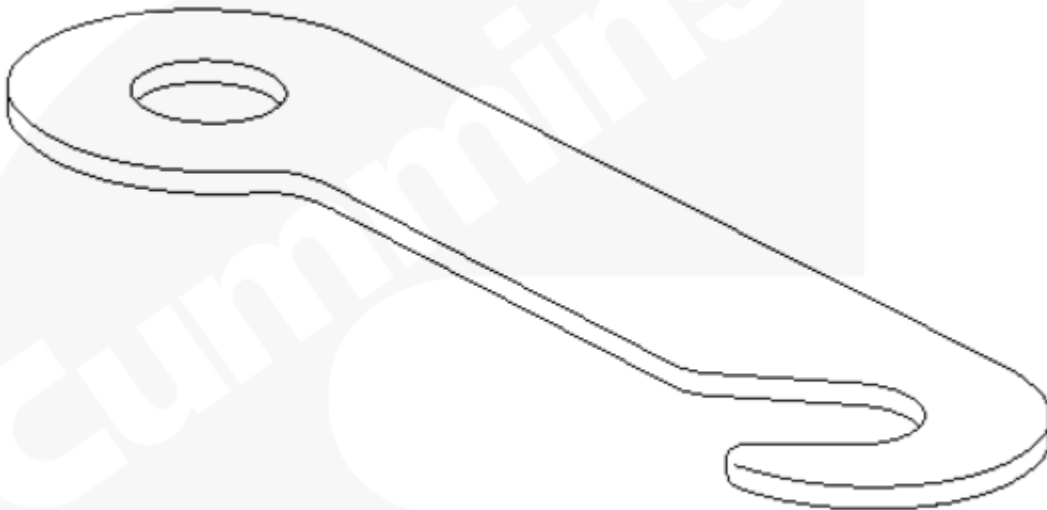

22400223


Tool Number

3163109

Wire Crimping Pliers

Used when repairing connector wires.

©Cummins Inc

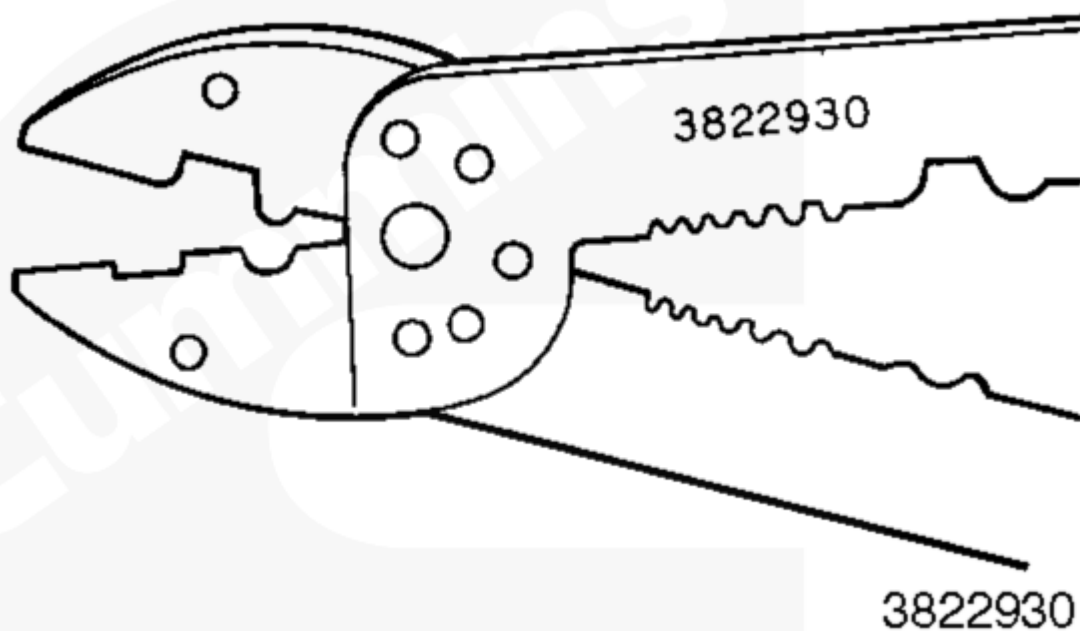
**Tool Number**

3822574

Rocker Lever Actuator

Used to actuate the rocker levers.

©Cummins Inc

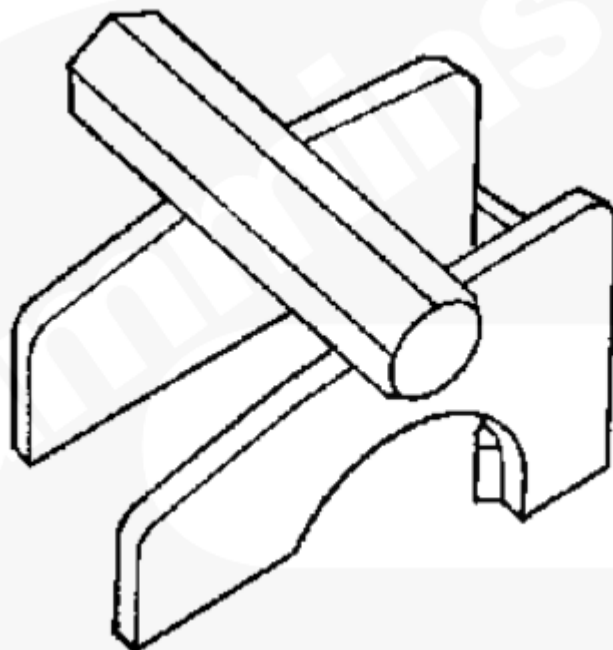

3822574


Tool Number

3822575

Injector and Valve Adjustment Kit

Used to adjust valves and injectors.

©Cummins Inc

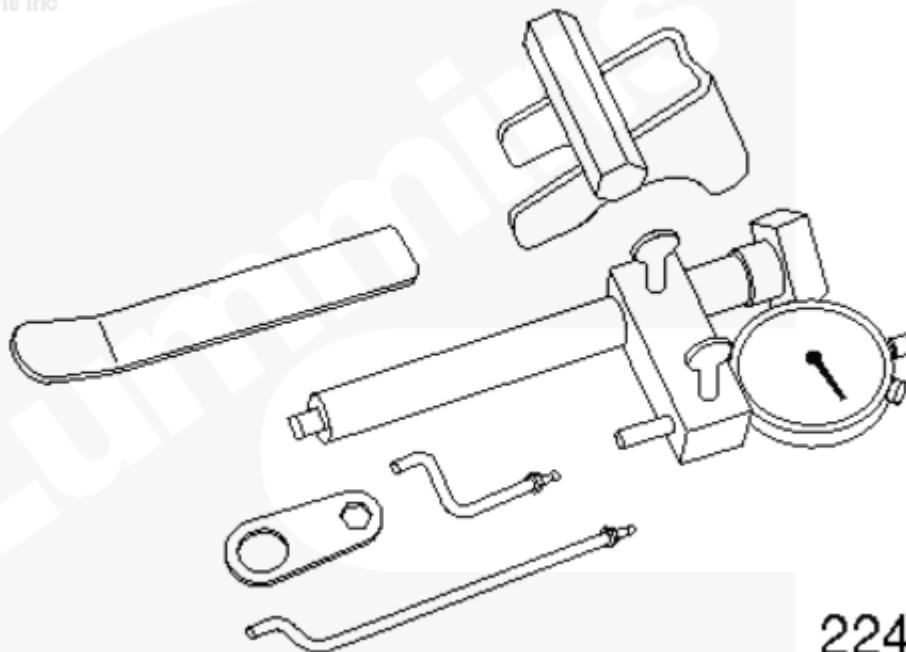

22400224


Tool Number

3375072

Dial Bore Gauge Kit (Short Handle)

Used to measure the diameters of bores from 76.2 to 203.2 mm [3 to 8 in].

©Cummins Inc

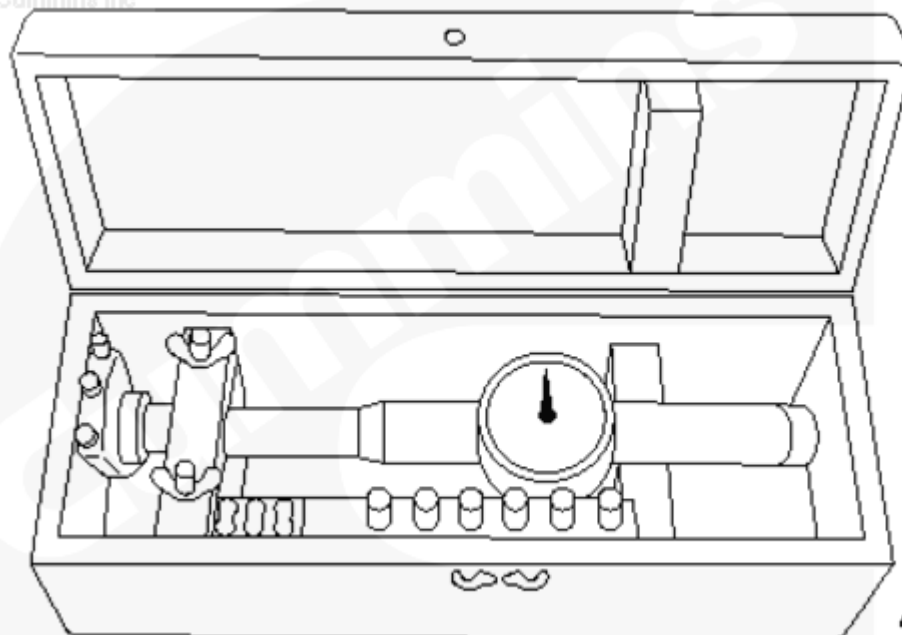

22400225


Tool Number

3376619

Dial Bore Gauge Kit (Long Handle)

Used to measure the diameters of bores from 76.2 to 203.2 mm [3 to 8 in].

©Cummins Inc

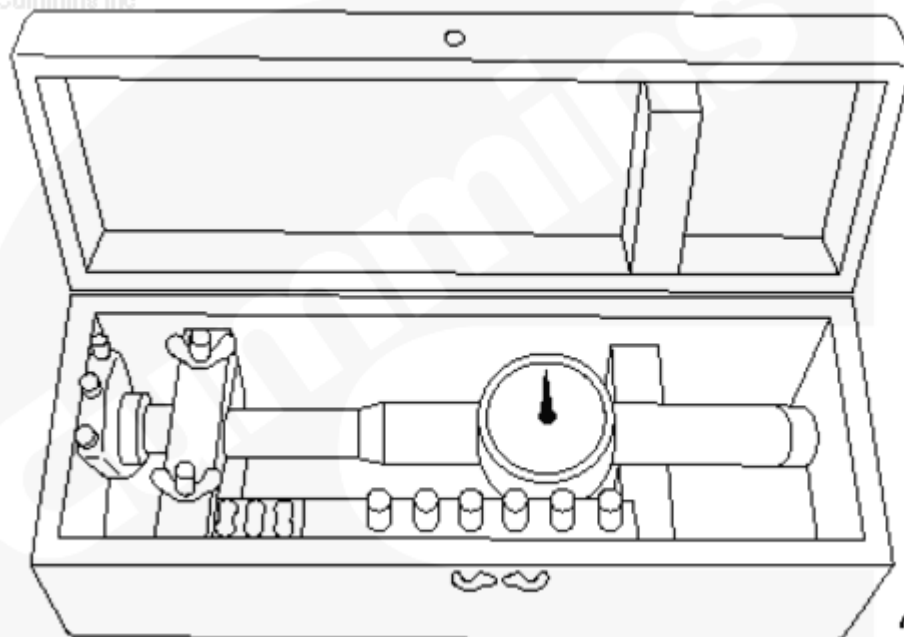

22400225


Tool Number

3164796

Torque Wrench (40.7 to 339 N·m [30 to 250 ft-lb])

Used for general purpose when a specified torque is required.

©Cummins Inc

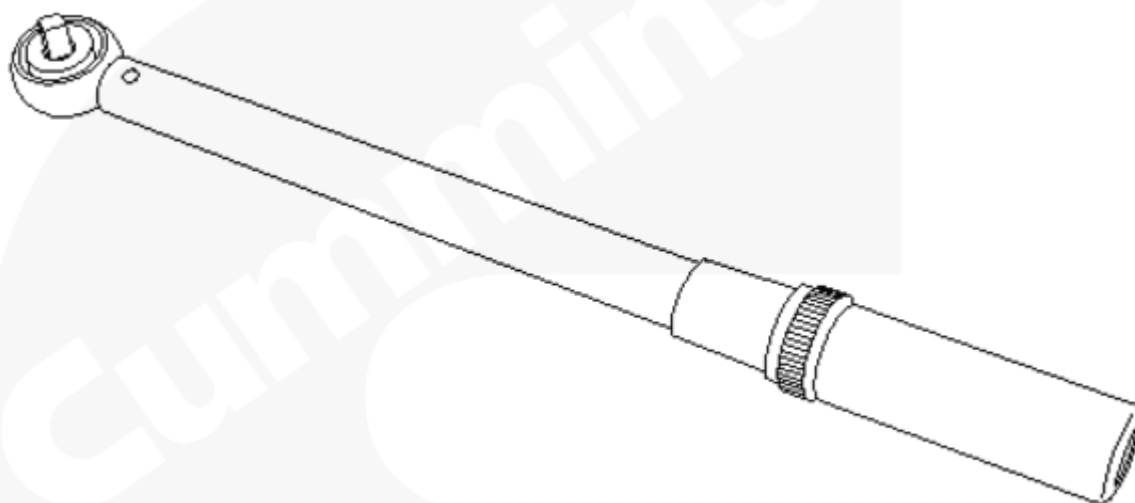

22400227


Tool Number

3162895

Camshaft Gear Puller Kit

Used to remove the camshaft gear from the camshaft without removing the camshaft from engine.

©Cummins Inc

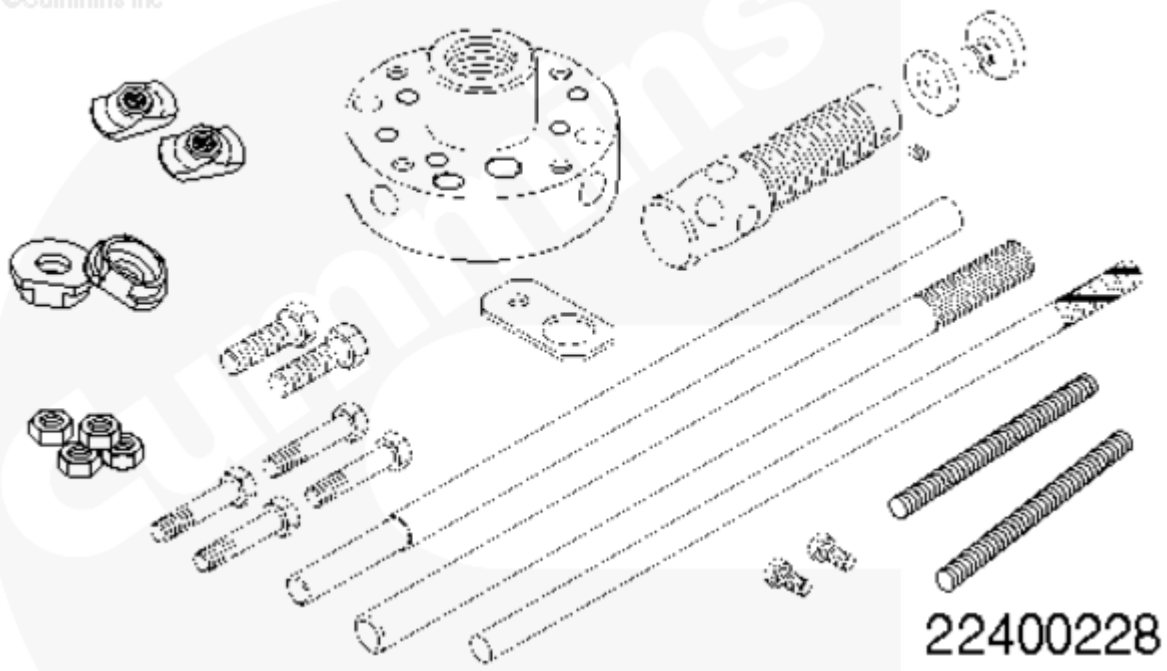


Tool Number

3163198

Torque Wrench Adapter

Secures the rocker lever adjusting screw while tightening the lock nut.

©Cummins Inc

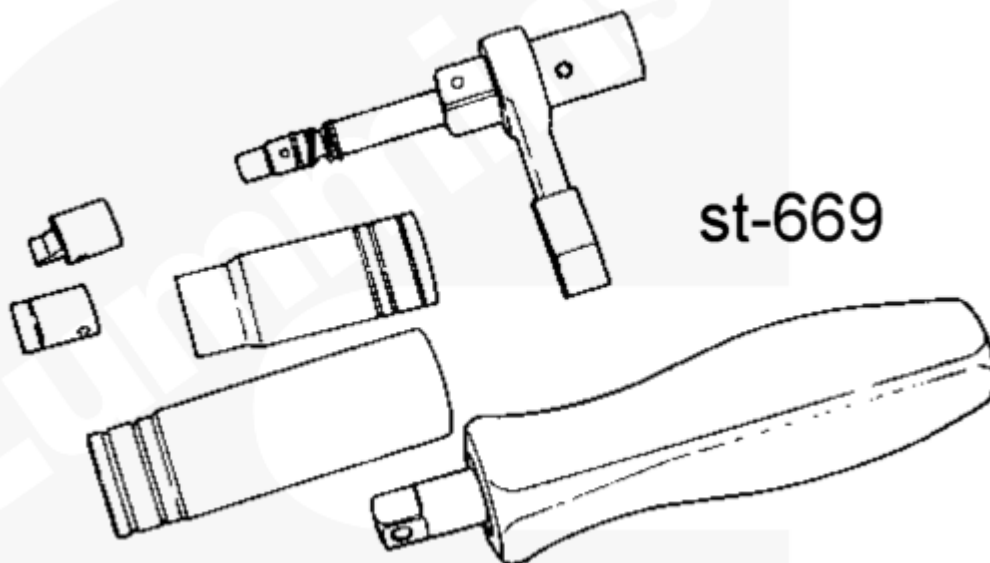

st-669


Tool Number

3163745

Cylinder Liner Remover

Used with remover plate, Part Number 3162886.

©Cummins Inc

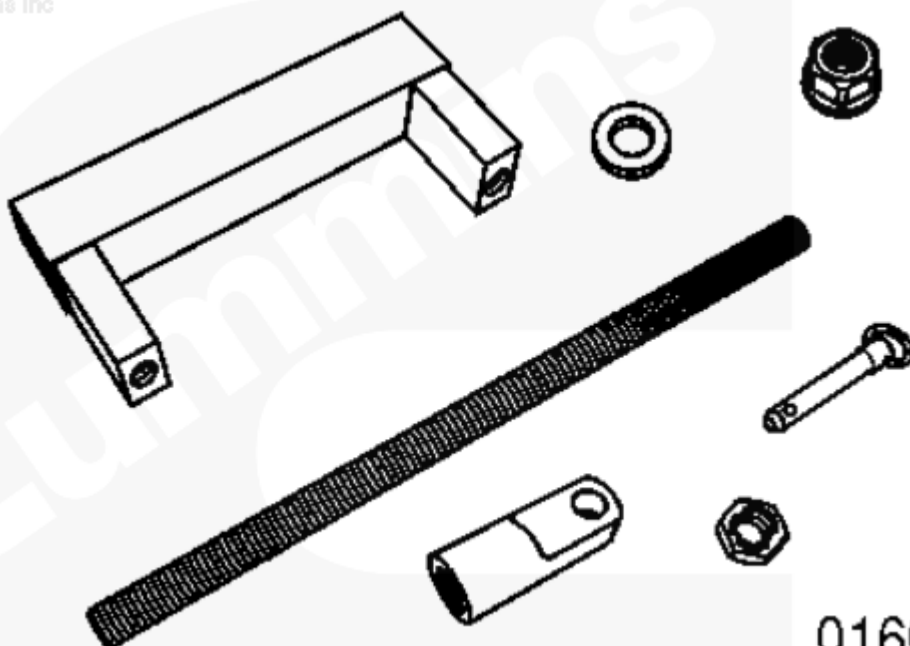

01600269

Tool Number

3164067

Silicone Sealer

Silicone gasket maker. Room Temperature Vulcanizing (RTV), non-corrosive.

©Cummins Inc



07c00280


Tool Number

3164438

Depth Gauge Assembly

Used to measure cylinder liner protrusion and cylinder liner counterbore ledge angle.

©Cummins Inc

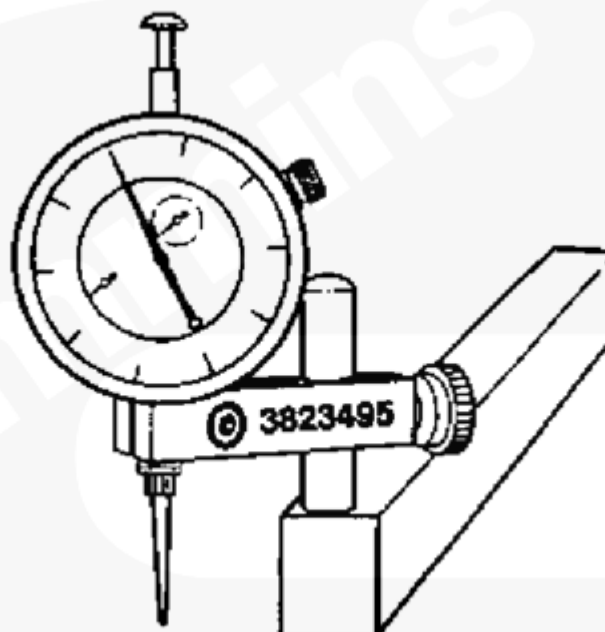


3823495

Tool Number

3164795

Torque Wrench

A 3/8 drive, 300 inch-pound, dial-type torque wrench used to accurately adjust injectors in inch-pounds.

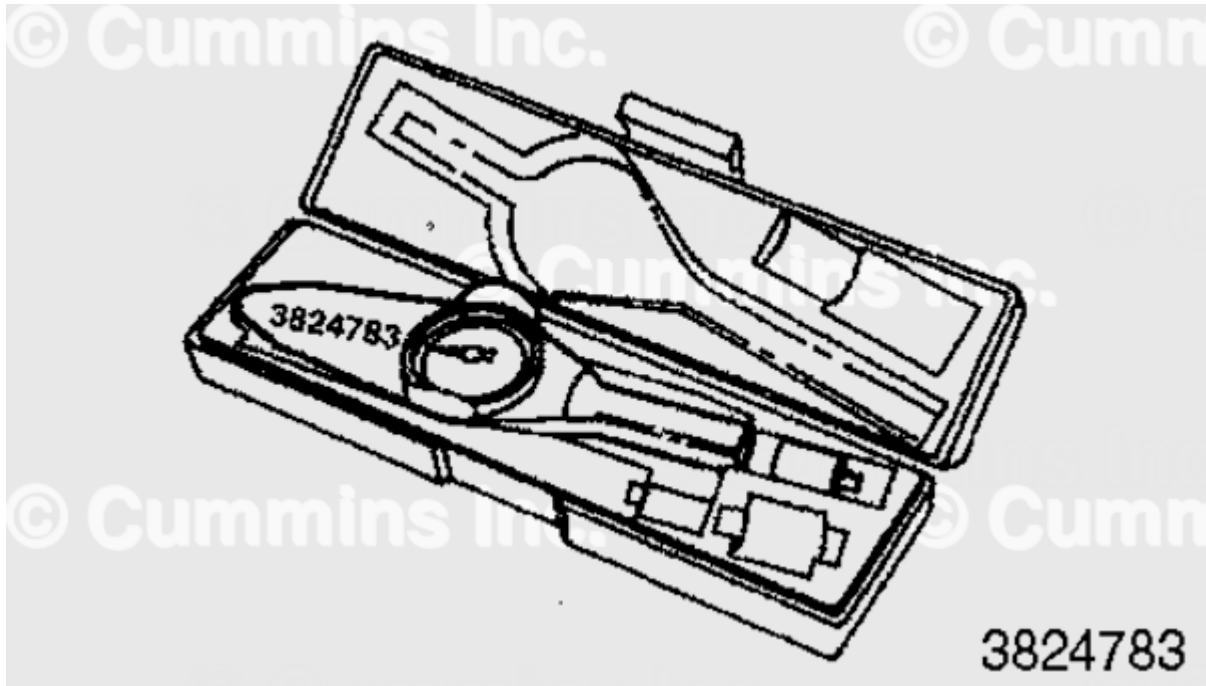


Tool Number

3164798

Torque Wrench (136 to 813.5 N ·m [100 to 600 ft-lb])

Used for general purpose when a specified torque is required.

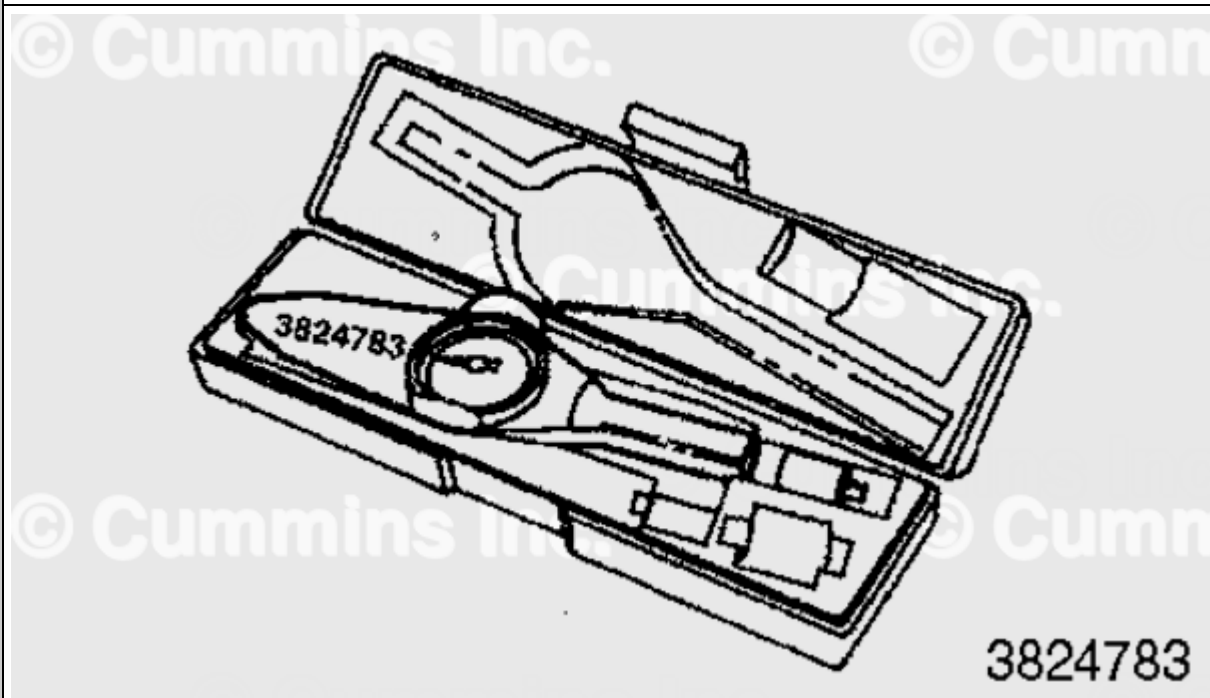


Tool Number

3375098

Connecting Rod Guide Pins

Special nylon pins used to protect the crankshaft journals by guiding the connecting rod during installation and removal.

©Cummins Inc

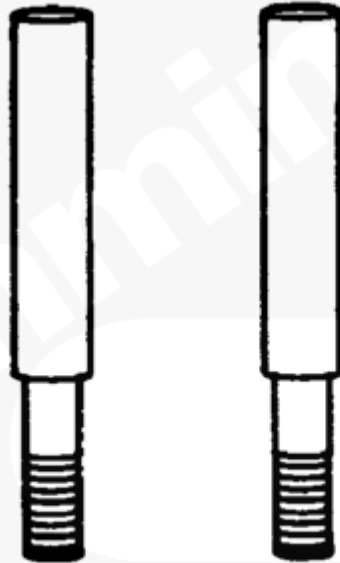

cx8togg


Tool Number

3375422

Liner Installation Tool

Used to install the cylinder liner in the engine.

©Cummins Inc

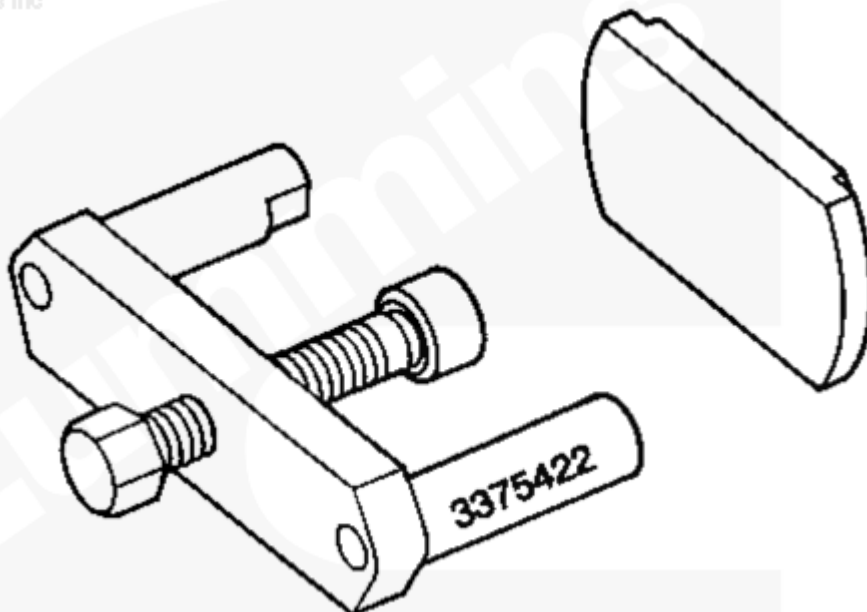
**3375422****Tool Number**

3375784

Light Duty Puller Kit

Used to remove small bushings, oil seals, and bearings.

©Cummins Inc

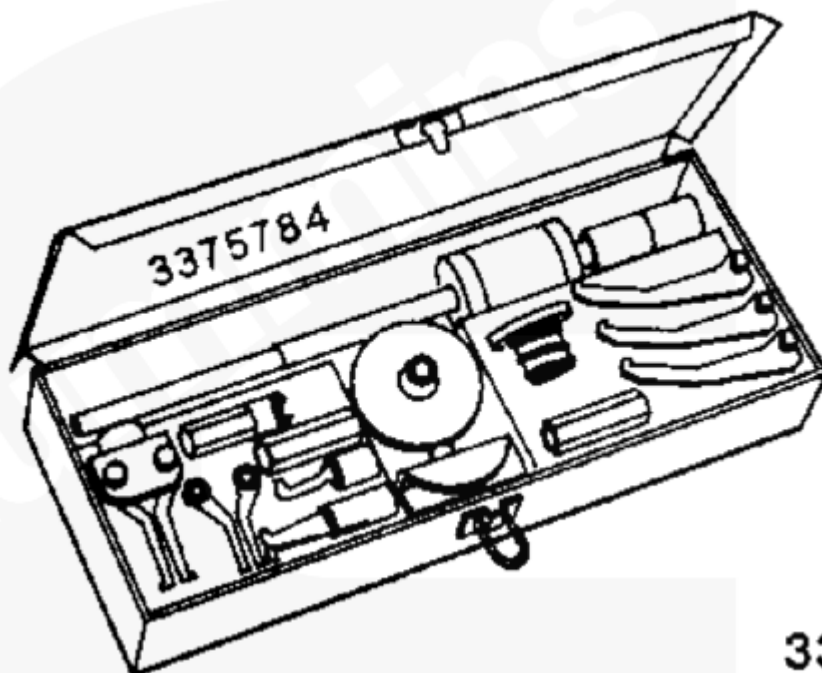**3375784**


Tool Number

3375834

Puller Assembly

Used to remove the crankshaft front gear from the crankshaft. Use with puller jaw, Part Number 3375835.

©Cummins Inc

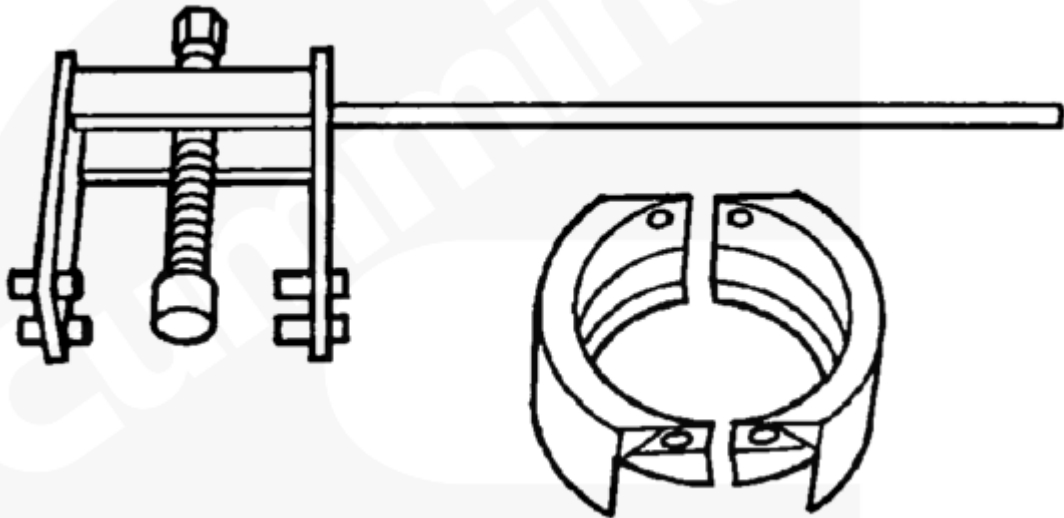

ks8togd


Tool Number

3375835

Puller Jaw

Used to remove the crankshaft front gear from the crankshaft. Use with puller assembly, Part Number 3375834.

©Cummins Inc

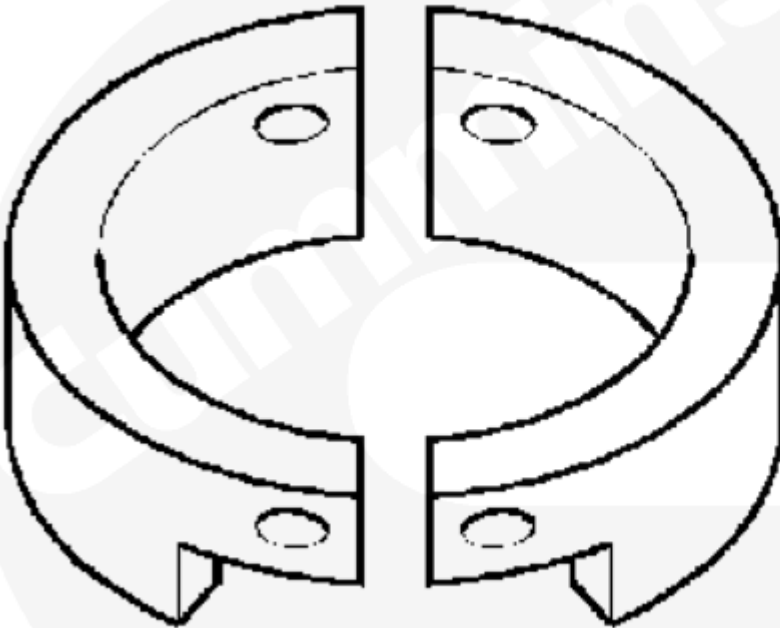**3375835**


Tool Number

3376280

Camshaft Pilot

Used to install the camshaft without damaging the camshaft bushings or camshaft.

©Cummins Inc

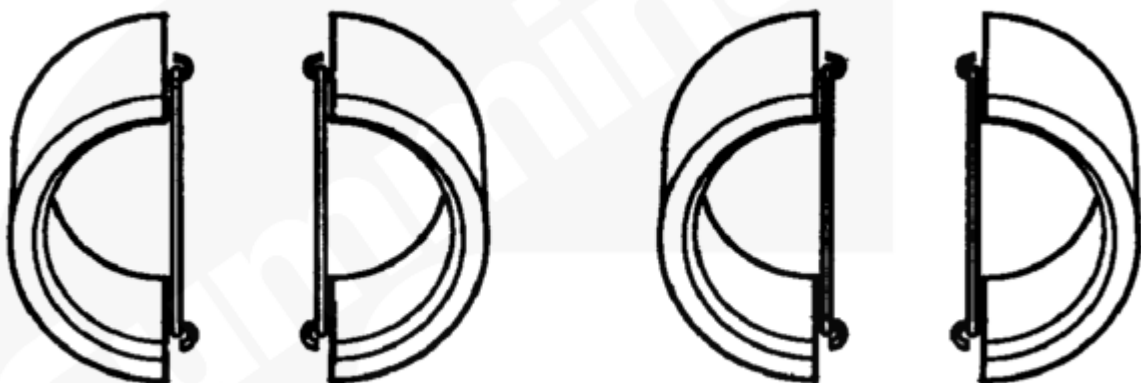

cg8togc

Tool Number

3376326

Pulley Installation Tool

Used to install the alternator and accessory drive pulleys.

©Cummins Inc



ad8togb


Tool Number

3376579

Filter Cutter

Used to open a spin-on full-flow filter for inspection.

©Cummins Inc

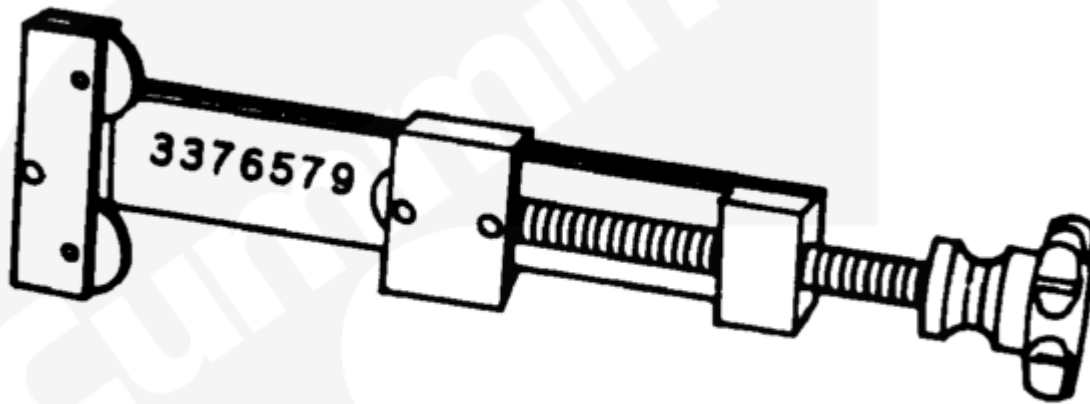

lf8togd

Tool Number

3376592

Torque Wrench

Six inch-pound torque wrench used to tighten the valve lever adjusting screw. Does not require screwdriver attachment.



Tool Number

3376845

Fuel Pump/Air Compressor Ratchet Wrench

Used to reach nuts when removing or installing the fuel pump or air compressor.

©Cummins Inc



3376845


Tool Number

3377161

Digital Multimeter

Used to measure electrical currents; voltage (VDC), resistance (ohms), and current (amperes).

©Cummins Inc

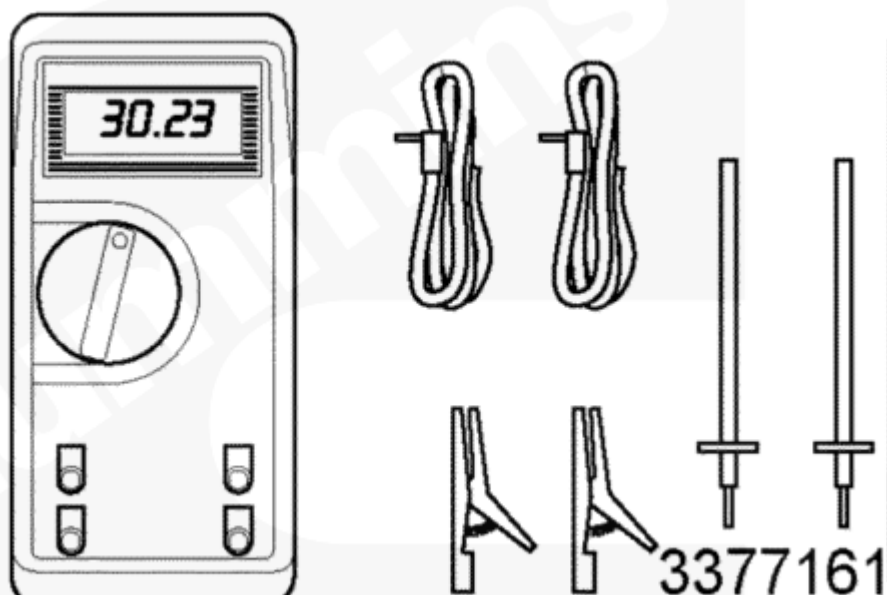


Tool Number

3400157

Filter Wrench, Band Type 118 to 130 mm [4.65 to 5.12 in]

Used to remove spin-on filters.

©Cummins Inc

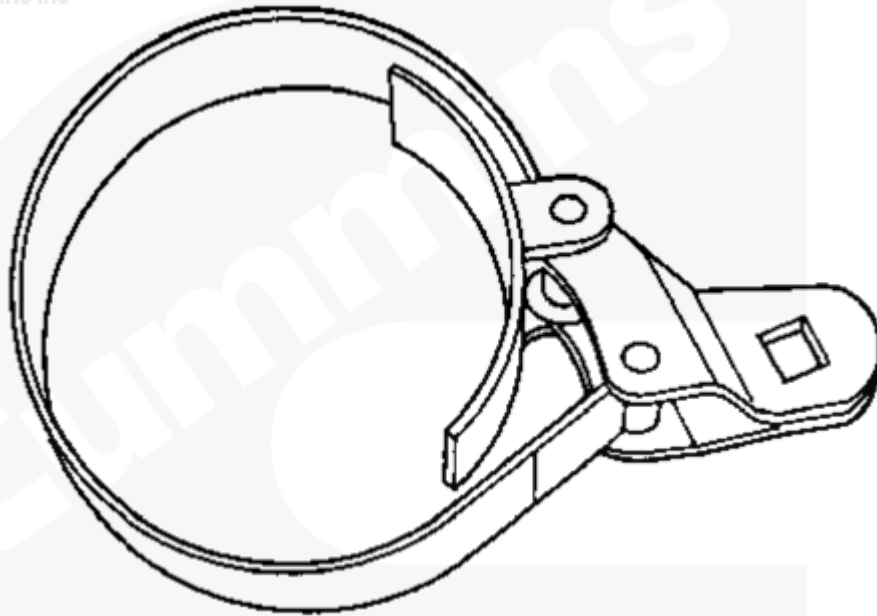**3375049**

Tool Number

3822608

Weather Pack™ Terminal Removal Tool

Used to repair Weather Pack™ connectors.




3822608

Tool Number

3822760

Deutsch™ Terminal Removal Tool


Used to repair Deutsch™ connectors.

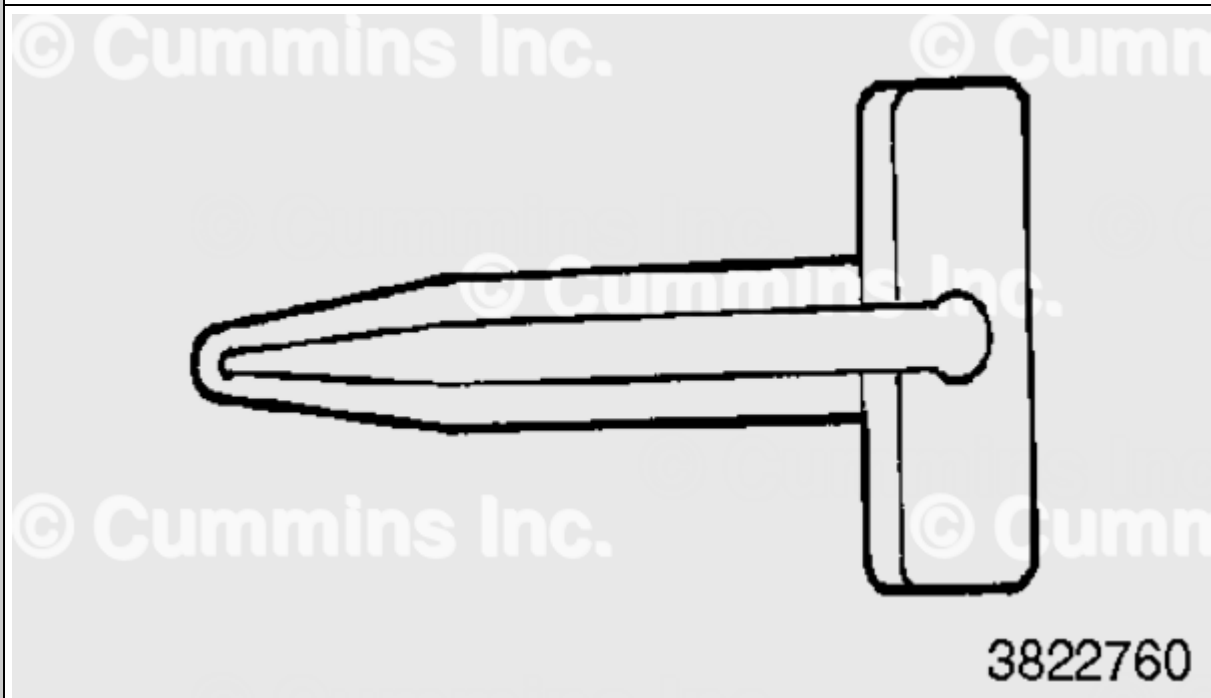**Tool Number**

3822860

Heat Gun

Used to repair connector wires.

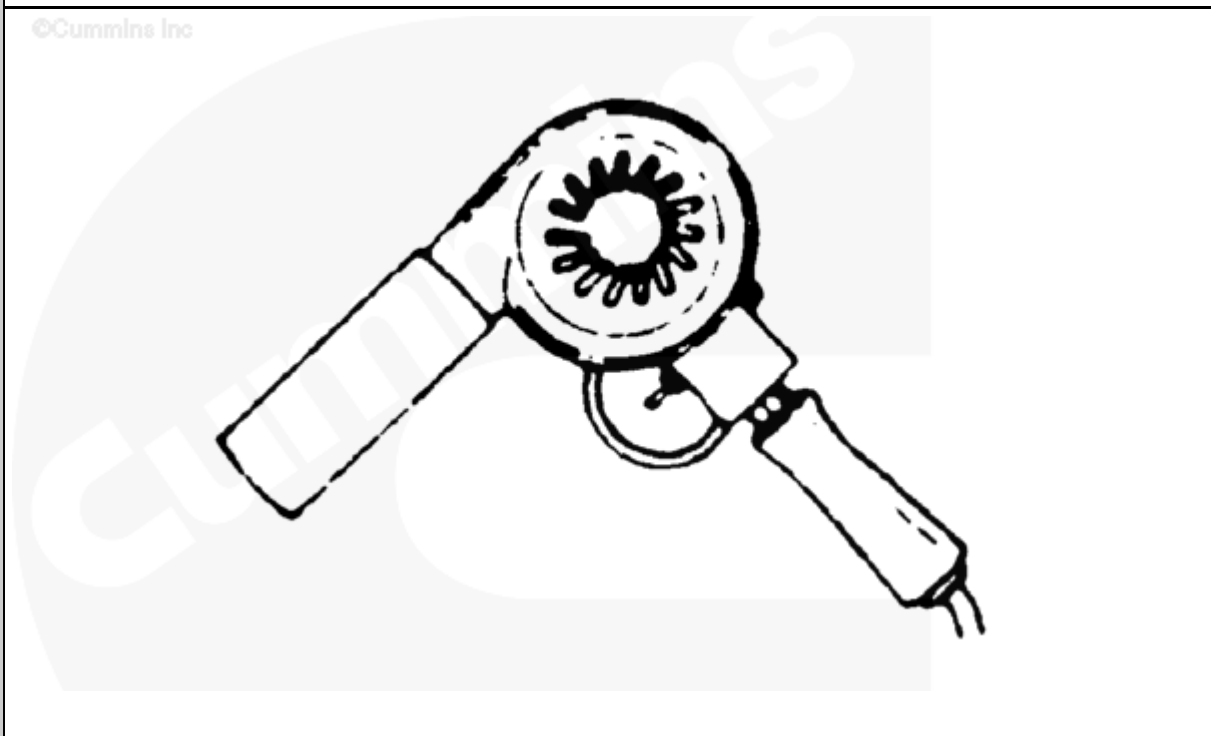


Tool Number

3823024

Injector Puller

Used to remove and install injectors. 3823024 is for standard PTD injectors.

©Cummins Inc

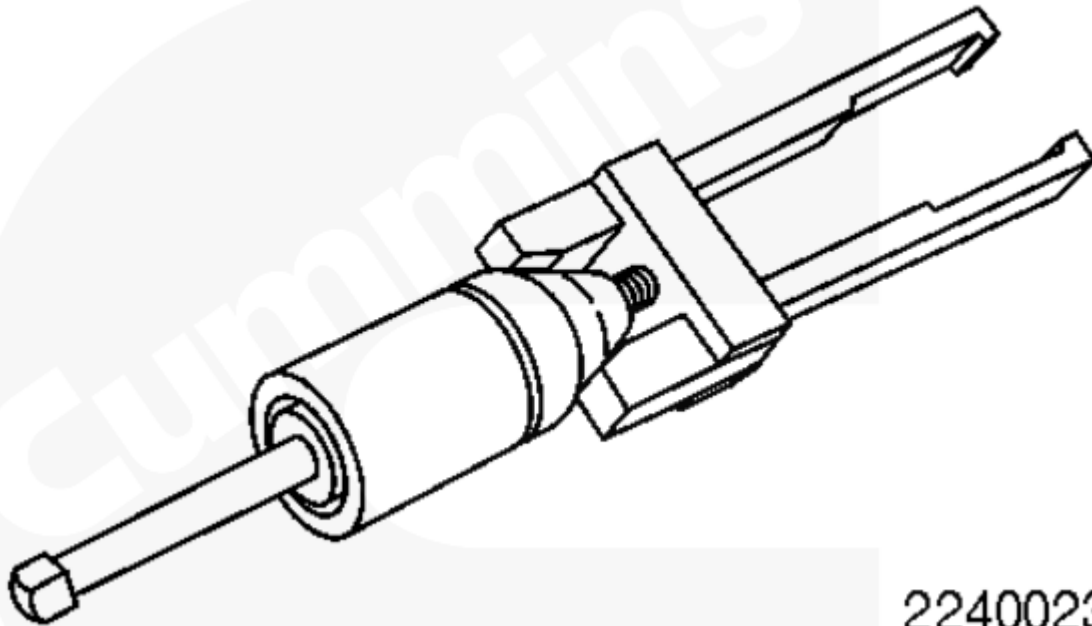

22400230


Tool Number

3823294

Piston Ring Compressor

Used to compress the piston rings during piston installation.

©Cummins Inc

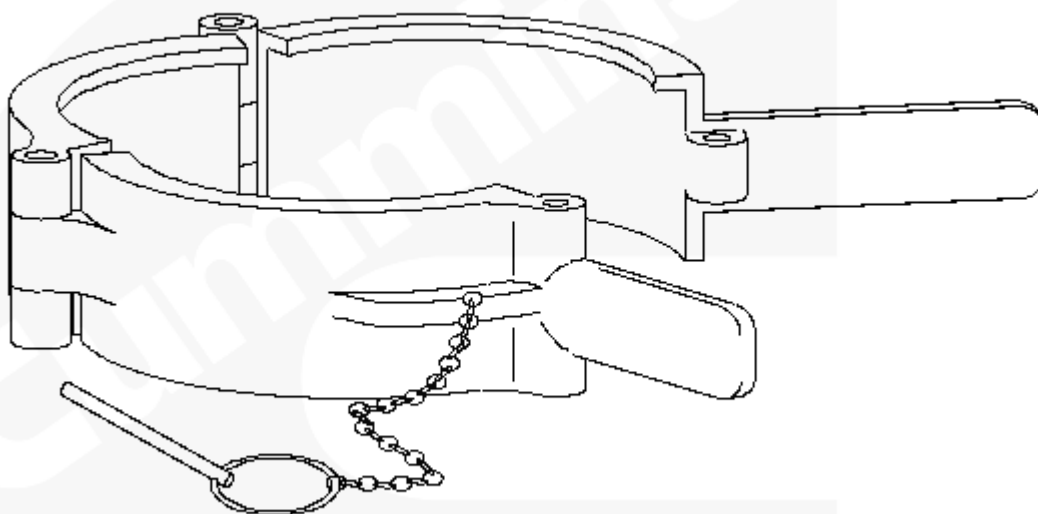

3163158


Tool Number

3823495

Depth Gauge Assembly

Used to measure cylinder liner protrusion and cylinder liner counterbore ledge angle.

©Cummins Inc

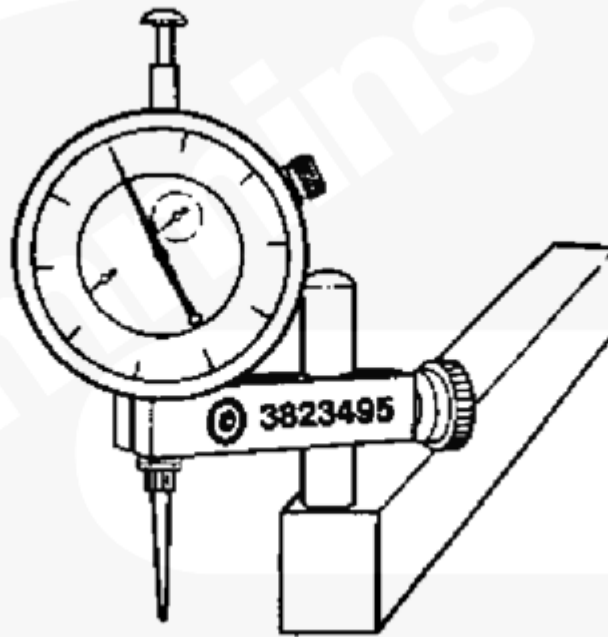**3823495**


Tool Number

3823621

Camshaft Bushing Installation/Removal Kit

Hydraulic ram provides the force to install/remove cam bushings when used with installation/removal kit.

©Cummins Inc

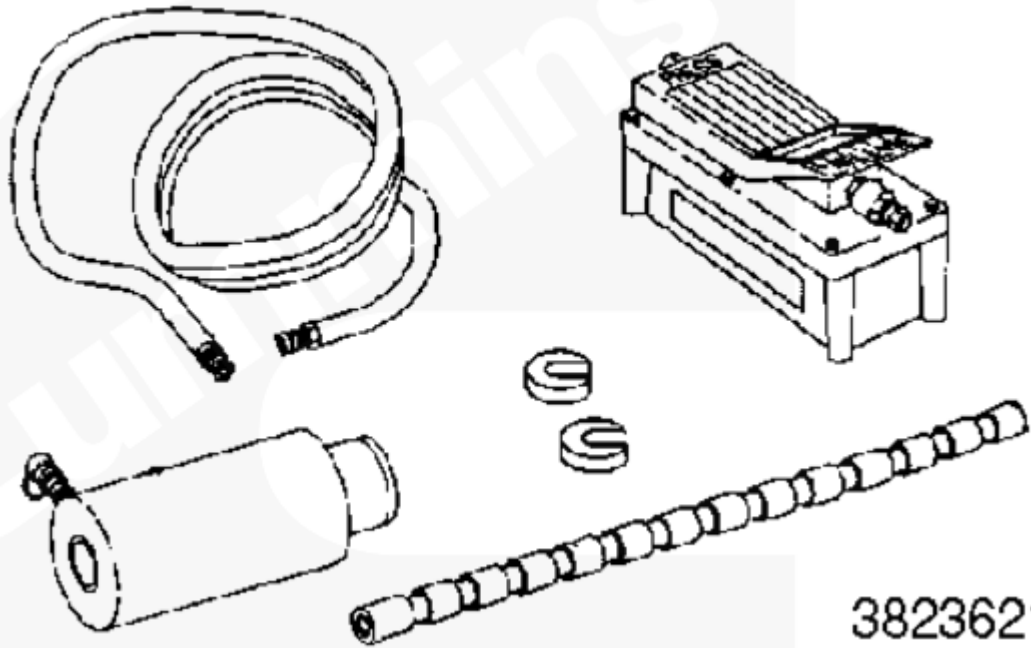


Tool Number

3823647

Camshaft Bushing Installation/Removal Kit

Used with the Camshaft Bushing Installation/Removal Kit, Part Number 3823621 to remove the camshaft bushings.

©Cummins Inc

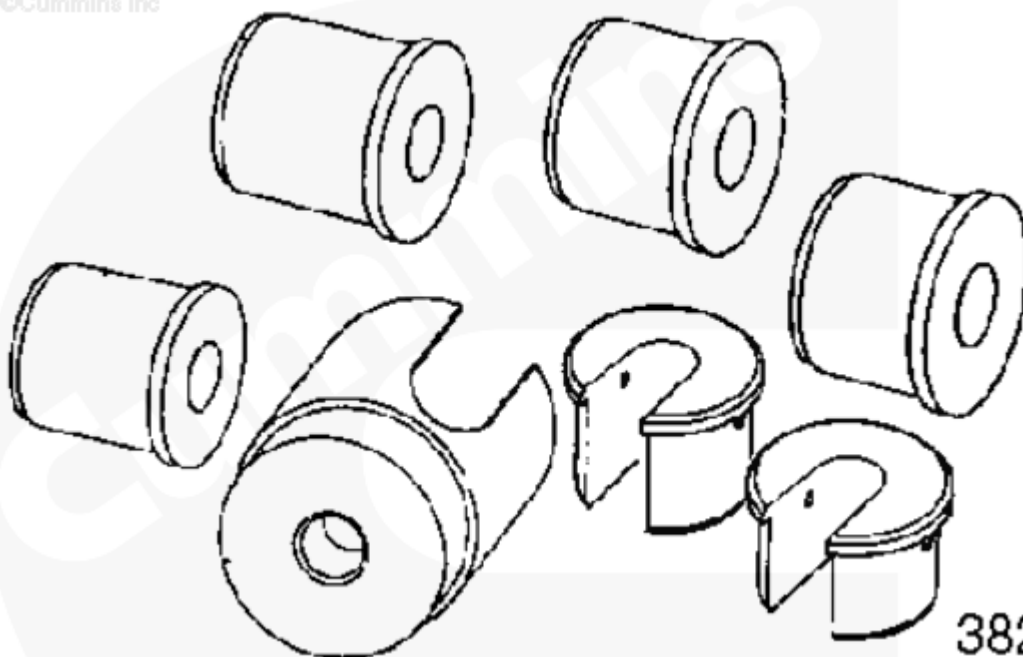

3824842

Tool Number

3824510

Electrical Contact Cleaner

Used to clean electrical contacts and connectors.

©Cummins Inc



oi8togt


Tool Number

3824653

Injector Puller

Used to remove and install injectors. 3824653 must be used on step timing control (STC) injectors and can be used on non-STC injectors.

©Cummins Inc

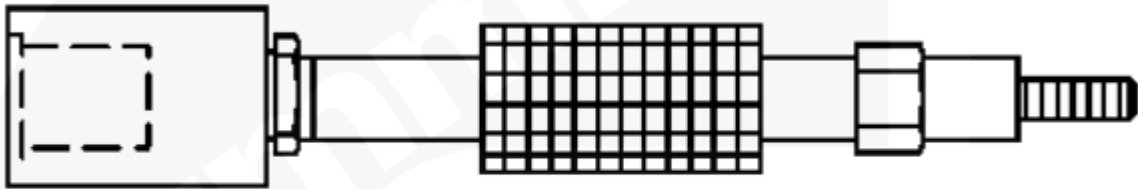

22400229


Tool Number

3824904

Wiring Repair Kit

Contains a variety of connectors, pins, seals, terminals, test leads, and other tools used to repair connectors.

©Cummins Inc

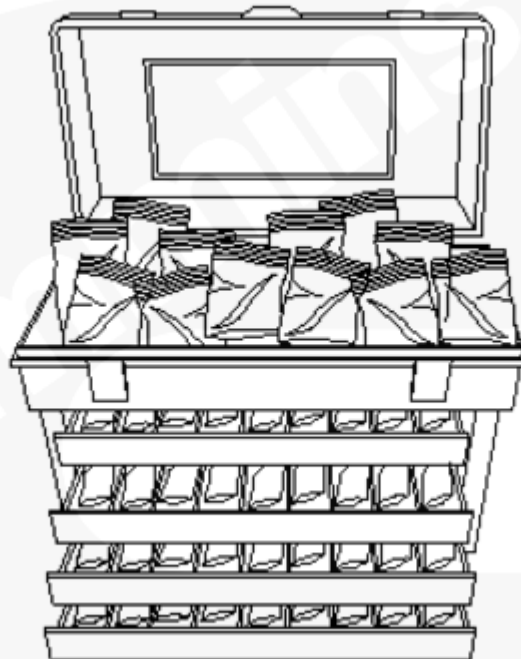

22400231


Tool Number

3824942

Injection Timing Tool

Used to check injection timing. This timing fixture is designed to determine the push tube travel in relation to the piston travel.

©Cummins Inc

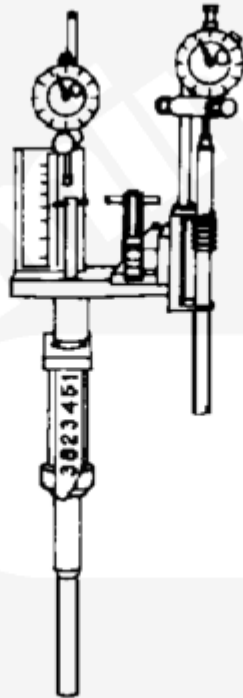

3823451


Tool Number

ST-647

Puller

Used to remove the alternator and accessory drive pulleys.

©Cummins Inc

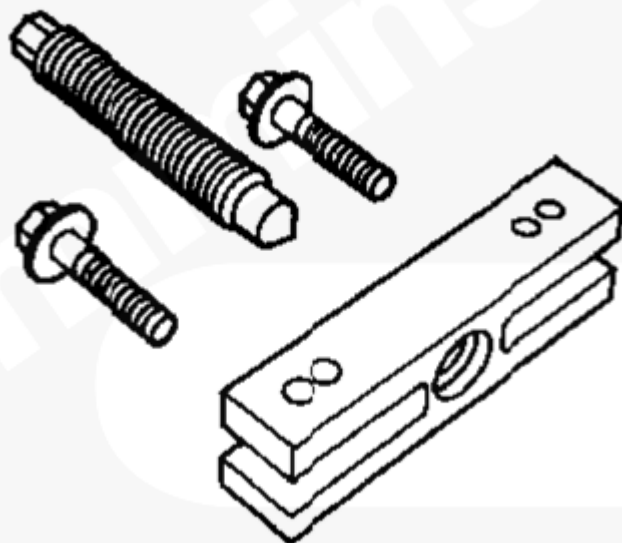

ad8toga


Tool Number

ST-669

Torque Wrench Adapter

Secures the rocker lever adjusting screw while tightening the lock nut.

©Cummins Inc

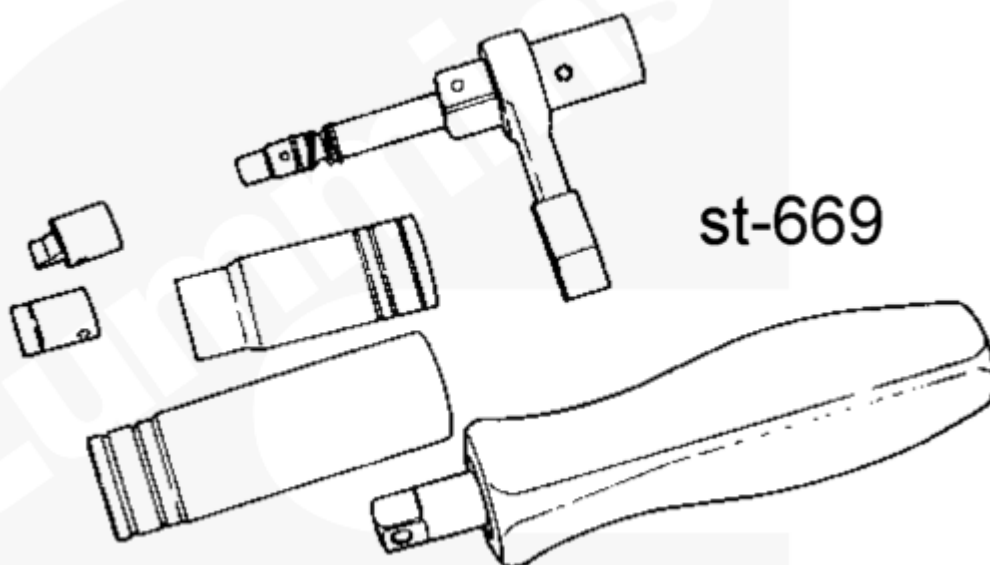


st-669

Tool Number

ST-1134

Dowel Pin Extractor

Used to remove dowel pins.

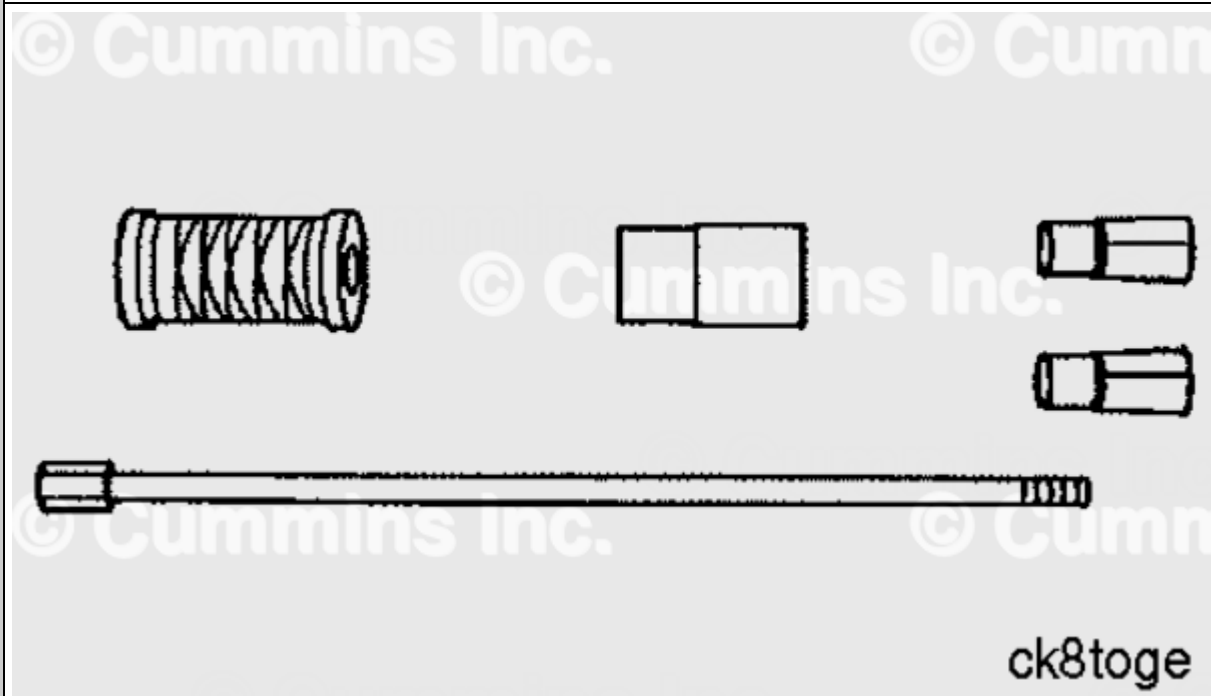



Tool Number

ST-1232

Drill Ream Fixture

Used to machine dowel holes to install oversized dowels in cylinder block and flywheel housing.
Use with drill, reamer, and the appropriate drill/ream bushing set.

©Cummins Inc

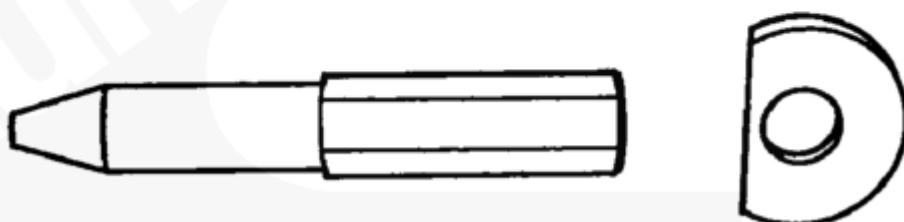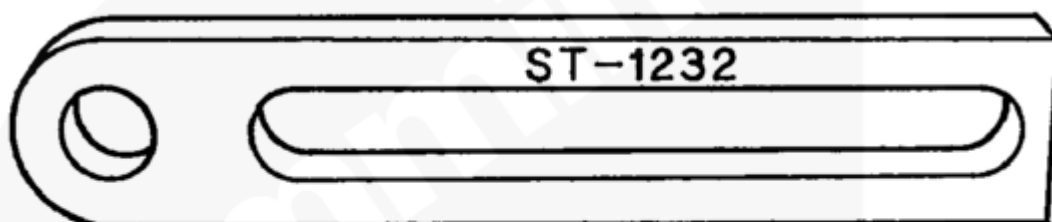

st-1232


Tool Number

ST-1291

Cylinder Liner Ring Gauge (6.251 K19, K38, K50)

Used for checking cylinder liner bores.

©Cummins Inc

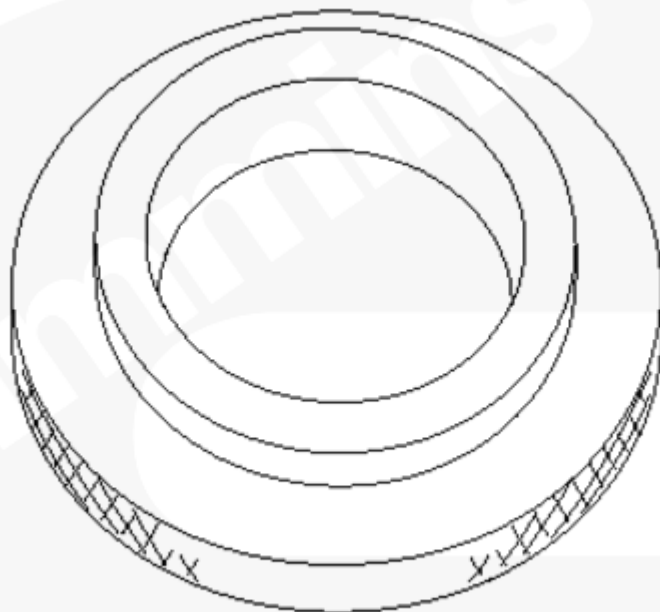

22400226


Tool Number

ST-1293

Belt Tension Gauge

Used to measure the accessory drive and alternator belt tension.

©Cummins Inc

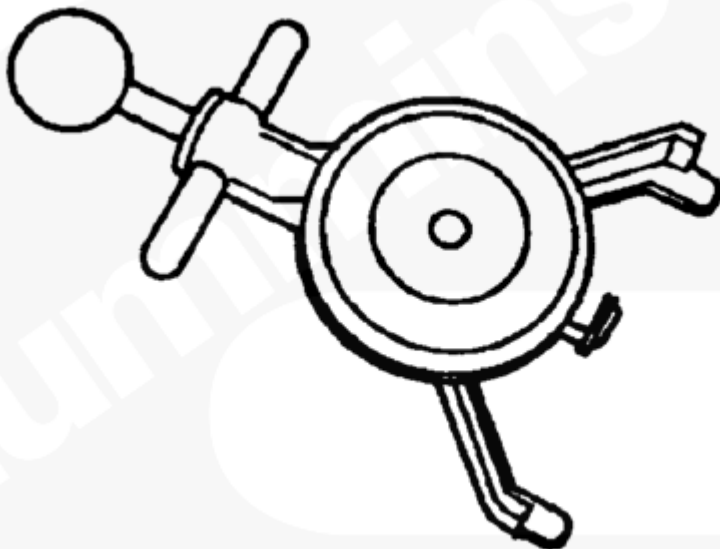

fa8togc


Tool Number

ST-1319

Water Tube Driver

Used to install or remove the water transfer tubes from the rocker housing.

©Cummins Inc

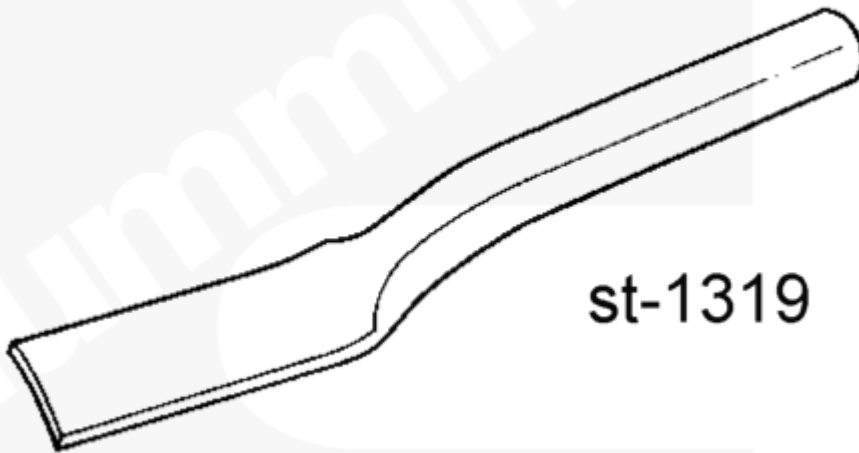**st-1319**