

Trainings ▾

Remove

Note : The following steps for the removal and installation of the lubricating oil level sensor are applicable to QSK45, QSK60, and QSK78 engines **only**.


Make-up Tank

Partially drain the engine lubricating oil system.

- Use the following procedure in the Troubleshooting and Repair Manual, QSK78 Troubleshooting and Repair Manual, Bulletin 3666727. Refer to Procedure 007-025 in Section 7. (</qs3/pubsys2/xml/en/procedures/50/50-007-025.html>)
- Use the following procedure in the Troubleshooting and Repair Manual, QSK45 and QSK60 Service Manual, Bulletin 4021530. Refer to Procedure 007-025 in Section 7. (</qs3/pubsys2/xml/en/procedures/56/56-007-025-tr.html>)

Lift up on the locking tab and pull the electrical connectors apart.


Remove the sensor.

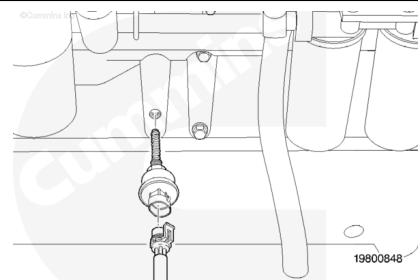

Install

⚠ CAUTION ⚠

Use only Cummins-recommended lubricant DS-ES, Part Number 3822934. Other lubricants, such as lubricating oil or grease, in the connectors can cause ECM damage, poor engine performance, or premature connector wear.

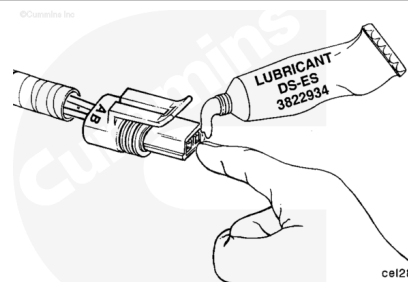

Apply a small amount of lubricant to the connector terminals. Before installing, fill the entire connector cavity with lubricant.

Lubricate the sensor o-ring using clean engine oil.

Install the new sensor into the engine. Tighten the sensor.

Torque Value: 14 n•m [124 in-lb]

Push the electrical connectors together until they lock.

Fill the engine to the proper level with lubricating oil and operate the engine to check for leaks.

