



Trainings ▾

Connector Replacement


The connectors are located on the OEM interface harness.

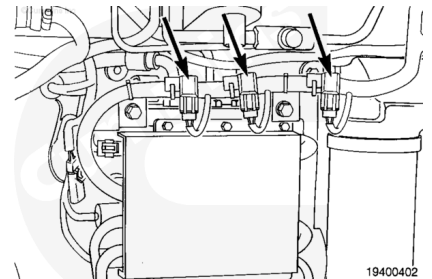


Cut and remove the plastic hold down wire tie. Cut and remove the connector from the harness.

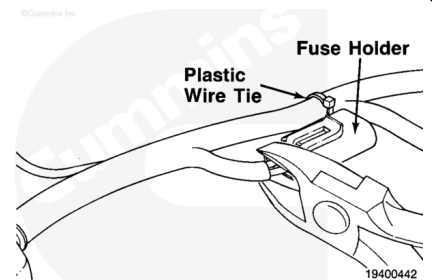

Using the wire crimping pliers, Part Number 3822930, remove about 6 mm [$\frac{1}{4}$ in.] of insulation from the supply wires.

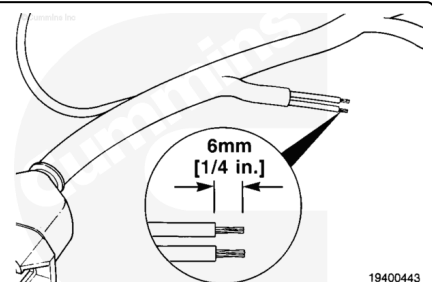


Install the replacement fuse holder, Part Number 3823758, on the bare wire.

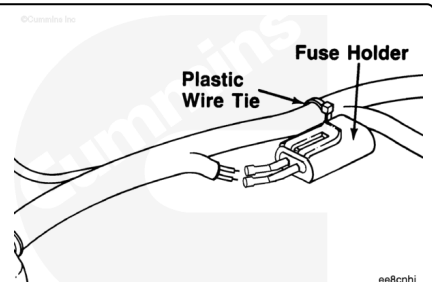

Use wire crimping pliers, Part Number 3822930, to crimp the repair wire onto the bare wire.

Use a heat gun, Part Number 3822860, to heat the shrink-tubing. The tubing will shrink and make the connection waterproof.

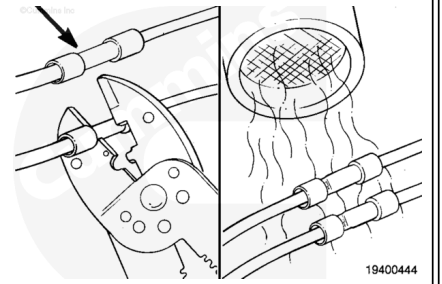

Last Modified: 20-Aug-2002
