


Fault Code: 252

Oil Level Sensor Circuit

 Printable Version

Overview

Codes	Reason	Effect
Fault Code: 252 PID(P): P98 SPN: 098 FMI: 2 Lamp: Yellow SRT:	Oil level sensor error.	No engine protection for low oil level. Centinel™ system is disabled.

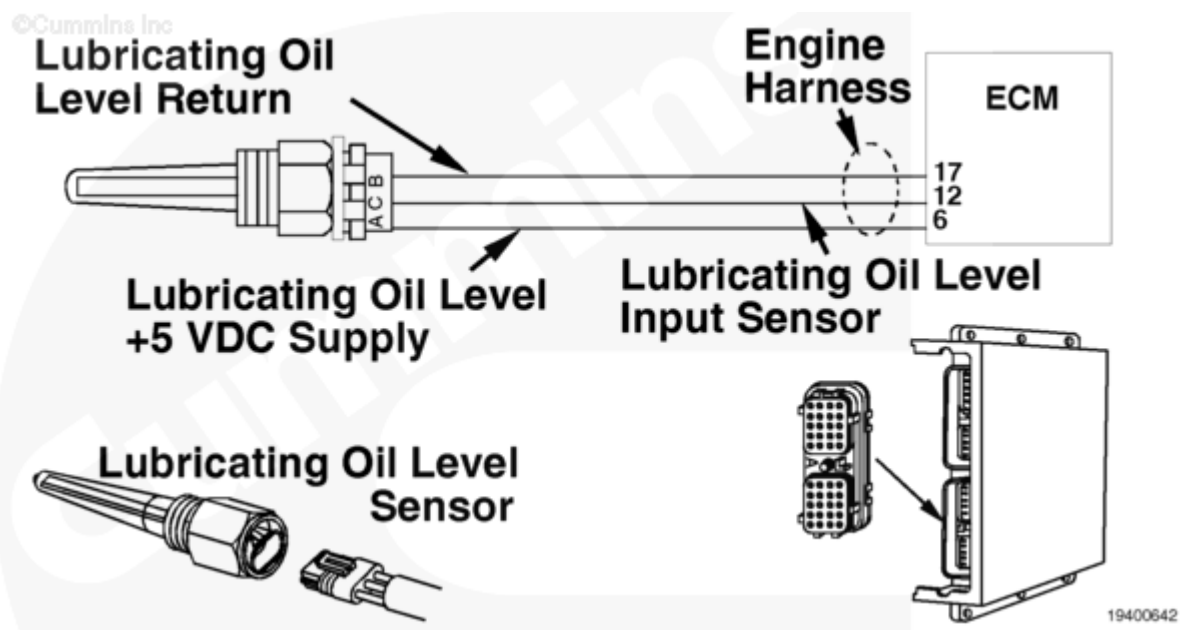

Oil Level Sensor Circuit

Circuit Description

The lubricating oil level sensor is used by the ECM to monitor the amount of oil in the engine. Low oil level detected at pin 12 can cause the engine protection system to derate and shut down the engine.

Component Location

The lubricating oil level sensor is in the engine oil pan.

Refer to Troubleshooting Fault Code t05-252 (/qs3/pubsys2/xml/en/procedures/19/19-t05-252.html)

Last Modified: 01-Mar-2011
