


Fault Code: 261

Fuel Temperature - Engine Protection

 Printable Version

Overview

Codes	Reason	Effect
Fault Code: 261 PID(P): P174 SPN: 174 FMI: 0 Lamp: Engine Protection SRT: 00-397	High fuel temperature has been detected. Voltage signal at fuel temperature signal pin 26 of engine harness indicates fuel temperature above 71°C [160°F].	Calibration-dependent progressive power and speed derate and engine shutdown with increasing time after alert.

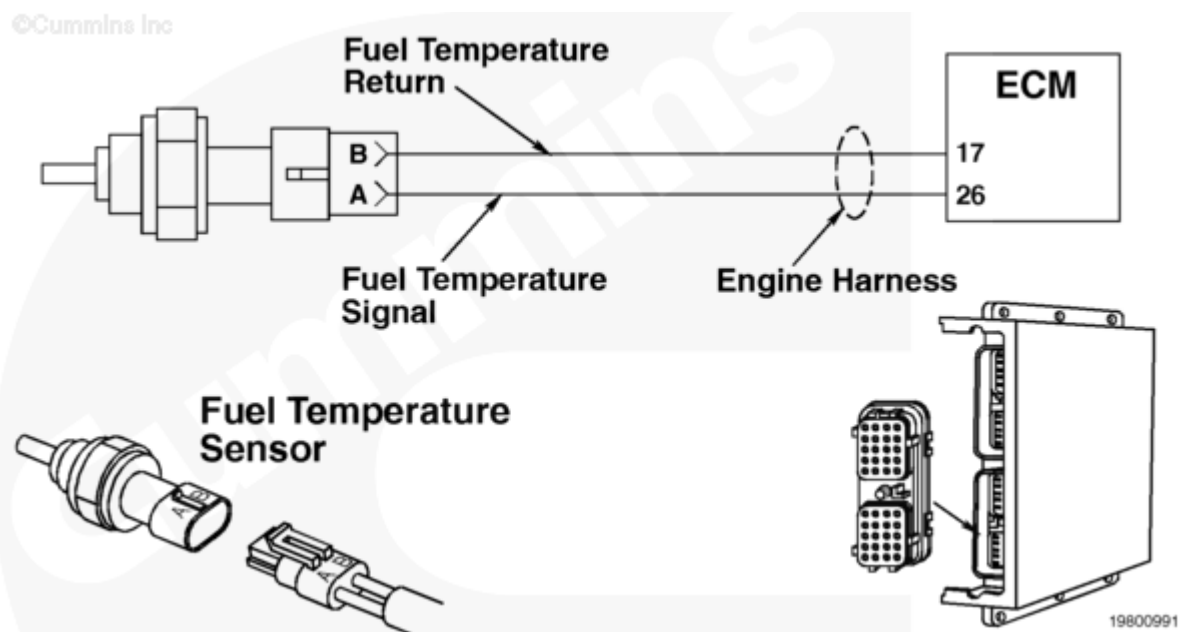

Fuel Temperature Sensor Circuit

Circuit Description

The fuel temperature sensor is used by the ECM to monitor the temperature of the fuel. The ECM monitors the voltage on pin 26 and converts this voltage to a temperature value. The fuel temperature value is used by the ECM for the engine protection system.

Component Location

QSK19 Series engines - The fuel temperature sensor is located on the left side of the control valve body, above the fuel shutoff valve. QSK45 and QSK60 Series engines - The fuel temperature sensor is located on the right side of the electronic control valve assembly between the rail and timing pressure sensors. QSK78 Series engines - The fuel temperature sensor is located on the right side of the electronic control valve assembly between the rail and timing pressure sensors.

Shoptalk

All temperature sensors:

- The resistance of the sensor varies with the temperature. The reading that you observe could possibly compare to the following table if the sensor is functioning properly.

Temperature(°C)	Temperature[°F]	Resistance(ohms)
0	32	30k to 36k
25	77	9k to 11k
50	122	3k to 4k
75	167	1350 to 1500
100	212	600 to 675

Refer to Troubleshooting Fault Code t05-261 (/qs3/pubsys2/xml/en/procedures/19/19-t05-261.html)