

Trainings ▾

Select Service Tools

Recommended Cummins® Service Tools

- No Cummins® service tools required.

Additional Service Items

- No additional service items required.

Preparatory Steps

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.


- Disconnect the batteries. See equipment manufacturer service information.

Remove

The camshaft position sensor is located on upper gear housing on the exhaust side of the engine.

Disconnect the sensor from the engine harness.

Remove the engine speed sensor from the cylinder head.

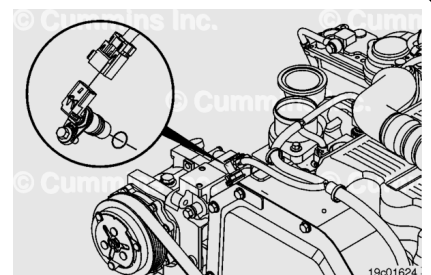


Inspect for Reuse

Inspect the camshaft position sensor for debris, cracks, or other damage from contact with the tone wheel.

If there is debris on the camshaft position sensor, clean the sensor.

If the sensor is chipped, cracked, extruded, or otherwise damaged, replace the sensor with a new one.

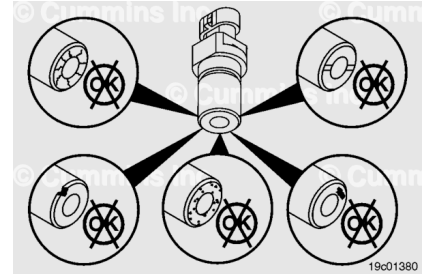


Install

Install a new o-ring onto the camshaft position sensor.

Install the new sensor into the mounting hole.

Connect the sensor to the engine harness. Push the connectors together until they lock.

An audible click will be heard as the connectors lock in place.

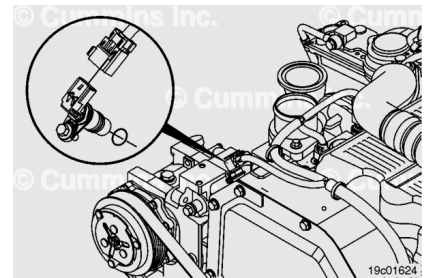

Torque Value: 25 n•m [221 in-lb]

Finishing Steps

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

- Connect the batteries. See equipment manufacturer service information.

