


Trainings ▾


Remove

Shut off the sea water inlet valve on the vessel hull.

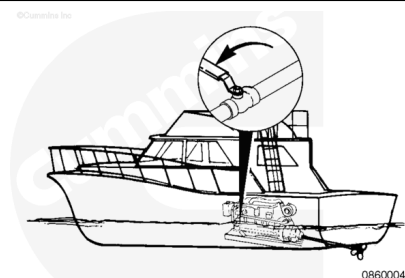

⚠ CAUTION ⚠

In some cases, it will be necessary to hold the welded fitting on the heat exchanger with an additional wrench to prevent damage to the heat exchanger.

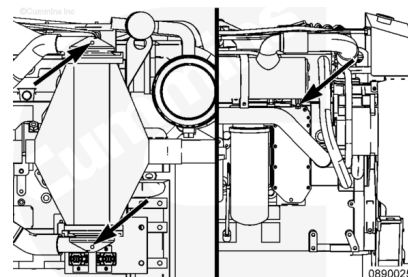


Remove the zinc plug(s).

Note : The illustration shown is generic. For engine-specific locations, see to Section E.

Inspect for Reuse

Measure the length of the zinc plug(s) removed from the heat exchanger. Replace any zinc plug if it is 50 percent or more eroded.

Note : The frequency of change depends on the chemical reaction of the sea water circulated through the heat exchanger.

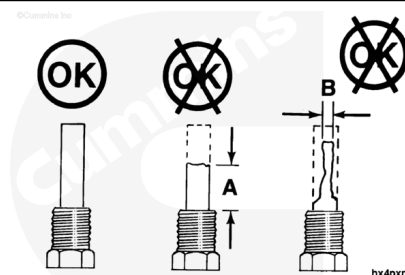


Zinc Plug Erosion Limits

	mm		in
A	19.0	MIN	0.750

New		51.0	MAX	2.000
B	6.4	MIN	0.250	
New		16.0	MAX	0.630

Note : If any zinc plug does not meet specification, replace it with a new zinc plug.

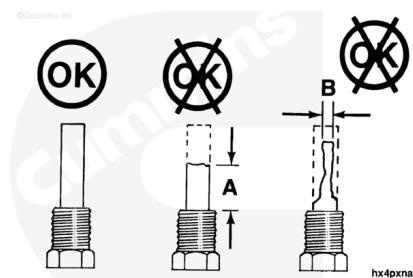

Install

Install and tighten the zinc plug(s).

Note : Do not use Teflon™ tape or pipe sealant on the threads of the sacrificial zinc plugs. Use of any type of sealant will insulate the zinc anode and prevent a good ground.

Torque Value:


1/4-inch Plug 12 n•m [106 in-lb]

Torque Value:

3/8-inch Plug 22 n•m [195 in-lb]

Torque Value:

1/2-inch Plug 30 n•m [22 ft-lb]

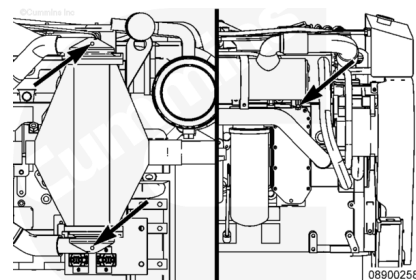

Open the sea water valve on the vessel hull.

Operate the engine and check for leaks.

