

Trainings ▾

Select Service Tools

Recommended Cummins® Service Tools

- No Cummins® service tools required.

Additional Service Items


- No additional service items required.

Maintenance Check

⚠ CAUTION ⚠

Holes, loose-end seals, dented sealing surfaces, and other forms of damage render the air cleaner inoperative and require immediate replacement.

Elements that have been cleaned several times will finally clog and airflow to the engine will be restricted. After cleaning the element, check the intake air restriction as previously described. Replace the element, if necessary.

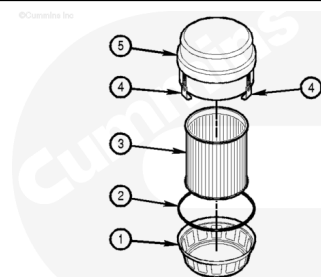

10200078


⚠ CAUTION ⚠

To avoid damage to the element, pull the cover and the element straight out when removing them from the air cleaner housing.

Unsnap the latches (4) that secure the cover (1) to the air cleaner housing (5). Remove the cover (1).

Pull the element (3) out of the housing.

Remove the o-ring (2) from the cover (1) and inspect. If the o-ring (2) is damaged, it **must** be replaced.

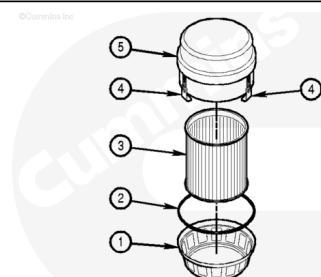

10200078

Install the air cleaner element (3) into the housing.

Make sure that the o-ring (2) is seated properly on the cover (1). Install the cover (1).

Snap the latches (4) to secure the cover (1).

Last Modified: 07-Mar-2019
