

Trainings ▾

Initial Check


Connect the electronic service tool to the engine harness.

Monitor the ambient air pressure. If an ambient air pressure is less than or equal to 523 mm Hg [20.6 in Hg] and the present elevation is less than 10,000 feet, replace the ambient air pressure sensor.

Remove

Lift up on the tab and pull the connector from the sensor.

Remove the mounting capscrews and sensor from the engine.

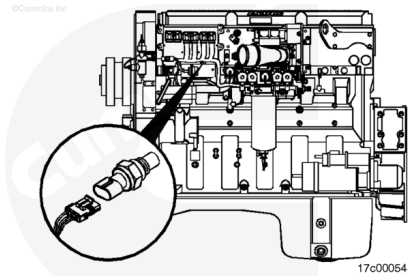


Install

Install a new sensor on the engine. Tighten the capscrews.

QSX15	14 n.m	[124 in-lb]
QST30	23 n.m	[204 in-lb]
QSK45/60	28 n.m	[248 in-lb]

Push the connectors together until they lock.

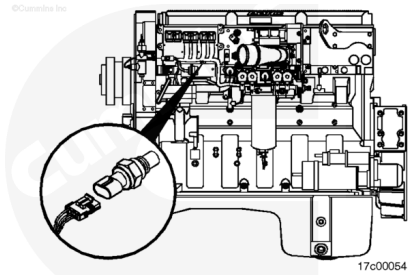

Last Modified: 13-Nov-2002
