



Trainings ▾

Remove

Disconnect the engine harness from the coolant pressure sensor.

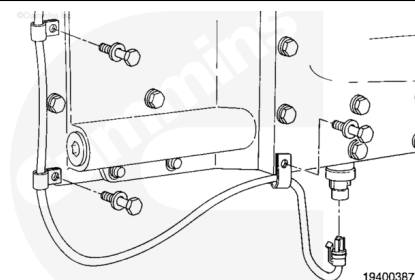


Remove the coolant pressure sensor.

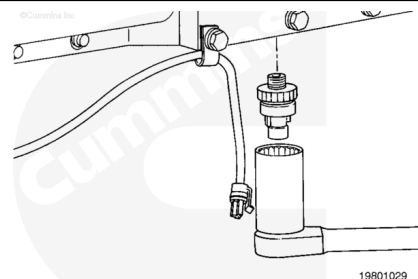


Test

Connect the electronic service tool to the datalink.

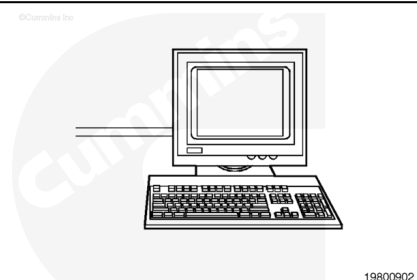

Connect the engine harness to the coolant pressure sensor.

Allow the sensor and harness to hang in air.

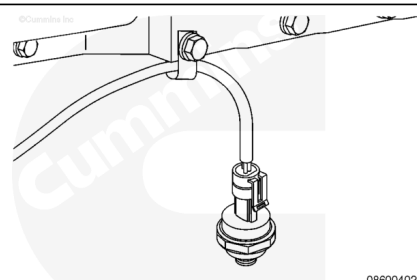

Monitor the coolant pressure sensor with the electronic service tool.

The coolant pressure **must** be within 17.2 kPa [2.5 psi] of the barometric pressure sensor value.

If the coolant pressure is sensor **not** within specifications, the coolant pressure sensor **must** be replaced.

Disconnect the electronic service tool.

Disconnect the coolant pressure sensor from the engine harness.




Install

Install the coolant pressure sensor into the engine block.

Tighten the coolant pressure sensor.

Torque Value: 14 n•m [124 in-lb]

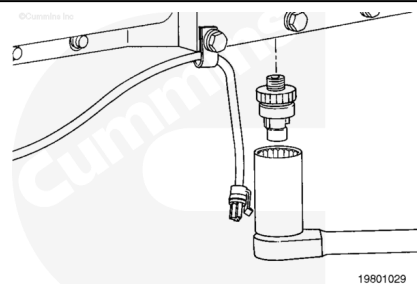

Connect the engine harness to the coolant pressure sensor.

