


Trainings ▾

Remove

⚠ WARNING ⚠

Do not remove the pressure cap from a hot engine. Wait until the coolant temperature is below 50°C [120°F] before removing the pressure cap. Heated coolant spray or steam can cause personal injury.

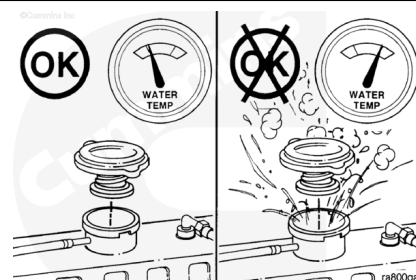

⚠ WARNING ⚠


Coolant is toxic. Keep away from children and pets. If not reused, dispose of in accordance with local environmental regulations.

Remove the radiator cap.

Drain enough coolant from the cooling system to empty the radiator top tank. Refer to Procedure 008-018 in the Troubleshooting and Repair Manual QSX15, ISX, Signature Base Engine, Bulletin 3666239 (</qs3/portal/manualviewer.html?path=/qs3/pubsys2/xml/en/outlines/3666239.html>), Troubleshooting and Repair Manual QSK23 Series Engines, Bulletin 4021375 (</qs3/portal/manualviewer.html?path=/qs3/pubsys2/xml/en/outlines/4021375.html>), Troubleshooting and Repair Manual QST30 Series Engines, Bulletin 3666217 (</qs3/portal/manualviewer.html?path=/qs3/pubsys2/xml/en/outlines/3666217.html>), Troubleshooting and Repair Manual QSK45 and QSK60 Series Engines, Bulletin 3666261 (</qs3/portal/manualviewer.html?path=/qs3/pubsys2/xml/en/outlines/3666261.html>), and in the Troubleshooting and Repair Manual QSK78 Series Engines, Bulletin 3666727 (</qs3/portal/manualviewer.html?path=/qs3/pubsys2/xml/en/outlines/3666727.html>).

Lift up on the locking tab and pull the electrical connectors apart.

Remove the sensor.

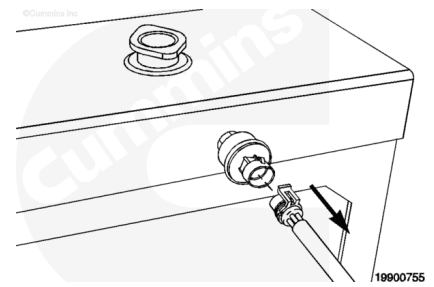

Install

Install and tighten the new sensor according to the vehicle manufacturer's procedures.

Push the electrical connectors together until they lock.

Fill the cooling system and check for leaks. Refer to Procedure 008-018 in the Troubleshooting and Repair Manual QSX15, ISX, Signature Base Engine, Bulletin 3666239

(</qs3/portal/manualviewer.html?path=/qs3/pubsys2/xml/en/outlines/3666239.html>),

Troubleshooting and Repair Manual QSK23 Series Engines,

Bulletin 4021375 (</qs3/portal/manualviewer.html?path=/qs3/pubsys2/xml/en/outlines/4021375.html>),

Troubleshooting and Repair Manual QST30 Series Engines,

Bulletin 3666217 (</qs3/portal/manualviewer.html?path=/qs3/pubsys2/xml/en/outlines/3666217.html>),

Troubleshooting and Repair Manual QSK45 and QSK60 Series Engines, Bulletin 3666261 (</qs3/portal/manualviewer.html?path=/qs3/pubsys2/xml/en/outlines/3666261.html>), or

Troubleshooting and Repair Manual QSK78 Series Engines, Bulletin 3666727 (</qs3/portal/manualviewer.html?path=/qs3/pubsys2/xml/en/outlines/3666727.html>).

