


Trainings ▾

Resistance Check


Make sure the shutoff valve coil is the correct voltage (24 or 12 VDC).

The coil voltage and part number are cast into the terminal connection end of the coil.

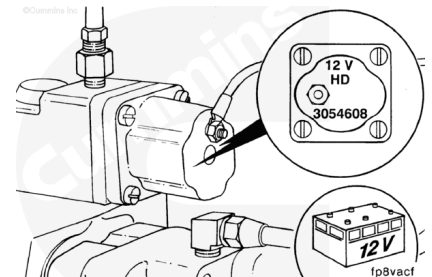

Remove the solenoid wire.

Use the multimeter to check the coil resistance.

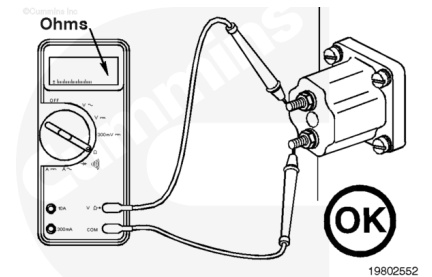

Fuel System Shutoff Valve Solenoid Specifications

Voltage	Resistance Minimum (Ohms)	Resistance Maximum (Ohms)
6 VDC	1	5
12 VDC	6	15
24 VDC	24	50
32 VDC	42	80
36 VDC	46	87
48 VDC	92	145
74 VDC	315	375
115 VAC	645	735

Note : If the solenoid shows 0 ohms, there is an electrical short in the coil.


If the coil resistance does **not** meet specification, the coil **must** be replaced.

Install the solenoid wire when the repair is complete.

Voltage Check

Make sure the shutoff valve coil is the correct voltage (12 or 24 VDC).

The coil voltage and part number are cast into the terminal connection end of the coil.

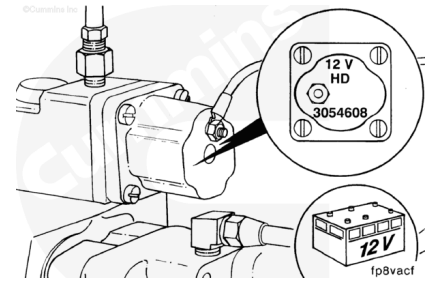


Set the Run/Stop switch to the Run position.

Use a multimeter to check the voltage to the coil.

The voltage **must** be the same as the battery voltage.

Set the Run/Stop switch to the Stop position.

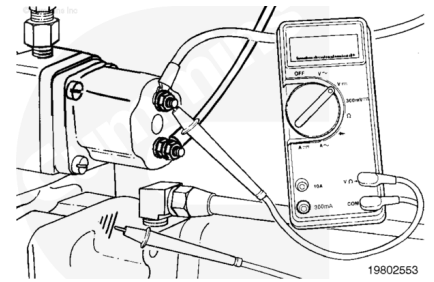


Remove

Note : The fuel shutoff solenoid is the middle actuator on the HPI-TP fuel system. It is located on the fuel delivery housing.

Clean the fuel shutoff valve and surrounding area.

Disconnect the fuel shutoff valve from the engine harness.

Remove the mounting capscrews.

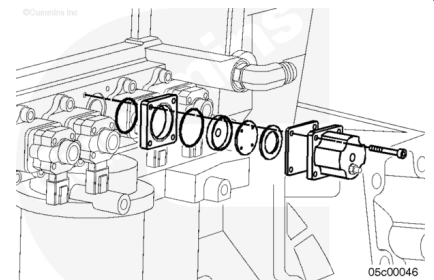


Note : The fuel shutoff solenoid is mounted on the control valve body on the QST30 fuel system.

Note : The fuel shutoff solenoid is mounted on the control valve body on the HPI-PT fuel system.

Clean the fuel shutoff valve and surrounding area.

Disconnect the fuel shutoff valve from the engine harness.


Remove the mounting capscrews.

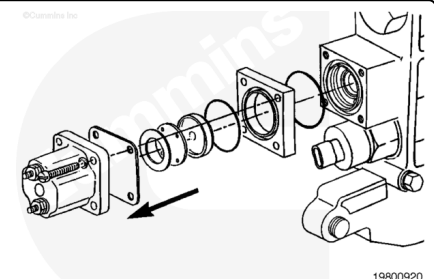

Inspect for Reuse

⚠ WARNING ⚠

When using solvents, acids, or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to reduce the possibility of personal injury.

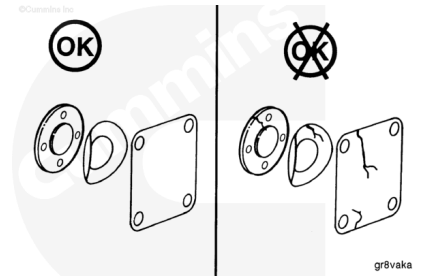

⚠ WARNING ⚠

Some solvents are flammable and toxic. Read the manufacturer's instructions before using.

⚠ WARNING ⚠

Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause personal injury.


Use mineral spirits to clean all of the parts except the solenoid.

Dry with compressed air.


Note : Do not get solution on the solenoid. Clean the solenoid with a dry cloth. Use 200-grit emery cloth and a flat surface to polish the solenoid surface.

Check the fuel shield, spring washer, valve disc, actuator disc, and actuator housing for dirt, bonding separation, corrosion, cracks, or wear. Replace any parts if necessary.

Inspect the fuel shutoff valve spacer for damage or wear. If damage or wear is present, replace the part.

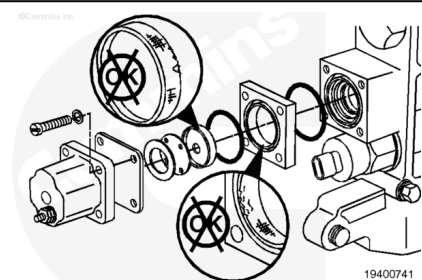

Use a wire brush to clean any corrosion from the solenoid terminal.

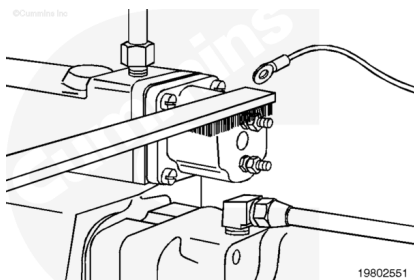


Check the solenoid with a multimeter.

Use the multimeter to check the coil resistance.

Fuel System Shutoff Valve Solenoid Specifications

Voltage	Resistance Minimum (Ohms)	Resistance Maximum (Ohms)
6 VDC	1	5
12 VDC	6	15
24 VDC	24	50
32 VDC	42	80
36 VDC	46	87
48 VDC	92	145
74 VDC	315	375
115 VAC	645	735

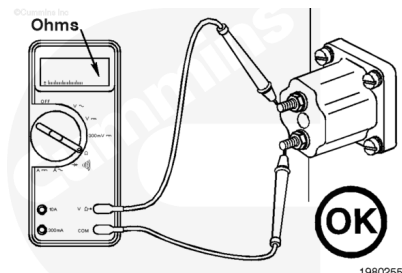

Note : If the solenoid shows 0 ohm, there is an electrical short in the coil.

If the coil resistance does **not** meet specifications, the coil **must** be replaced.


Install the solenoid wire when the repair is complete.

Install

Assemble the shutoff valve as shown. Install these parts as follows.

Install a new o-ring (6) between the spacer (7) and the electronic control valve body (8).

Install the spacer (7) o-ring groove toward the coil. Install the actuator disc (5) with the cup side toward the solenoid. Install the spring washer (3) with the cup side toward the solenoid.

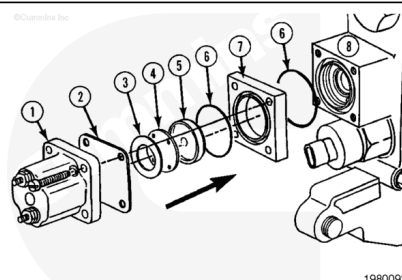

Align the actuator disc (5), spacer (7), and valve disc (4) on the electronic control valve body (8). Install a new o-ring (6).

Put the spring washer (3) on the valve disc (4), with the cavity side positioned upward, in a position around the valve locator.

Note : The solenoid must be orientated with the electrical connection post on the bottom.

Install the fuel shield (2) and solenoid (1) on the electronic control valve body (8). Install a new o-ring and tighten the capscrews.

Torque Value: 8 n•m [72 in-lb]

Install the electrical connection of the fuel shutoff valve. Install the nut on the threaded post of the solenoid.

Use two wrenches. Hold the post of the nut firmly while tightening the connection nut.

Torque Value: 3 n•m [27 in-lb]

