



Trainings ▾

Remove

Cut and remove the plastic hold-down wire tie. Cut away and remove the connector from the harness.

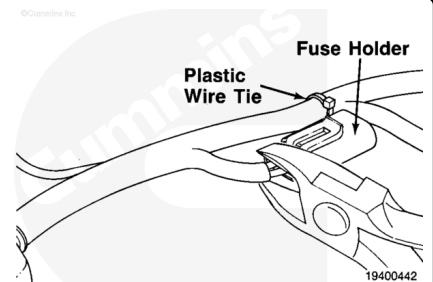


Remove 6 mm [1/4 inch] of insulation from the supply wire.

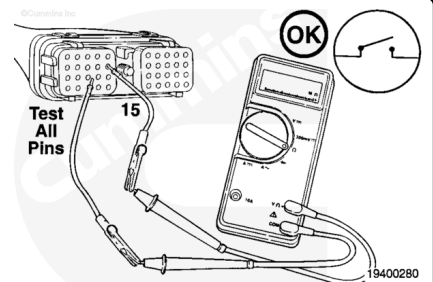

Install


Install the replacement fuse holder, Part Number 3823758, onto the bare wires.

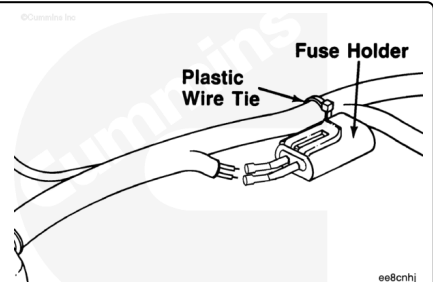

⚠ CAUTION ⚠

Only use wire crimping pliers, Part Number 3822930.

Crimp the repair wire onto the bare wire.

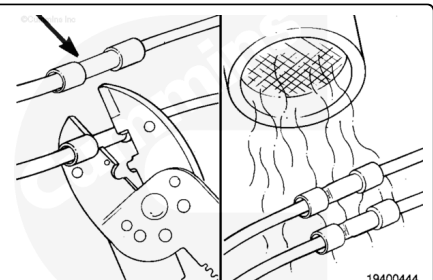

Use a heat gun, Part Number 3823860, to heat the shrink tubing. The tube will shrink and make the connections waterproof.

Last Modified: 10-Nov-2003
