

Trainings ▾

Preparatory Steps

⚠ WARNING ⚠

Some state and federal agencies have determined that used engine oil can be carcinogenic and cause reproductive toxicity. Avoid inhalation of vapors, ingestion, and prolonged contact with used engine oil. If not reused, dispose of in accordance with local environmental regulations.



⚠ WARNING ⚠

To reduce the possibility of personal injury, avoid direct contact of hot oil with your skin.


Note : QSK60 engines with electronically actuated injectors, do not use oil level sensors in the oil sump.

- Partially drain the engine lubricating oil sump or the makeup tank, depending on sensor location. Refer to Procedure 007-002 (</qs3/pubsys2/xml/en/procedures/56/56-007-002.html>) (Lubricating Oil and Filters) in Section 4.

Remove

Lift up on the locking tab and pull the electrical connectors apart.


Remove the sensor.

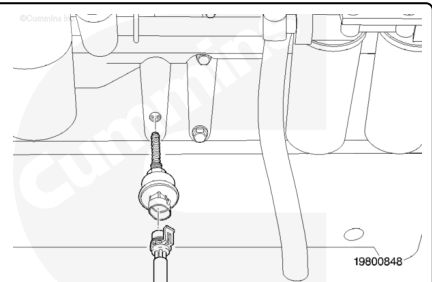

Clean and Inspect for Reuse

⚠ WARNING ⚠

To reduce the possibility of personal injury and property damage, never use starting fluid if the grid heater option is used. Starting fluid, which contains ether, can cause an explosion.

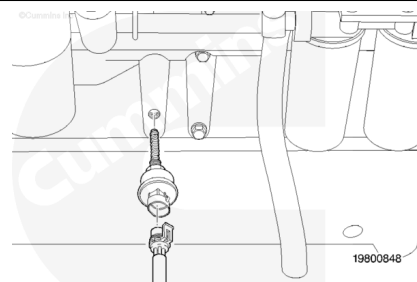

⚠ WARNING ⚠

Because of the potential for an explosion, do not use volatile cold starting aids in underground mine or tunnel operations. Ask the local U.S. Bureau of Mines Inspector for instructions.

⚠ WARNING ⚠

Starting fluid is highly flammable and explosive. Keep flames, sparks, and arcing switches away from starting fluid.

Clean the sensor with ether.

Check the sensor for damaged threads.

Install


Lubricate the sensor o-ring.

Install the new sensor into the engine.

Tighten the sensor.

Torque Value: 14 n•m [124 in-lb]

Push the electrical connectors together until they lock.

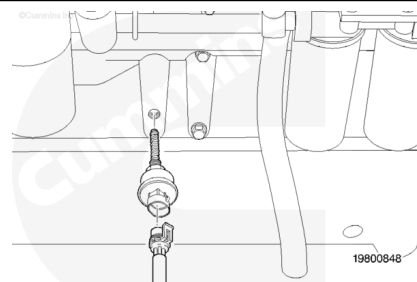

Finishing Steps

- Fill the engine and makeup tank to the proper level with lubricating oil. Refer to Procedure 007-002 (</qs3/pubsys2/xml/en/procedures/56/56-007-002.html>) (Lubricating Oil and Filters) in Section 4.
- Operate the engine and check for leaks.



Last Modified: 13-Oct-2005
