

Trainings ▾

Preparatory Steps

⚠ WARNING ⚠

Some state and federal agencies have determined that used engine oil can be carcinogenic and cause reproductive toxicity. Avoid inhalation of vapors, ingestion, and prolonged contact with used engine oil. If not reused, dispose of in accordance with local environmental regulations.

©Cummins Inc.



ck800wa

⚠ WARNING ⚠


To reduce the possibility of personal injury, avoid direct contact of hot oil with your skin.

- Partially drain the engine lubricating oil system from the makeup tank. Refer to Procedure 007-037 (</qs3/pubsys2/xml/en/procedures/56/56-007-037-tr.html>) in the Troubleshooting and Repair Manual, QSK45 and QSK60 Series Engines, Bulletin 3666261.

Remove

Lift up on the locking tab and pull the electrical connectors apart.

Remove the sensor.

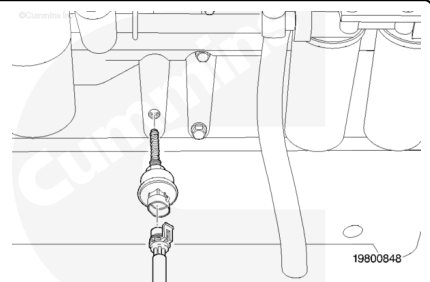

19800848

Clean and Inspect for Reuse

Install


Lubricate the sensor o-ring.

Install the new sensor into the engine.

Tighten the sensor.

Torque Value: 14 n•m [124 in-lb]

Push the electrical connectors together until they lock.

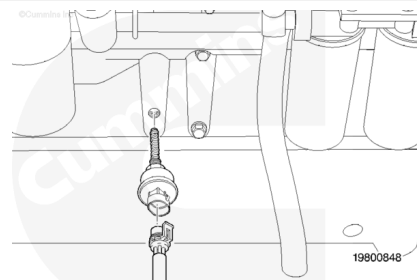

Finishing Steps

- Fill the engine and makeup tank to the proper level with lubricating oil. Refer to Procedure 007-037 (</qs3/pubsys2/xml/en/procedures/56/56-007-037-tr.html>) in the Troubleshooting and Repair Manual, QSK45 and QSK60 Series Engines, Bulletin 3666261.
- Operate the engine and check for leaks.

