


Trainings ▾

Remove

Lift up on the locking tab and pull the electrical connectors apart.

Remove the intake manifold air temperature sensor from the engine.

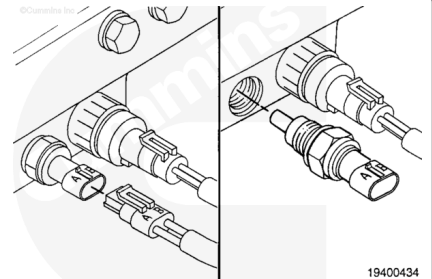


Install


Make sure the new sensor has an o-ring around the surface where it seals against the engine block.

Install the sensor in the engine block.

Torque Value: 14 n•m [124 in-lb]

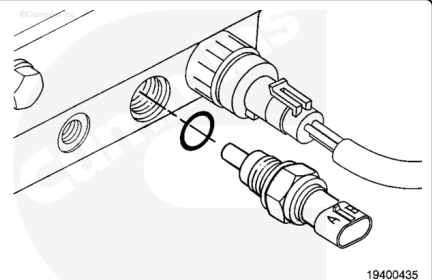


Push connectors together until they lock.

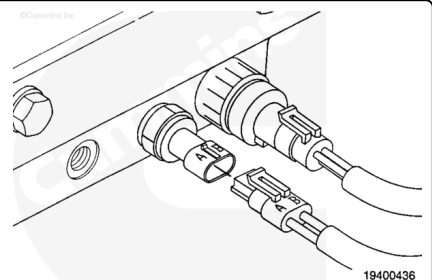


Resistance Check


Lift up on the locking tab and pull the electrical connectors apart.

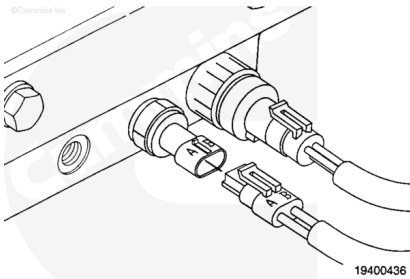

Use a multimeter to measure the resistance between the two pins of the intake air temperature sensor. The resistance **must** be 600 ohms to 36K ohms*. If the resistance is **not** correct, replace the sensor. If the resistance is correct, the sensor **must** still be checked for a short to ground.

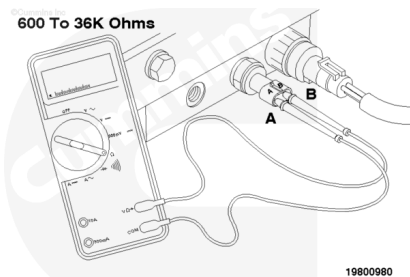

* The resistance value is temperature-dependent as follows:

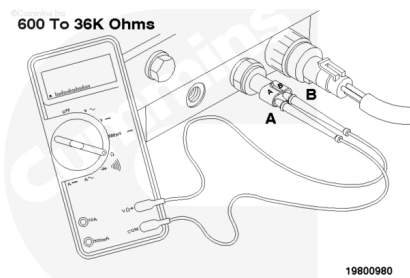

Temperature		Acceptable ResistanceRange
°C	°F	(ohms)
0	32	30k to 36k
25	77	9k to 11k
50	122	3k to 4k
75	167	1350 to 1500
100	212	600 to 675

Check for Short Circuit to Ground

Measure the resistance from a pin of the intake air temperature sensor to the engine block. The multimeter **must** show an open circuit (more than 100K ohms). If the circuit is **not** open, replace the sensor.

