

Trainings ▾


Initial Check

Connect an electronic service tool to the datalink.




Install a 0 to 2030 mm Hg [0 to 80 in Hg] manometer (or gauge) in the [3/8-inch] pipe plug hole in the aftercooler housing.

Do **not** drill and tap a hole in the aftercooler cover. A faulty reading can result if the aftercooler core is leaking.

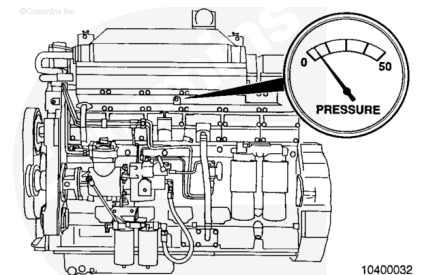

Operate the engine at rated rpm and full load. Compare the reading from the electronic service tool to the gauge reading. If the electronic service tool reading **must** be within 51 mm Hg [2 in Hg] of the gauge reading.


If the intake manifold pressure sensor is **not** within specifications, the intake manifold pressure sensor **must** be replaced.

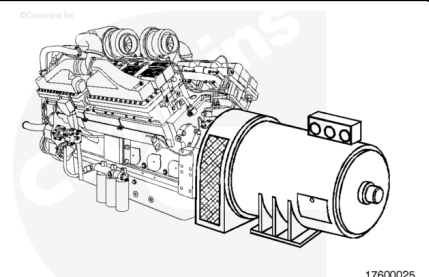

Remove

Disconnect the engine harness from the intake manifold pressure sensor.

Remove the sensor using a deep-well socket, Part Number 3823843.

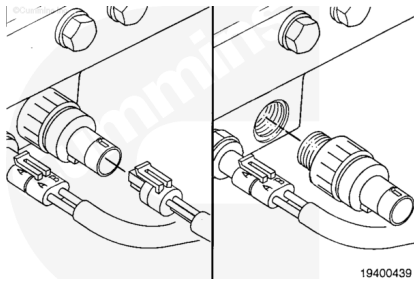


Test

Connect an electronic service tool to the datalink.



Connect the engine harness to the intake manifold pressure sensor.

Allow the sensor and harness to hang in air.

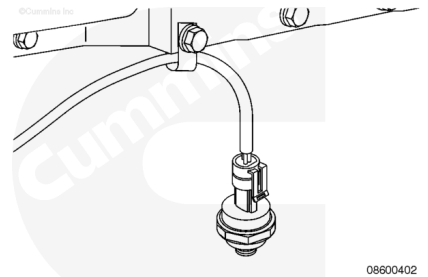

Monitor the intake manifold pressure with the electronic service tool.

The intake manifold pressure **must** be within ± 63.5 mm Hg [2.5 In Hg] of the barometric pressure sensor value.

If the intake manifold pressure sensor is not within specifications, the intake manifold pressure sensor **must** be replaced.

Disconnect the electronic service tool.

Disconnect the intake manifold pressure sensor from the engine harness.




Install

If a new intake manifold pressure sensor is used, make sure the sensor has an o-ring.

Install the sensor into the air intake manifold.

Use a deep-well socket, Part Number 3823843, to tighten the sensor.

Torque Value: 14 n•m [124 in-lb]

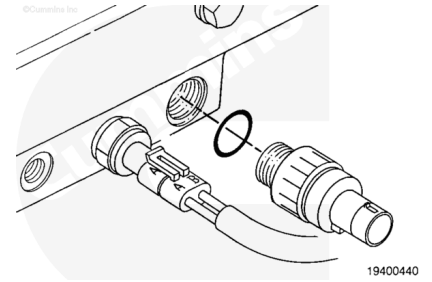

Connect the engine harness to the intake manifold pressure sensor.

