



Trainings ▾

Remove

Disconnect the engine harness from the sensor.

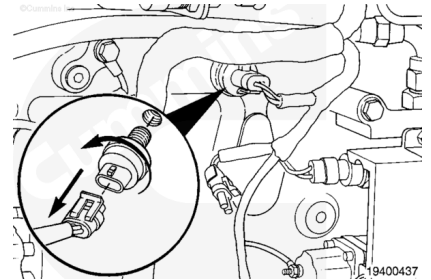

Remove the oil pressure sensor from the engine block with a deep-well socket, Part Number 3823843.

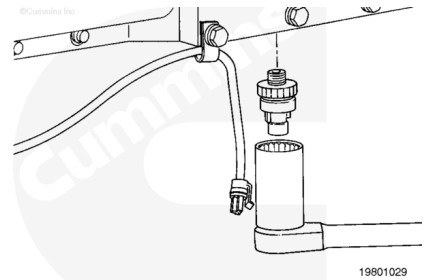


Test

Connect the electronic service tool to the datalink.



Connect the engine harness to the lubricating oil pressure sensor.

Allow the sensor and harness to hang in air.

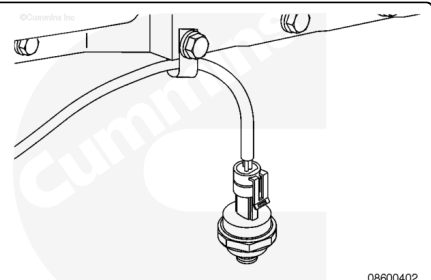

Monitor the lubricating oil pressure with the electronic service tool.

For the QSK23, QSK45, and QSK60 engines the lubricating oil pressure sensor **must** be within ± 17.2 kPa [2.5 psi] (gauge) of zero.

For the QSX15, QST30 and QSK78 engines the lubricating oil pressure sensor **must** be within ± 17.2 kPa [2.5 psi] (absolute) of the barometric pressure sensor value.

If the lubricating oil pressure sensor is **not** within specifications the lubricating oil pressure sensor **must** be replaced.

Disconnect the lubricating oil pressure sensor from the engine harness.

Disconnect the electronic service tool.



Install

If a new lubricating oil pressure sensor is used make sure the o-ring is installed.

Install the lubricating oil pressure sensor into the engine block.

Use a deep-well socket, Part Number 3823843 to tighten the lubricating oil pressure sensor.

Torque Value: 14 n•m [124 in-lb]

Connect the engine harness to the lubricating oil pressure sensor.

