

Trainings ▾

Initial Check

Connect the electronic service tool to the datalink.



Turn the Run/Stop switch to the Run position.

Monitor the timing pressure with the electronic service tool.

The fuel timing pressure **must** be 101.4 kPa [14.7 psi] if at sea level or approximately equal to the barometric pressure.

Start the engine and let it idle. Monitor the timing pressure with the electronic service tool. The fuel timing pressure **must** be 413.7 kPa [60 psi].


If the fuel timing pressure sensor is **not** within specifications, the fuel timing pressure sensor **must** be replaced.




Remove

Clean the control valve body around the fuel timing pressure sensor.

Disconnect the engine harness from the fuel timing pressure sensor.

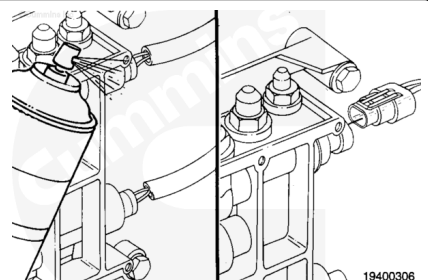

Remove the fuel timing pressure sensor using a deep-well socket, Part Number 3823843.

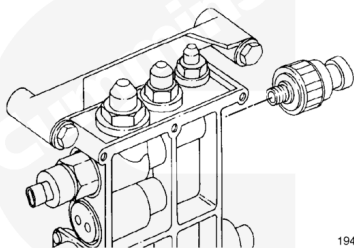

19400307

Test

Connect the electronic service tool to the datalink.

©Cummins Inc.




19800902

Connect the engine harness to the fuel timing pressure sensor.

Allow the sensor and harness hang in air.

©Cummins Inc.

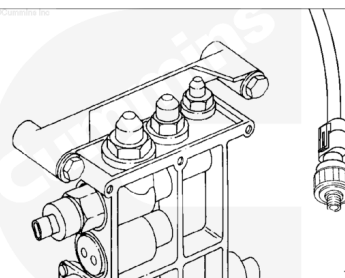

19e00166

Monitor the fuel timing pressure with the electronic service tool.

The fuel timing pressure **must** be within ± 58.6 kPa [8.5 psi] of the barometric pressure sensor value.

If the fuel timing pressure sensor is **not** within specifications, the fuel timing pressure sensor **must** be replaced.

Disconnect the electronic service tool.

Disconnect the fuel timing pressure sensor from the engine harness.

©Cummins Inc.



19800902

Install

If a new fuel timing pressure sensor is used, make sure the o-ring is installed.

Install the sensor into the electronic control valve assembly. Use a deep-well socket , Part Number 3823843, to tighten the sensor.

Torque Value: 14 n•m [124 in-lb]

Connect the engine harness to the timing rail pressure sensor.

