


Trainings ▾

General Information


QSX15

The fuel rail pressure sensor is located on the fuel delivery housing, of the integrated fuel management system toward, the front of the engine on the QSX15.

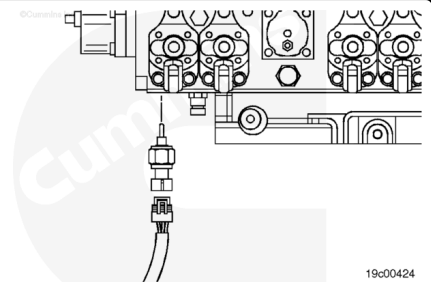

QSK23, QSK45, QSK60, and QSK78

The fuel rail pressure sensor is located as part of the control valve body on the QSK23, QSK45, QSK60, and QSK78 engines.

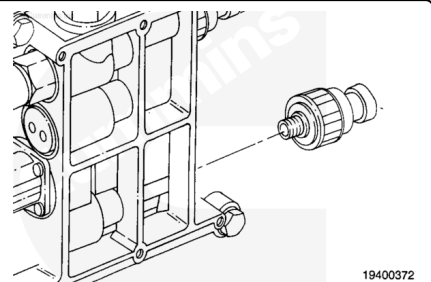


Remove

QSX15

Clean the area around the fuel rail pressure sensor.

Disconnect the engine harness from the fuel rail pressure sensor.


Remove the fuel rail pressure sensor from the integrated fuel management system.

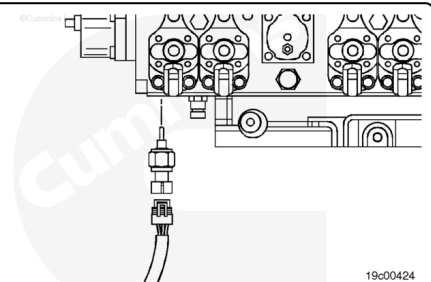


QSK23, QSK45, QSK60, and QSK78

Clean the electronic control valve body around the fuel rail pressure sensor.

Disconnect the engine harness from the sensor.

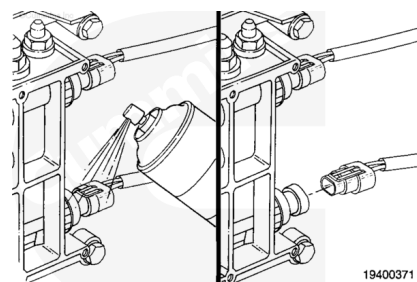

Remove the fuel rail pressure sensor with a deep-well socket, Part Number 3823843.

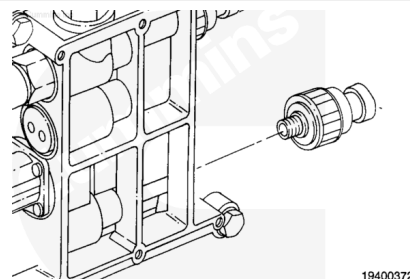

Test


Connect the electronic service tool to the datalink.



QSX15

Connect the engine harness to the fuel rail pressure sensor.

Allow the fuel rail pressure sensor and harness to hang in air.

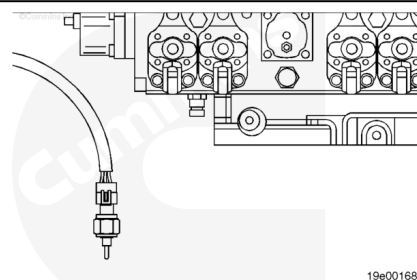

Monitor the fuel rail pressure with the electronic service tool.

The fuel rail pressure **must** be within ± 41.4 kPa [6 psi] of the barometric pressure sensor value.

If the fuel rail pressure is **not** within specification, the fuel rail pressure sensor **must** be replaced.

Disconnect the electronic service tool.


Disconnect the fuel rail pressure sensor from the engine harness.



QSK23, QSK45, QSK60, and QSK78

Connect the engine harness to the fuel rail pressure sensor.

Allow the fuel rail pressure sensor and harness to hang in air.

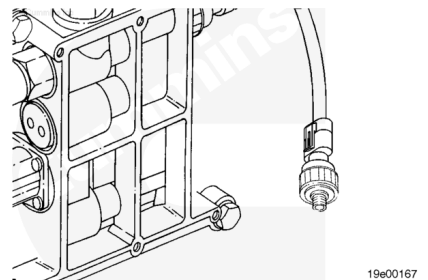

Monitor the fuel rail pressure with the electronic service tool.

The fuel rail pressure **must** be within ± 41.4 kPa [6 psi] of the barometric pressure sensor value.

If the fuel rail pressure is **not** within specification, the fuel rail pressure sensor **must** be replaced.

Disconnect the electronic service tool.

Disconnect the fuel rail pressure sensor from the engine harness.



Install


QSK15

If a new fuel pressure sensor is used, make sure the o-ring is installed.

Install the fuel rail pressure sensor and tighten.

Torque Value: 14 n•m [124 in-lb]

Connect the engine harness to the fuel rail pressure sensor.

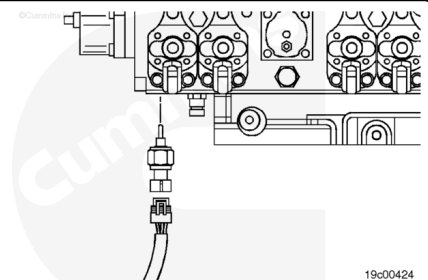

QSK23, QSK45, QSK60, and QSK78

If a new fuel pressure sensor is used, make sure the o-ring is installed.

Install the fuel rail pressure sensor into the electronic control valve assembly.

Use a deep-well socket, Part Number 3283843 to tighten the fuel rail pressure sensor.

Torque Value: 14 n•m [124 in-lb]

Connect the engine harness to the fuel rail pressure sensor.

