


Trainings ▾


Remove

Clean the area around the fuel pump actuator.

Disconnect the fuel pump actuator from the engine harness.

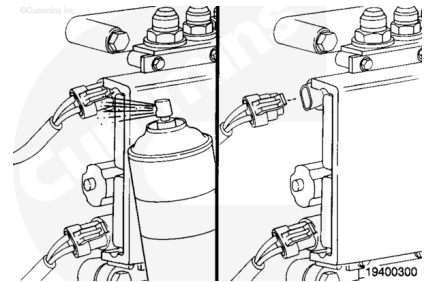

Remove the fuel pump actuator.

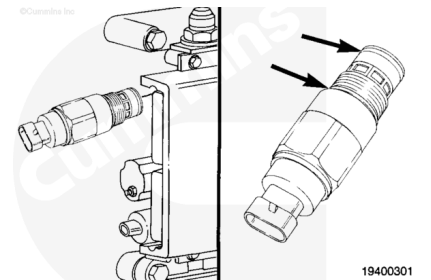

Install

Install a new fuel pump actuator using a new o-ring.

Torque Value: 24 n•m [212 in-lb]

Connect the actuator connection.

