


Trainings ▾

Remove

Disconnect the engine harness from the pressure sensor.

Remove the fuel pump pressure sensor from the fuel pump.

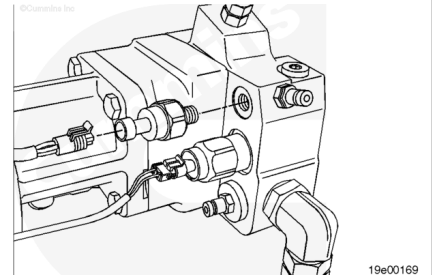


Test

Connect the electronic service tool to the datalink.




Connect the engine harness to the fuel pump pressure sensor.

Allow the sensor and harness to hang in air.

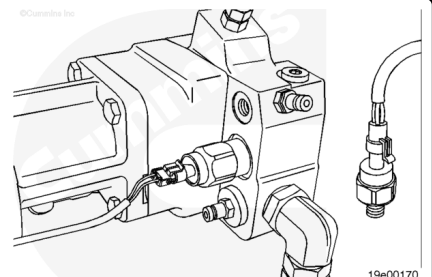

Monitor the fuel pump pressure with the electronic service tool.

The fuel pump pressure **must** be within ± 110.3 kPa [16 psi] of the barometric pressure sensor value.

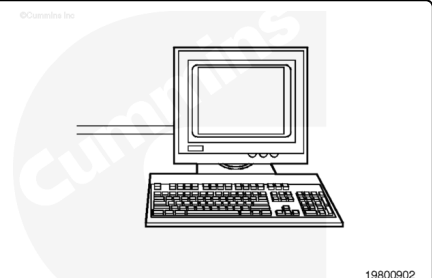


If the fuel pump pressure is **not** within specification, the fuel pump pressure sensor **must** be replaced.

Disconnect the electronic service tool.

Disconnect the fuel pump pressure sensor from the engine harness.

Install

If a new fuel pump pressure sensor is used, make sure the o-ring is installed.

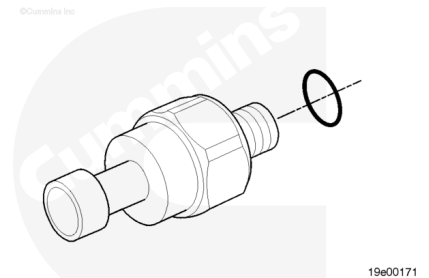

Install the fuel pump pressure sensor.

Torque Value: 14 n•m [124 in-lb]

Connect the engine harness to the fuel pump pressure sensor.

