


Trainings ▾


Remove

Clean the area around the sensor.

Lift up on the locking tab and pull the electrical connectors apart.

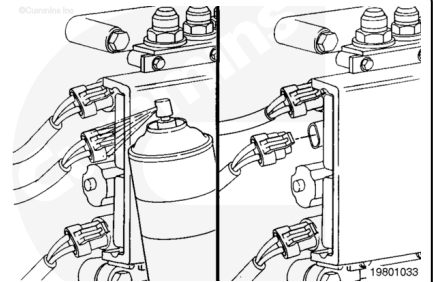


Remove the sensor using a deep well socket, Part No. 3823843.

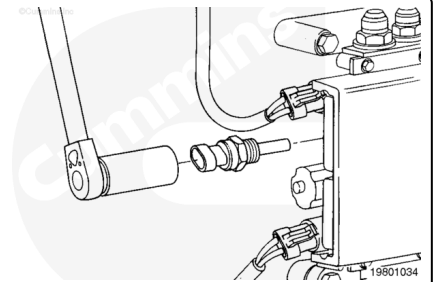

Install


Check that the new sensor has an o-ring installed.

Lubricate the o-ring with clean engine oil.

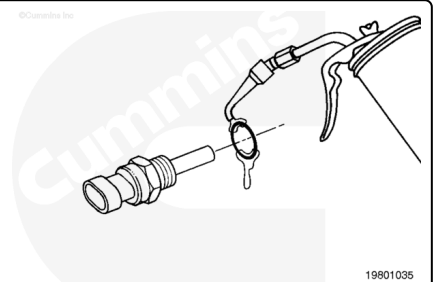


Install the new sensor into the control valve body.

Torque Value: 14 n•m [124 in-lb]

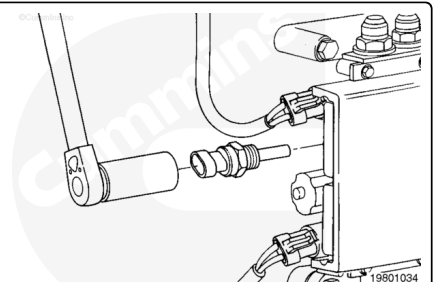


Use quick-dry electrical contact cleaner, Part No. 3824510, to remove all dirt and moisture from harness connector.

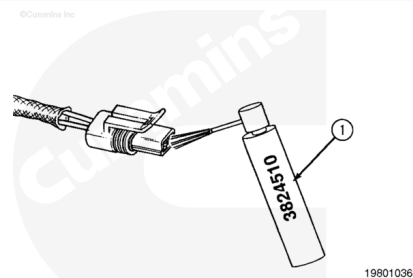

⚠ CAUTION ⚠

Use only Cummins-recommended lubricant DS-ES, Part No. 3822934. Other lubricants, such as lubricating oil or grease, in the connectors can cause ECM damage, poor engine performance, or premature connector wear.

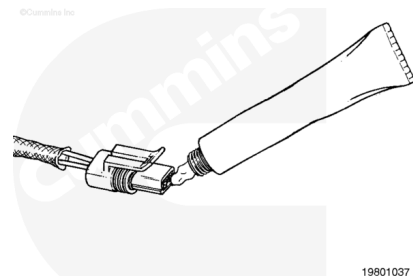

Apply a thin coating of lubricant to the harness connector.

Push the connectors together until they lock.

Operate the engine to check for leaks.

