



Trainings ▾

Remove

Lift up on the locking tab and pull the electrical connectors apart.

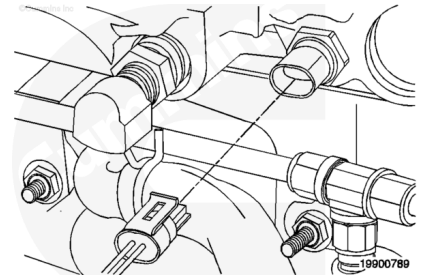

Remove the sensor from the engine.

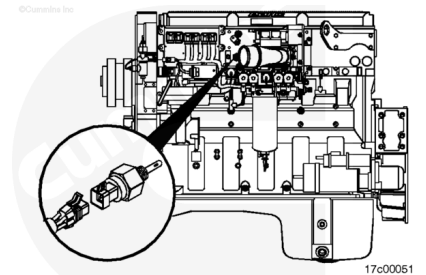


Install


Make sure the new sensor has an o-ring.

Install the new sensor into the engine. Tighten the sensor.

Torque Value: 14 n•m [124 in-lb]

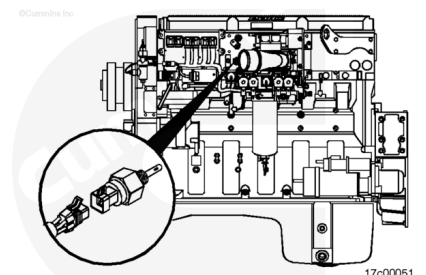

Push the connectors together until they lock. A click will be heard as the connector locks in place.

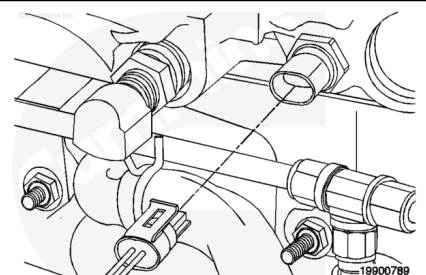

Last Modified: 05-Dec-2002