



Trainings ▾

General Information

The generator-drive control system engines will have multiple harnesses.

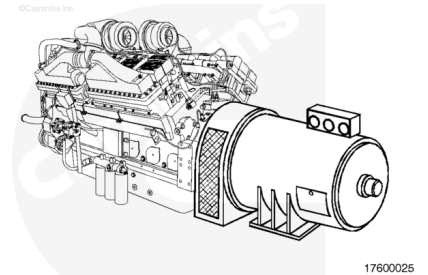


The extension harness runs from the ECM to the engine inline connectors A, B, C, and D.

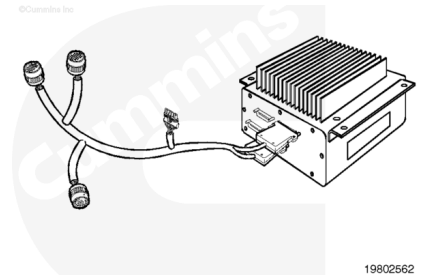


Remove


Disconnect the extension harness from the ECM at connectors 02 and 05.

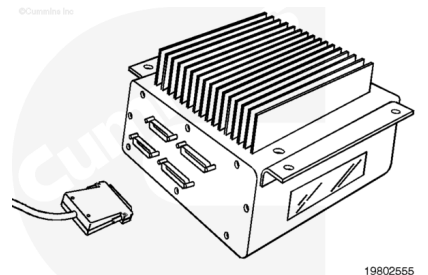

Disconnect the extension harness from the Inline A, Inline B, and Inline C connectors.

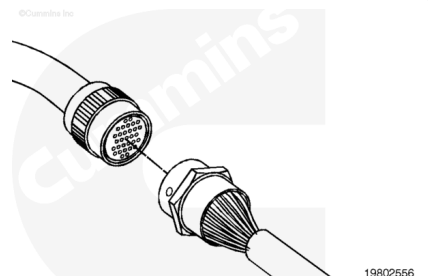


Disconnect the extension harness from the Inline D connector.

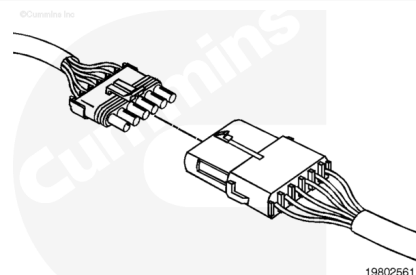

Remove any harness supports.

Double-check that all extension harness connections are disconnected and untangled.

Slowly pull the extension harness away from the generator, making sure that there is no binding or tangling.

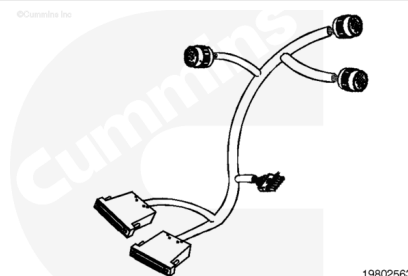


Install


Place the extension harness on the generator.

Fasten the extension harness to the generator at the harness supports.

Connect Inline D to the extension harness.

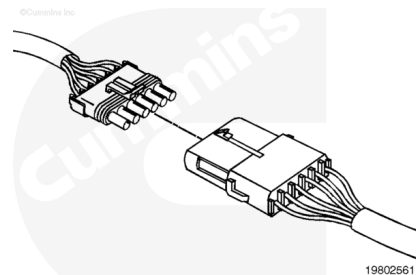


Connect the Inline A, Inline B, and Inline C connectors to the extension harness.

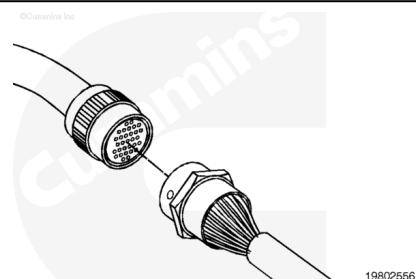

Connect the extension harness to the ECM connectors 02 and 05.

©Cummins Inc.

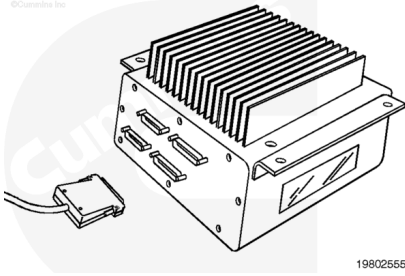

19802555

Double-check that all harness connections are secure.

Connect the electronic service tool and check for any fault codes.

©Cummins Inc.



19800902