


Trainings ▾


General Information

The generator-drive control system-equipped engines will have multiple harnesses.

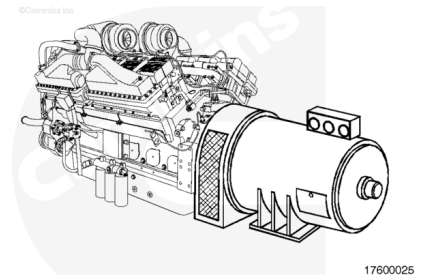


The generator control harness is supplied by the OEM, and is wired to the generator-drive control system module connectors 03 and 06.

Note : The following steps are for a generic wiring of the generator control harness. Refer to the OEM manual for more specific instructions.

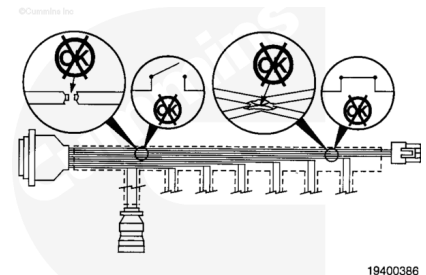


Remove

Disconnect the generator control harness from the battery.

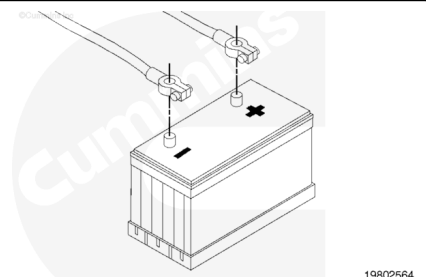


Disconnect the generator control harness from the switches.

1. Emergency stop switch
2. Remote emergency stop switch
3. Run/stop switch
4. Alarm reset switch

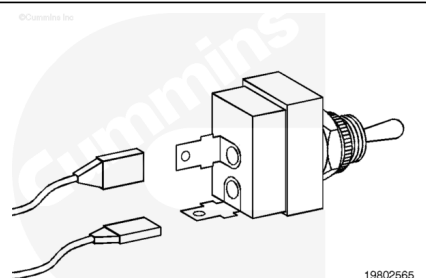


1. Idle/rated switch
2. Diagnostic mode switch
3. Alternate frequency switch
4. Crank switch.

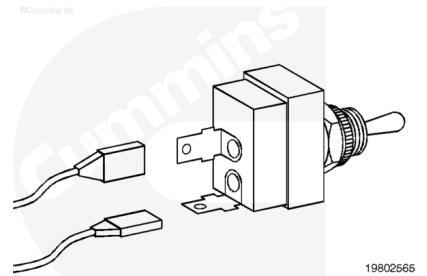


Disconnect the generator control harness from the potentiometers.

1. Droop adjust potentiometer
2. Frequency adjust potentiometer.

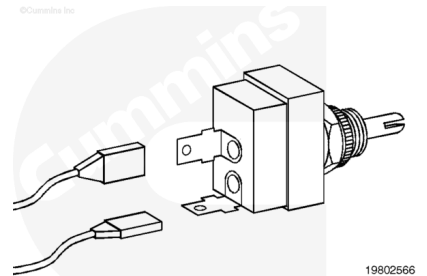


Disconnect the generator control harness from the meters.

1. Engine speed meter
2. Oil pressure meter
3. Coolant temperature meter.

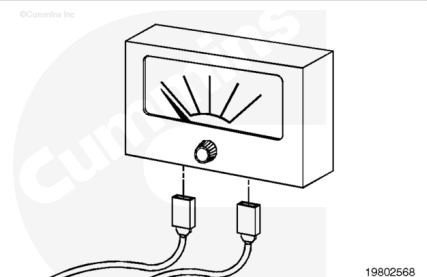


Disconnect the generator control harness from the lamps.


1. Common warning
2. Common shutdown
3. High engine temperature
4. Low oil pressure
5. Overspeed
6. Prehigh engine temperature
7. Prelow oil pressure
8. Fail to start.

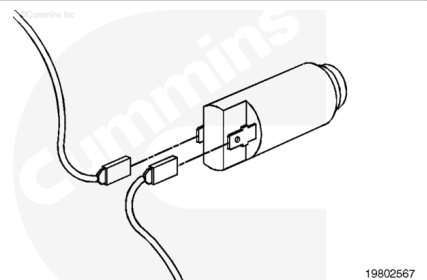


Disconnect the generator control harness from the RS-485 interface (if equipped).

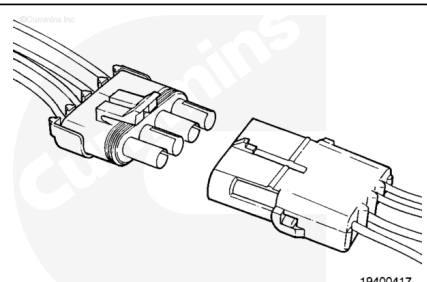


Disconnect the generator control harness from the Woodward or Barber-Colman governor (if equipped).

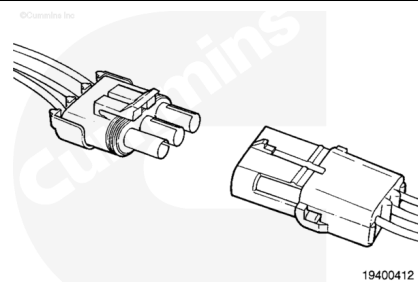

Disconnect the generator control harness from the crank coil.

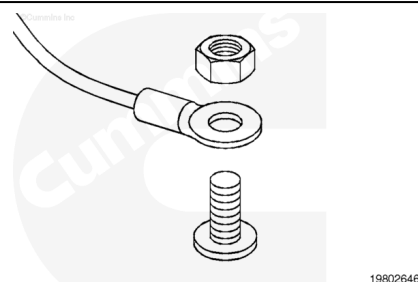

Disconnect the generator control harness from the Back-up Start Disconnect.

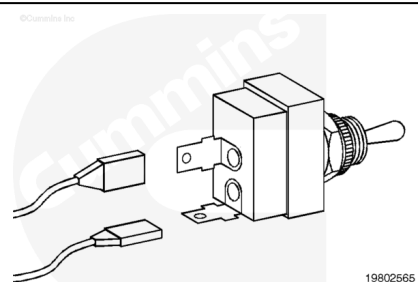


Disconnect the generator control harness connectors 03 and 06 from the ECM.

Remove any harness supports.

Double-check that all harness connections are disconnected and untangled.

Slowly pull the harness away from the generator, making sure that there is no binding or tangling.

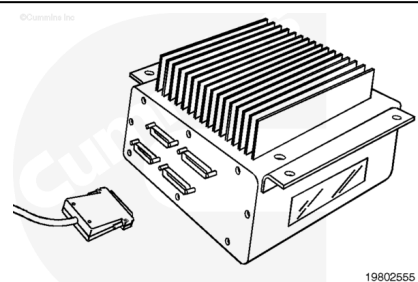


Install

Place the generator control harness on the generator.


Fasten the generator control harness to the generator at the harness supports.

Note : The following steps are for a generic wiring of the generator control harness. Refer to the OEM manual for specific instructions.


Connect the generator control harness connectors 03 and 06 to the ECM.

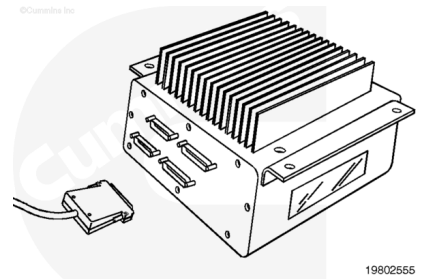


Connect the Back-up Start Disconnect to the generator control harness.

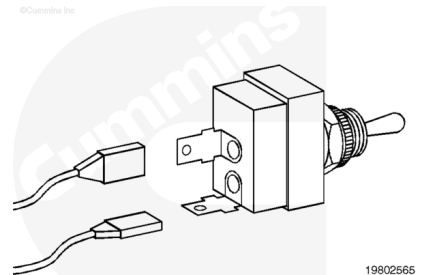


Connect the crank coil to the generator control harness.

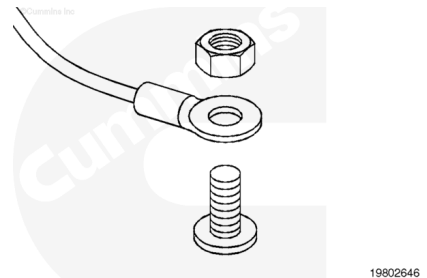

Connect the Woodward or Barber-Colman governor (if equipped) to the generator control harness.

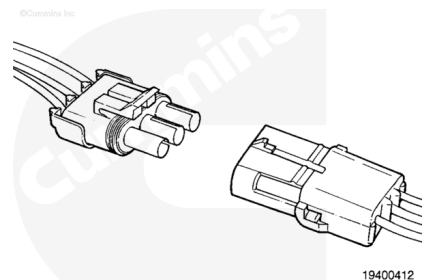


Connect the RS-485 interface (if equipped) to the generator control harness.

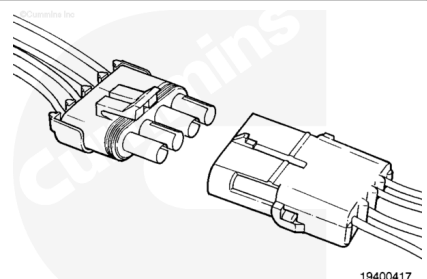

Connect the lamps to the generator control harness.

1. Common warning
2. Common shutdown


3. High engine temperature
4. Low oil pressure
5. Overspeed
6. Prehigh engine temperature
7. Prelow oil pressure
8. Fail to start.

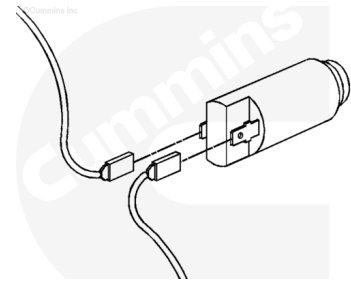

19802567

Connect the meters to the generator control harness.


1. Engine speed meter
2. Oil pressure meter
3. Coolant temperature meter.

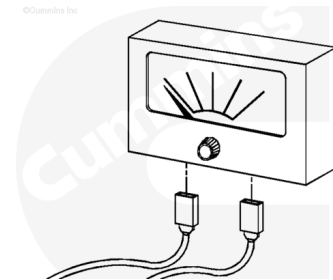

19802568

Connect the potentiometers to the generator control harness.


1. Droop adjust potentiometer
2. Frequency adjust potentiometer.

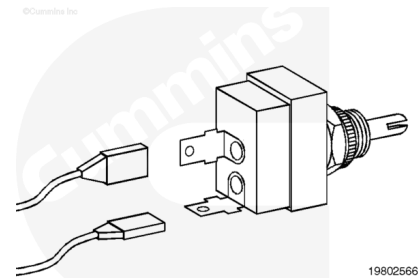

19802566


Connect the switches to the generator control harness.

1. Crank switch
2. Alternate frequency switch
3. Diagnostic mode switch
4. Idle/rated switch

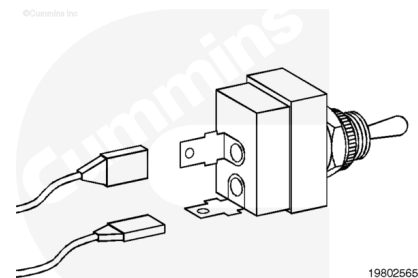


19802565

1. Alarm reset switch
2. Run/stop switch
3. Remote emergency stop switch
4. Emergency stop switch.

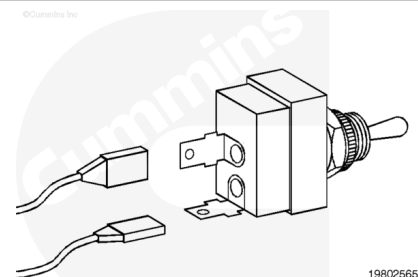

19802565

Connect the battery to the generator control harness.

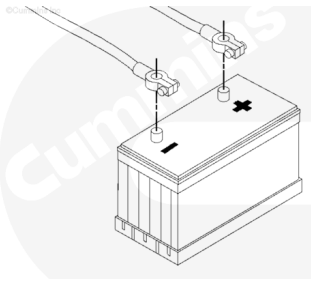

19802564

Double-check that all harness connections are secure.

Connect the electronic service tool and check for any fault codes.

©Cummins Inc.



19800902