


Trainings ▾


General Information

The control panel assembly is made up of the operator interface panel and switch panel. The switch panel is mounted on the rear of the alternator housing. The operator interface panel can be mounted to the left of the switch panel or it can be mounted remotely.

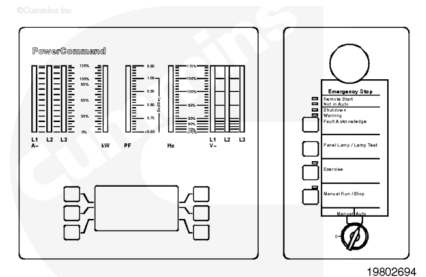


Remove

Access to the switch panel (operator interface panel removal is similar), is gained through the rear of the control panel assembly. Open the controls box on the rear of the alternator. (On some QSK60 generator sets, sheet metal on the side of the alternator will need to be unbolted to gain access).

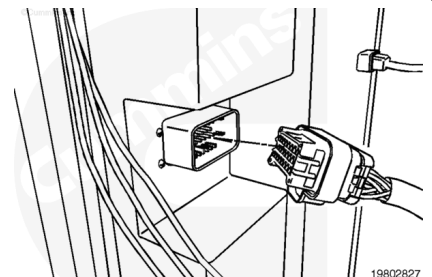


Disconnect the 23-pin AMP connector 23 from the switch panel.

When removing the operator interface panel, disconnect the 12-pin Deutsch connector 21 operator interface panel.

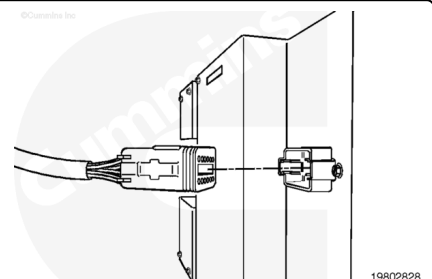


Remove the ground strap on rear of panel.

Remove the nut and washer at each corner of the panel.

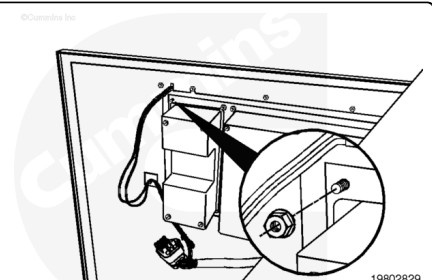


Pull switch panel forward through the front of the control panel assembly.

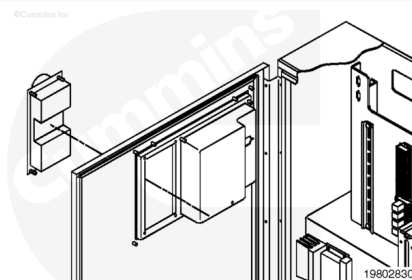


Install


Access to the switch panel (operator interface panel installation is similar), is gained through the rear of the control panel assembly. Open the controls box on the rear of the alternator. (On some QSK60 generator sets, sheet metal on the side of the alternator will need to be unbolted to gain access).

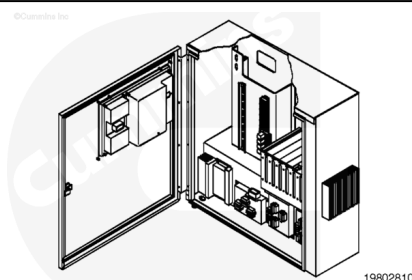

Insert switch panel through the front of the control panel assembly.

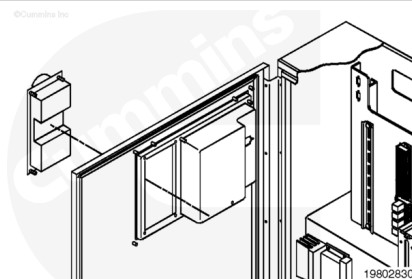

Install the ground strap on the rear of the panel.
Install the nut and washer at each corner of the panel.

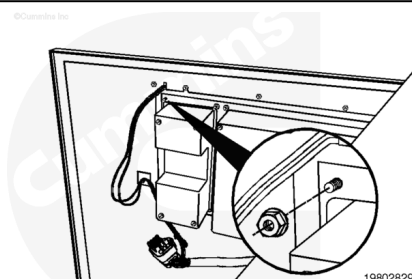

Connect the 23-pin AMP connector 23 to the switch panel.

When installing the operator interface panel, connect the 12-pin Deutsch connector 21 to the operator interface panel.

Replace all sheet metal to controls box or close controls box.

