


Trainings ▾

Remove

The bus PT module is located in the controls box. Installation can vary. Some generator sets will have the bus PT module mounted behind the PT/CT board.

Remove the wiring from the bus PT module terminal block posts at TB1 and TB2. Remove each of the wires by loosening the corresponding screw on the bus PT module.

Remove the four capscrews that hold the bus PT module to the controls box.

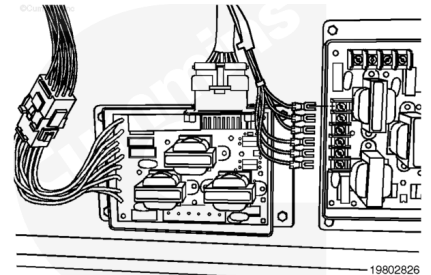

Install

Install the new bus PT module terminal block posts at TB1 and TB2. Install each of the wires and tighten the corresponding screw on the bus PT module.

