


Trainings ▾


General Information

The terminal blocks supply customer connections for customer-supplied wiring that interfaces with the control. Terminal blocks are located on all ECM circuit boards (except fuel board), with the exception of TB3, which is mounted on its own terminal rail.

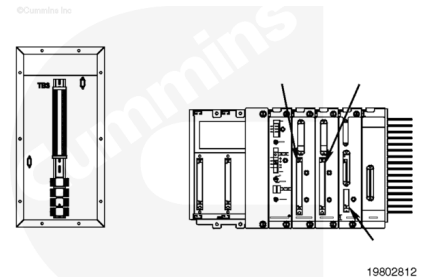


Remove


Unscrew the mounting screw at each end of the terminal block to remove terminal block TB4, TB5, TB6, or TB8.

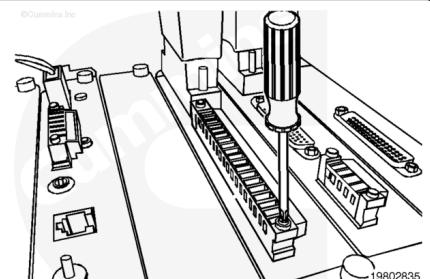

Pull the terminal block off of the circuit board.

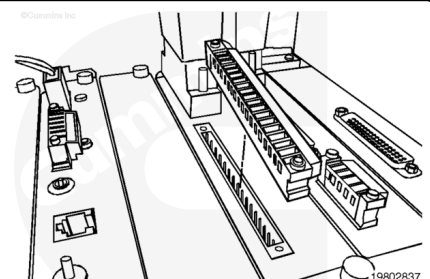


Disconnect all customer wiring to the terminal block. Loosen each corresponding screw along the side of the terminal block. Be sure to label wires for installation.

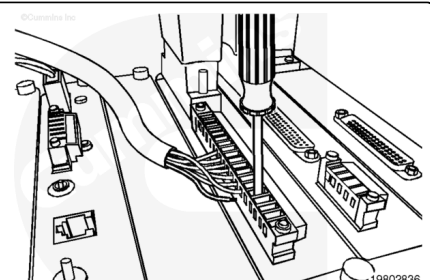


Install

Install all customer wiring into the new terminal block. Tighten each corresponding screw along the side of the terminal block. Make sure the wires are secure.

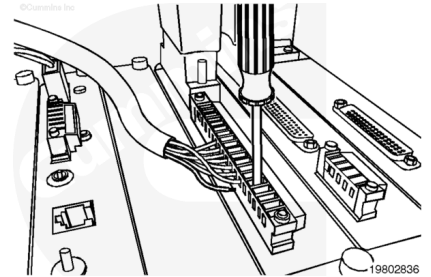

Locate the terminal block in the proper position on the correct circuit board.

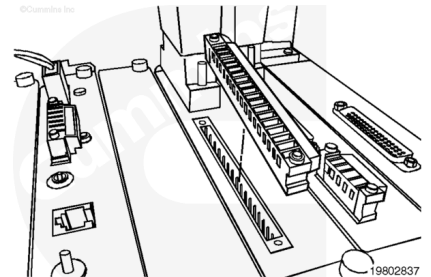

Tighten the mounting screw on each end of the terminal block. Using the electronic service tool, check for active fault codes.

