


Trainings ▾


Remove

Clean the area around the fuel pump pressure sensor.

Disconnect the sensor from the engine harness.

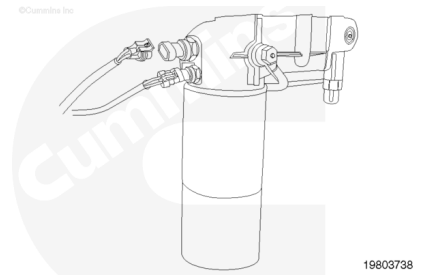

Remove the fuel pump pressure sensor.

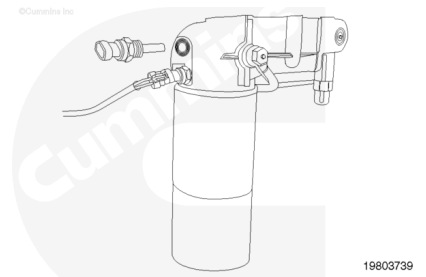


Install


Install a new o-ring on the sensor. Lubricate the o-ring with clean engine oil.

Install a new fuel pump pressure sensor.

Torque Value: 14 n•m [124 in-lb]

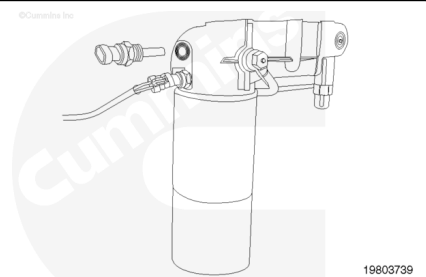


Use quick-dry electrical contact cleaner (1), Part Number 3824510, to remove all dirt and moisture from the harness connector.

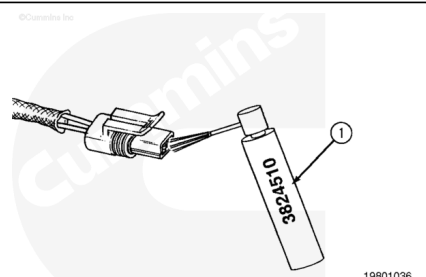

⚠ CAUTION ⚠

Use only Cummins recommended lubricant DS-ES, Part Number 3822934. Other lubricants, such as oil or grease, in the connectors can cause ECM damage, poor engine performance, or premature connector wear.

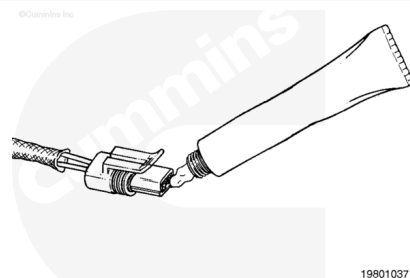

Apply a thin coating of lubricant to the harness connector.

Push the sensor connector and engine harness together until they lock.

Operate the engine to check for leaks.

