


Trainings ▾

ECM Dataplate

The external ECM dataplate is located on the side of the ECM opposite the ECM connectors.

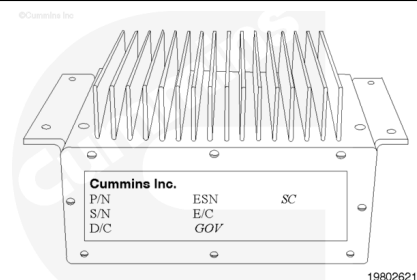

The dataplate contains the ECM part number (P/N), the ECM serial number (S/N), the manufacturing date code (D/C), the engine serial number (ESN), the electronic configuration (E/C), the governor type (GOV, this entry will be blank), and the software calibration option (S/C).

