


Fault Code: 1327

Load Governed Kilowatt Setpoint - Analog Input Signal Circuit

 Printable Version

Overview

Codes	Reason	Effect
Fault Code: 1327 PID(P): SPN: FMI: Lamp: Shutdown SRT:	The analog input signal for the load governed kilowatt setpoint is outside the acceptable working limits.	Generator set will shut down.

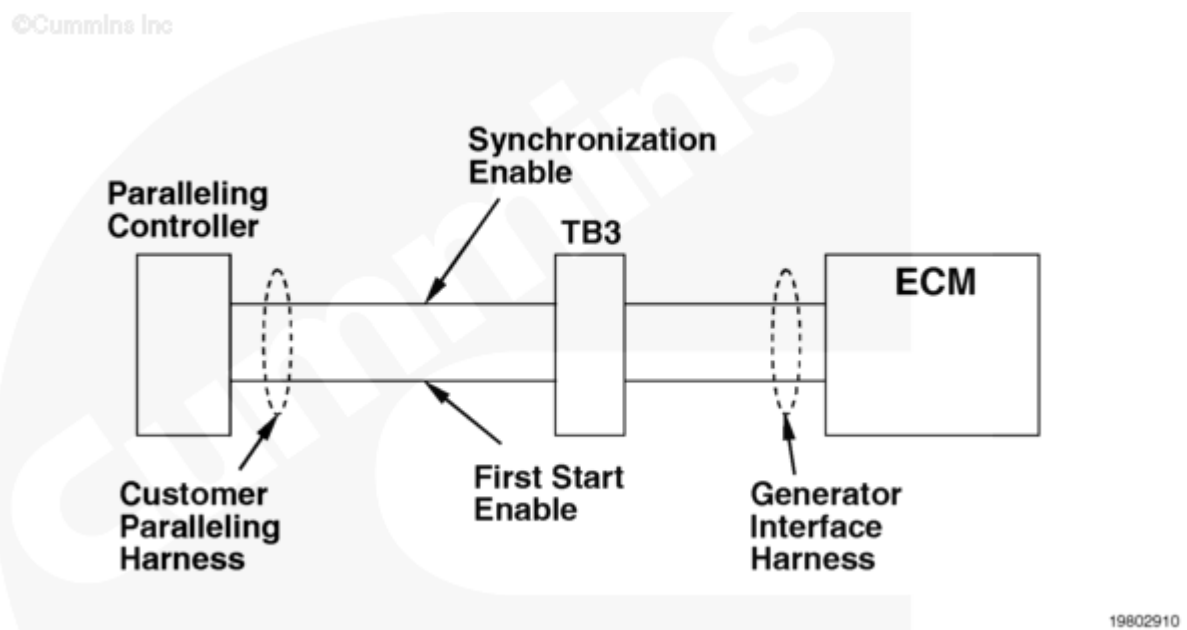

Load Govern Kilowatt Setpoint - Paralleling Controller Circuit

Circuit Description

The load govern kilowatt setpoint analog input signal is an external input into the engine control module used for load governing of the engine/generator set. The load govern kilowatt setpoint analog input signal is sent to the engine control module from the paralleling controller.

The engine control module monitors the voltage on the load govern kilowatt setpoint analog input signal pin and expects to see a voltage vary between 0.5 and 4.5-VDC during normal engine operation.

Low voltage will trip Fault Code 1327 and can be caused by shorts in the signal wire, an open in the signal, a failed input device, or an improper setup.

Component Location

Refer to Section E for location of the engine control module card cage.

Refer to customer/facility/installation documentation for the location of the paralleling controller.

Shoptalk

The possible failure modes are open circuit, short to ground, and failed input device.

If analog input signal source is **not** set up to provide a 0 to 5-VDC signal, you **must** disable load govern kilowatt setpoint range checking enable using INSITE™ electronic service tool.

Load Govern Operating Load Level	
VDC	Operating Load Level
0 to 0.5	Ramp from present load to no load
0.5 to 1.0	No load
1.0 to 4.5	0 to 100% of standby rating
4.5 to 5.0	100% of standby rating

Refer to Troubleshooting Fault Code t05-1327. (</qs3/pubsys2/xml/en/procedures/01/01-t05-1327.html>)