

Fault Code: 1328


Generator Set Circuit Breaker

 Printable Version

Overview

Codes	Reason	Effect
Fault Code: 1328 PID(P): SPN: FMI: Lamp: Warning SRT:	The generator set circuit breaker has tripped.	Load dump will occur. Generator set continues to run.

©Cummins Inc

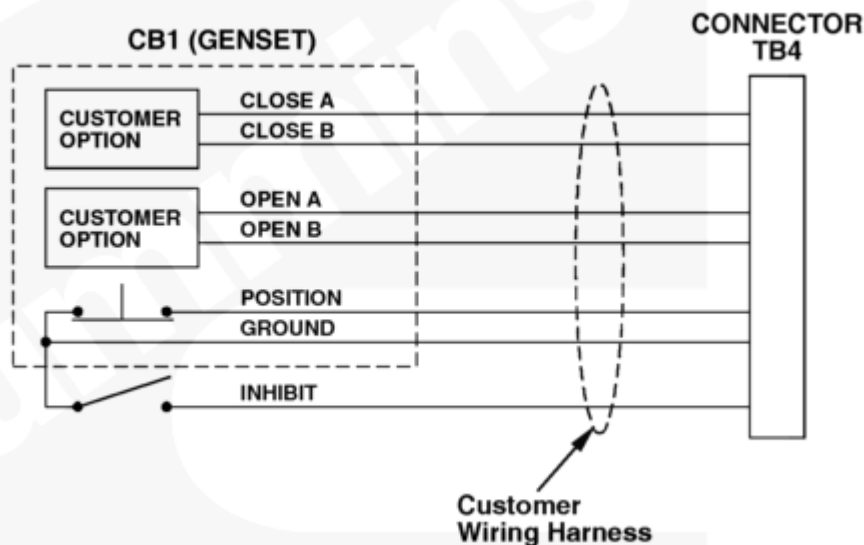

19802904

Generator Set Circuit Breaker Circuit

Circuit Description

The generator set circuit breaker is the switch for the generator set's connection to the bus. The circuit breaker opens when events have occurred, which forces the generator set to no longer be connected to the bus. The circuit breaker closes when the generator set is to be connected to the bus.

This fault code is used by the ECM to tell the operator that, due to an event, the generator set is to be disconnected from the bus.

Component Location

Refer to Section E for location of the ECM card cage.

Refer to customer/facility/installation documentation for the location of the generator set circuit breaker.

Shoptalk

The possible failure modes are short circuit, open circuit, and failed generator set circuit breaker.

The circuit breaker is an overcurrent protection device.

In paralleling, the generator set circuit breaker acts as a switch to autoconnect generator set to system bus and other generator sets.

Refer to Troubleshooting Fault Code t05-1328 (</qs3/pubsys2/xml/en/procedures/01/01-t05-1328.html>)