


## Fault Code: 1332

### Off/Manual/Auto Switch Circuit - Voltage Below Normal or Shorted to Low Source

 Printable Version

#### Overview

| Codes                                                                    | Reason                                            | Effect                                                           |
|--------------------------------------------------------------------------|---------------------------------------------------|------------------------------------------------------------------|
| Fault Code: 1332<br><br>PID(P):<br>SPN:<br>FMI:<br>Lamp: Warning<br>SRT: | The Off/Manual/Auto switch signal is shorted low. | The ECM will <b>only</b> allow the generator set to run in Auto. |

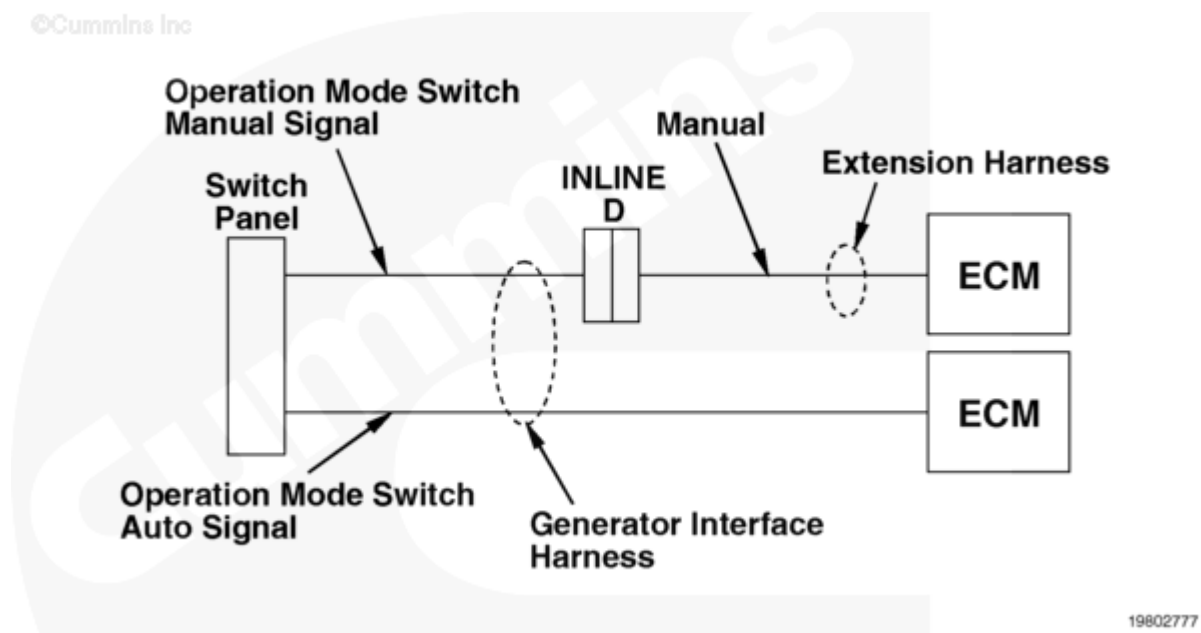

Off/Manual/Auto Switch Circuit

#### Circuit Description

The Off/Manual/Auto switch is monitored by the engine control module (ECM) to determine the operation mode of the generator set.

The ECM monitors the voltage on the operation mode switch manual SIGNAL pin and expects to see a voltage vary between 0.5 and 4.5-VDC during normal operation. The ECM monitors the voltage on the operation mode switch auto SIGNAL pin and expects to see a voltage of either 0

or 5-VDC during normal operation. Low voltage will trip Fault Code 1332 and can be caused by shorts in the signal, or return wires, an open in the return wire, or a failed switch.

## Component Location

Reference Section E for location of the operator interface panel and the Off/Manual/Auto switch.

## Shoptalk

The possible failure modes are open circuit, short to ground, failed switch, and loss of supply voltage inside the ECM.

The ECM will consider the switch to be in the Auto position when the auto SIGNAL pin is grounded, regardless of the state of the manual SIGNAL pin.

Refer to Troubleshooting Fault Code t05-1332. (</qs3/pubsys2/xml/en/procedures/01/01-t05-1332.html>)

---

**Last Modified: 08-May-2012**

---