

Fault Code: 1428


Low Oil Pressure Relay Driver Diagnostic

 Printable Version

Overview

Codes	Reason	Effect
Fault Code: 1428 PID(P): SPN: FMI: Lamp: Warning SRT:	Low oil pressure relay driver diagnostic has detected an error.	The low oil pressure relay will not function correctly. No action is taken by the ECM. No loss of performance.

©Cummins Inc

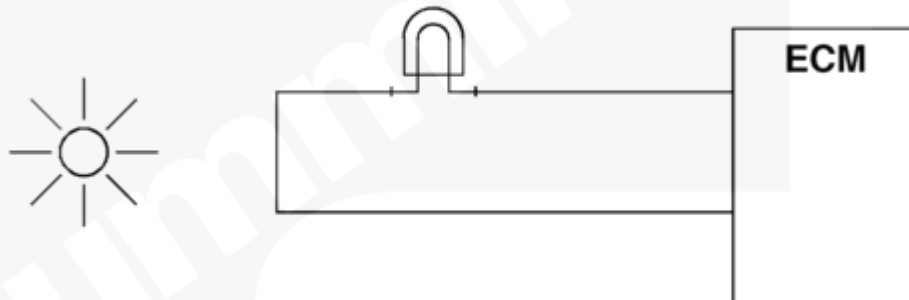

19802449

Low Oil Pressure Relay Driver Circuit

Circuit Description

The ECM checks the low oil pressure relay driver to sustain correct operation. The ECM uses the low oil pressure relay to inform the operator of a noncritical fault. The ECM monitors the voltage, no voltage drop will trip Fault Code 1428, and can be caused by shorts, opens, bad relays, or a failed low oil pressure relay driver in the ECM.

Component Location

Refer to the OEM manual for location of the ECM. Refer to the OEM manual for location of the user interface panel and the low oil pressure relay.

Shoptalk

The possible failure modes are open circuit, short to ground, burned-out relay, and loss of supply voltage inside the ECM.

Refer to Troubleshooting Fault Code t05-1428 (</qs3/pubsys2/xml/en/procedures/01/01-t05-1428.html>)

Last Modified: 29-Jul-2010
