

Fault Code: 1434


Operator Interface Mode Transition to Emergency Stop (Due to Remote E-Stop)

 Printable Version

Overview

Codes	Reason	Effect
Fault Code: 1434 PID(P): SPN: FMI: Lamp: Shutdown SRT:	Operator interface mode transition to emergency stop (due to remote E-Stop).	Engine will shut down and will not restart until the remote emergency stop switch has been reset.

©Cummins Inc

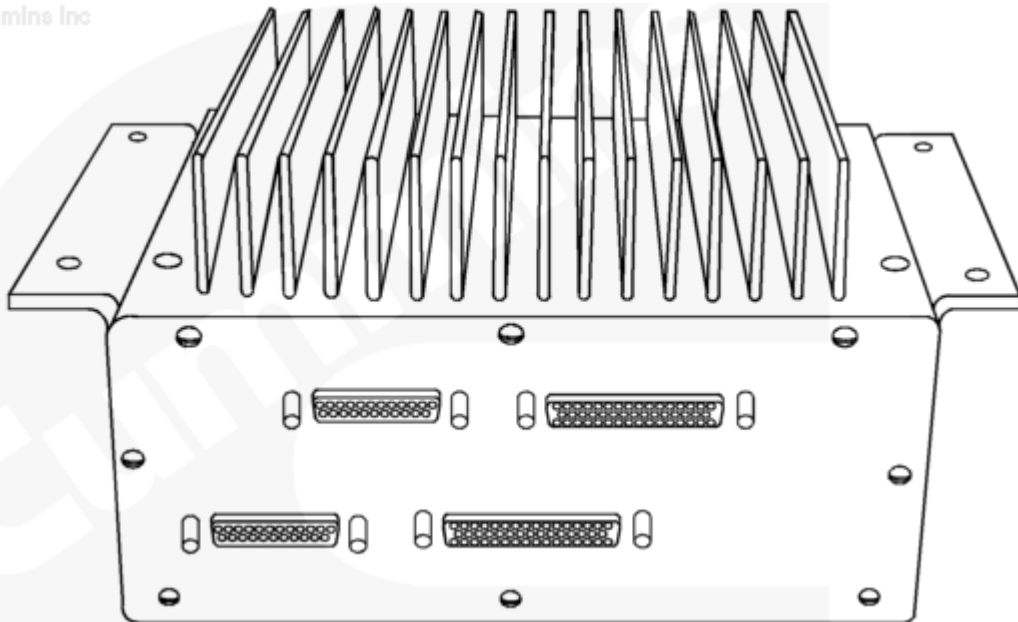

19802494

Circuit Description

Component Location

Refer to Troubleshooting Fault Code t05-1434 (/qs3/pubsys2/xml/en/procedures/01/01-t05-1434.html)

