


Fault Code: 1441

Fuel Level Low in Main Tank

 Printable Version

Overview

Codes	Reason	Effect
Fault Code: 1441 PID(P): SPN: FMI: Lamp: Warning SRT:	Fuel level low in main tank.	No action is taken by the ECM. Possible loss of performance.

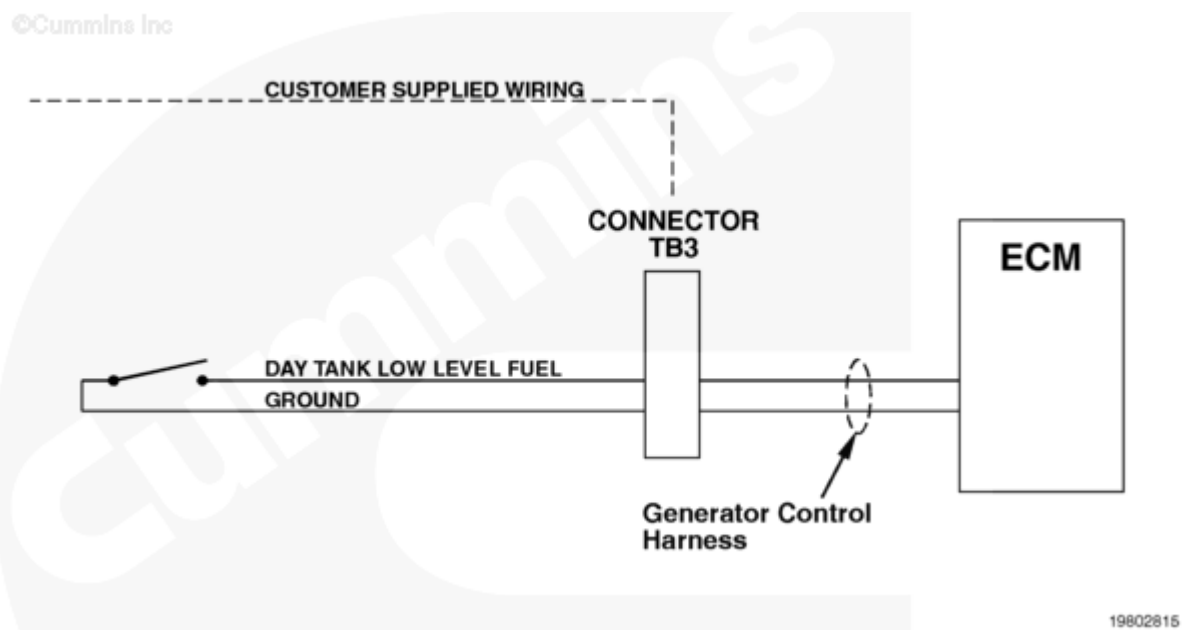

Main Tank Fuel Level Sensor Circuit

Circuit Description

The fuel level sensor monitors the fuel level within the main tank and passes information to the electronic control module (ECM).

Component Location

Refer to customer/facility/installation documentation for the location of the fuel main tank and the fuel level sensor used on the main tank.

Shoptalk

When the fuel level drops below a certain level in the tank, it could cause the fuel pump to work harder to obtain the desired fuel pressure.

If a shorting plug is used in the fuel level circuit, verify that it is wired correctly.

Inspect all connectors and the sensor pins for damage.

Refer to Troubleshooting Fault Code t05-1441 (</qs3/pubsys2/xml/en/procedures/01/01-t05-1441.html>)

Last Modified: 29-Jul-2010
