


Fault Code: 1456

Electric Bus Voltage and/or Frequency Are Out of Range for Synchronizing to Occur - Condition Exists

 Printable Version

Overview

Codes	Reason	Effect
Fault Code: 1456 PID(P): SPN: FMI: Lamp: Warning SRT:	Electric bus voltage and/or frequency are out of range for synchronizing to occur.	Generator will continue to run, but will not pick up load.

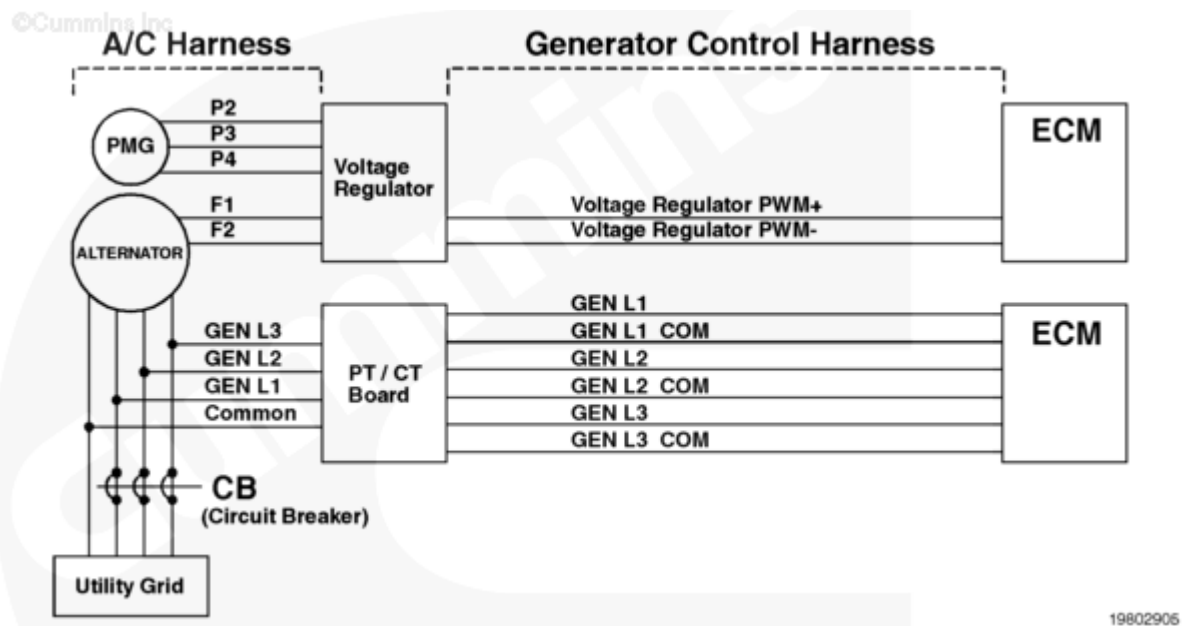

Generator Circuit

Circuit Description

The generator set picks up the electrical load from the bus. For the generator to connect to a bus (other than a dead bus), it **must** match, with a threshold, the voltage and frequency of the bus. The generator set can **not** connect to the bus while voltage and frequency are outside the threshold otherwise, damage could occur to the generator set.

This fault code is used by the engine control module (ECM) to tell the operator that, due to either the frequency or voltage being outside the synchronizing threshold, the generator set can **not** connect to the bus.

Component Location

Reference Section E for location of the ECM card cage.

Reference customer/facility/installation documentation for the location of the generator set circuit breaker and interface with the electric bus.

Shoptalk

Check the governor for correct setup.

Check the synchronizing parameters for correct setup.

Check the fuel system for problems that can cause instability.

Refer to Troubleshooting Fault Code t05-1456. (</qs3/pubsys2/xml/en/procedures/01/01-t05-1456.html>)