


Fault Code: 1458

Generator Set - Cannot Synchronize Phase

 Printable Version

Overview

Codes	Reason	Effect
Fault Code: 1458 PID(P): SPN: FMI: Lamp: Warning SRT:	Generator and electric bus phase sequences differ.	Generator will continue to run, but will not pick up load.

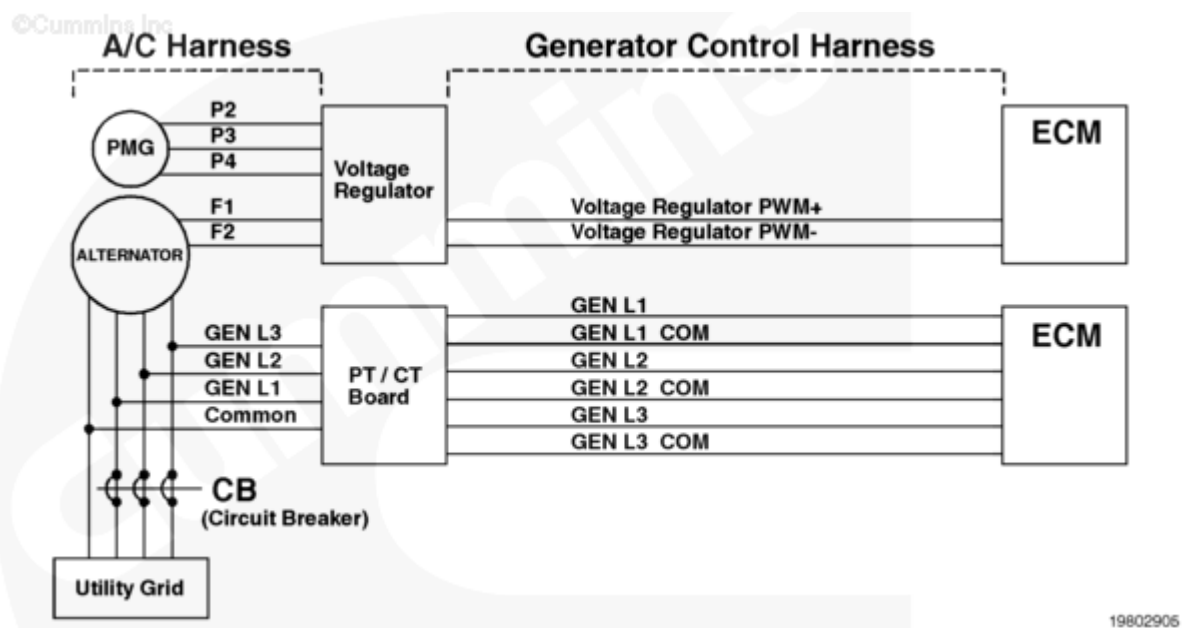

Generator Circuit

Circuit Description

The generator set picks up the electrical load from the bus. For the generator to connect to a bus (other than a dead bus), it **must** match, in phase sequences as well as with a threshold, the voltage and frequency of the bus. The generator set can **not** connect to the bus while voltage and frequency are outside the threshold, or the phase sequences of the generator set do **not** match the electric bus; otherwise, damage can occur to the generator set.

This fault code is used by the ECM to tell the operator that the generator set failed to synchronize to the electric bus.

Component Location

Refer to Section E for location of the ECM card cage.

Refer to customer/facility/installation documentation for the location of the generator set circuit breaker and interface with the electric bus.

Shoptalk

Check the bus feedback wires to the bus PT.

Verify phase rotation of generator and bus.

Refer to Troubleshooting Fault Code t05-1458 (</qs3/pubsys2/xml/en/procedures/01/01-t05-1458.html>)

Last Modified: 09-May-2012
