


Fault Code: 1475

Permission to connect - not received

 Printable Version

Overview

Codes	Reason	Effect
Fault Code: 1475 PID(P): SPN: FMI: Lamp: Warning SRT:	Permission to connect to a closed bus has not been received in the required time.	Generator set will connect to the dead bus.

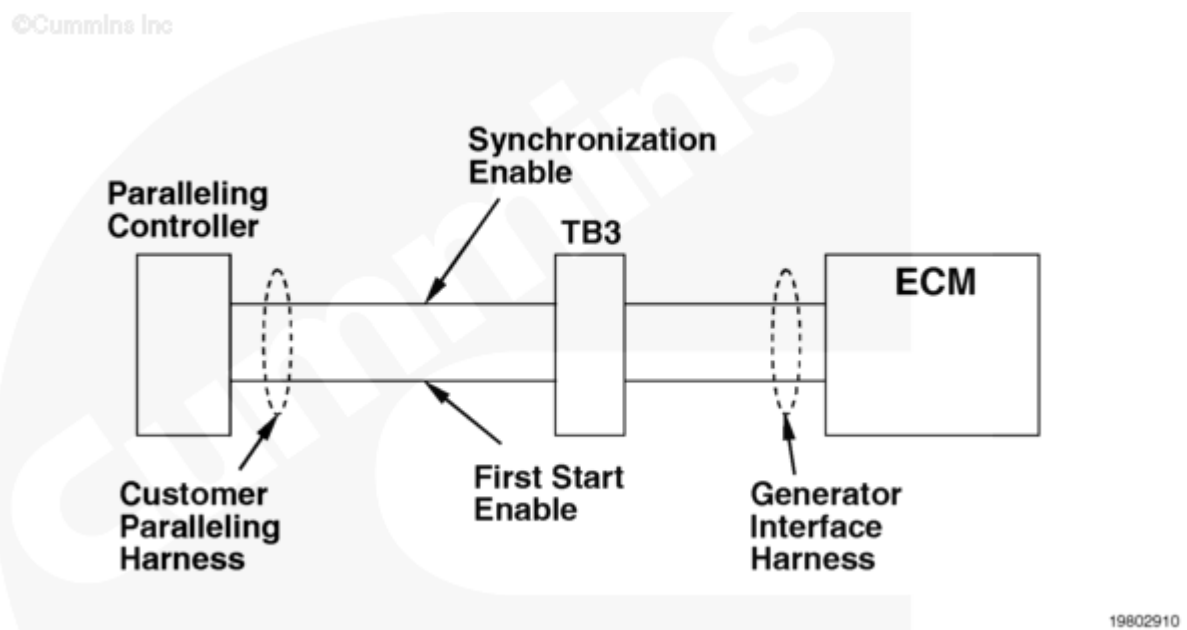

Paralleling Controller Circuit

Circuit Description

This fault code is used by the ECM to tell the operator that the ECM did **not** receive a command from the paralleling controller to connect to the bus. The ECM monitors the bus for a set amount of time and if the ECM still sees a dead bus after that set amount of time, then it will connect to the bus.

The paralleling controller is wired into the ECM and can give it commands to pick up load, dump load, or load governing commands.

Component Location

Refer to section E for location of the ECM card cage. Refer to customer/facility/installation documentation for the location of the paralleling controller.

Shoptalk

The possible failure modes are short circuit, open circuit, short to ground, and failed input device. Check the master first start sensor for failures.

Refer to Troubleshooting Fault Code t05-1475 (</qs3/pubsys2/xml/en/procedures/01/01-t05-1475.html>)

Last Modified: 29-Jul-2010
