


Fault Code: 1487

Not in Auto LED Driver Diagnostic

 Printable Version

Overview

Codes	Reason	Effect
Fault Code: 1487 PID(P): SPN: FMI: Lamp: Warning SRT:	Switch panel Not in Auto LED driver diagnostic has detected an error.	The Not in Auto LED will not function correctly. No action is taken by the ECM. No loss of performance.

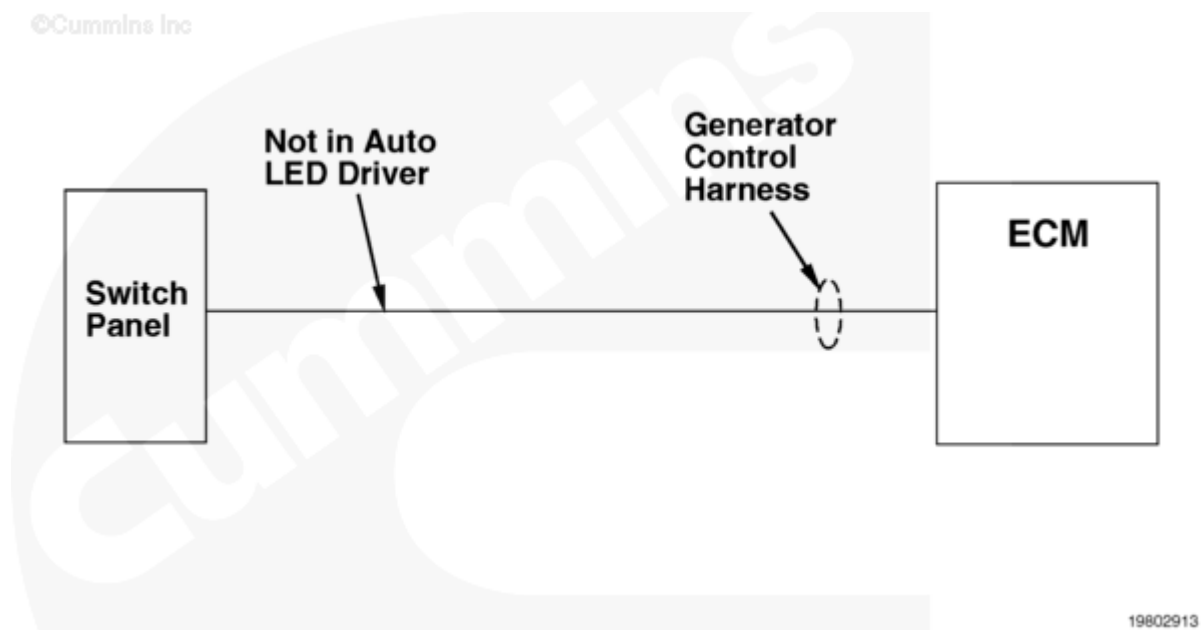

Not in Auto LED Driver Circuit

Circuit Description

The ECM checks the **Not** in Auto LED driver to make certain it is operating correctly. The ECM uses the **Not** in Auto lamp to inform the operator that the generator set is **not** in manual mode but rather it is currently in auto (remote start enabled) mode.

The ECM monitors the voltage (no voltage drop will trip Fault Code 1487) and can be caused by shorts, opens, bad bulbs, or a failed **Not** in Auto LED driver in the ECM.

Component Location

Refer to section E for location of the switch panel and the **Not** in Auto lamp.

Shoptalk

The possible failure modes are open circuit, short to ground, burned-out bulb, and loss of supply voltage inside the ECM.

Proper diagnostic lamp operation can be verified by checking to see that the lamps briefly light when the ECM is powered up.

Refer to Troubleshooting Fault Code t05-1487 (</qs3/pubsys2/xml/en/procedures/01/01-t05-1487.html>)

Last Modified: 29-Jul-2010
