


Fault Code: 1488

Warning LED Driver Diagnostic

 Printable Version

Overview

Codes	Reason	Effect
Fault Code: 1488 PID(P): SPN: FMI: Lamp: Warning SRT:	Switch panel warning LED driver diagnostic has detected an error.	The warning LED will not function correctly. No action is taken by the ECM. No loss of performance.

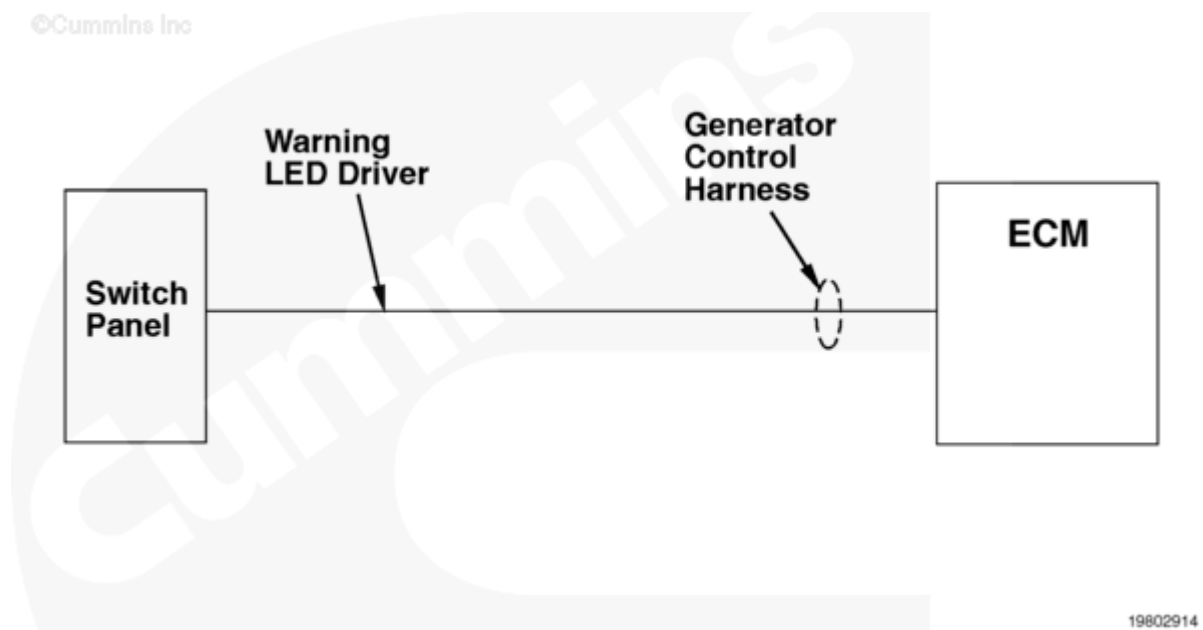

Warning LED Driver Circuit

Circuit Description

The ECM checks the warning LED driver to make certain it is operating correctly. The ECM uses the warning lamp to inform the operator that a noncritical fault has occurred with the generator set.

The ECM monitors the voltage, (no voltage drop will trip Fault Code 1488) and can be caused by shorts, opens, bad bulbs, or a failed warning LED driver in the ECM.

Component Location

Refer to Section E for location of the switch panel and the warning lamp.

Shoptalk

The possible failure modes are open circuit, short to ground, burned out bulb, and loss of supply voltage inside the ECM.

Proper diagnostic lamp operation can be verified by checking to see that the lamps briefly light when the ECM is powered up.

Refer to Troubleshooting Fault Code t05-1488 (</qs3/pubsys2/xml/en/procedures/01/01-t05-1488.html>)

Last Modified: 29-Jul-2010
