


Fault Code: 1492

Load Dump Output Relay Driver Diagnostic

 Printable Version

Overview

Codes	Reason	Effect
Fault Code: 1492 PID(P): SPN: FMI: Lamp: Warning SRT:	The Load Dump output relay driver diagnostic has detected an error.	Any customer system/features dependent on the Load Dump output will not function correctly. No action taken by ECM. No loss of performance.

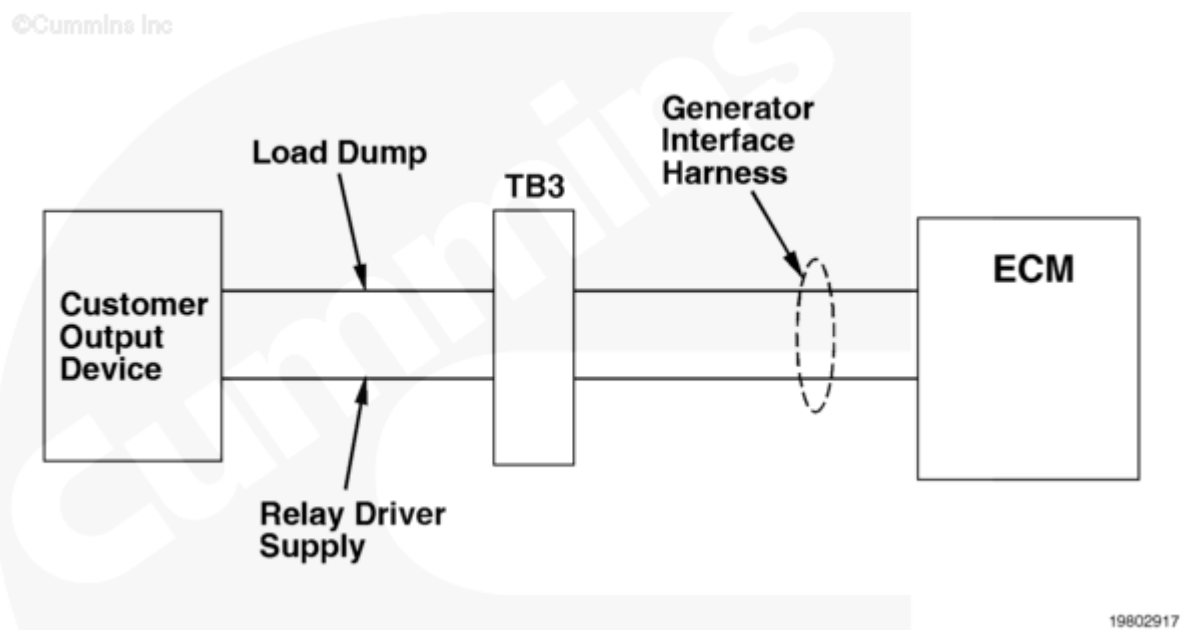

The Load Dump Output Relay Driver Circuit

Circuit Description

The ECM checks the Load Dump output relay driver to ensure correct operation. The ECM uses the Load Dump output to inform any customers/feature dependent on the ECM for knowledge of when the generator set has to dump a load. The ECM monitors the voltage (no voltage increase will trip Fault Code 1492) caused by short circuits, open circuits, or failed Load Dump output relay driver in the ECM.

Component Location

Refer to Section E for location of the output for the Load Dump.

Shoptalk

Possible failure modes are open circuits, short circuits, short to ground, and loss of supply voltage inside the ECM.

Refer to Troubleshooting Fault Code t05-1492 (</qs3/pubsys2/xml/en/procedures/01/01-t05-1492.html>)

Last Modified: 03-Nov-2011
